

Mórgan®

Mórgan®


Market Expansion
Services by
www.dksh.com.my



E-mail: electrical.appliance@dksh.com
www.morgan.my

 facebook.com/morganappliances

USER MANUAL

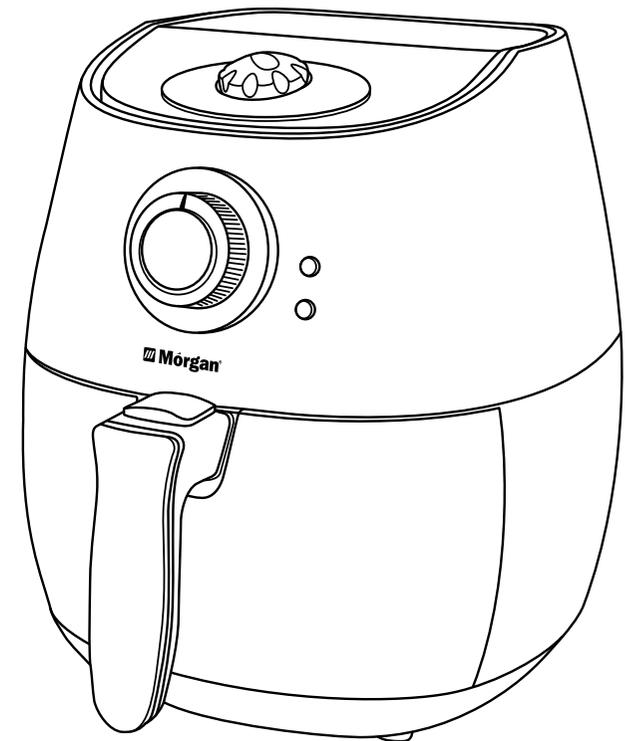

Air Fryer

MAF-C607


C O N T E N T S

- 3** PARTS IDENTIFICATION
- 3** SPECIFICATIONS
- 4** SAFETY PRECAUTIONS
- 4** IMPORTANT SAFEGUARDS
- 5** OPERATING INSTRUCTIONS
- 6** CARE AND MAINTENANCE
- 7** TROUBLE SHOOTING

Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new product. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

PARTS IDENTIFICATION

1. Fryer drawer
2. Fryer basket
3. Protective cover
4. Push-release button
5. Fryer basket handle
6. Air inlet
7. Temperature controller (80~200 °C)
8. Power light
9. Heating Indicator lamps
10. Timer (0-30 mins)
11. Air outlet
12. Power cord

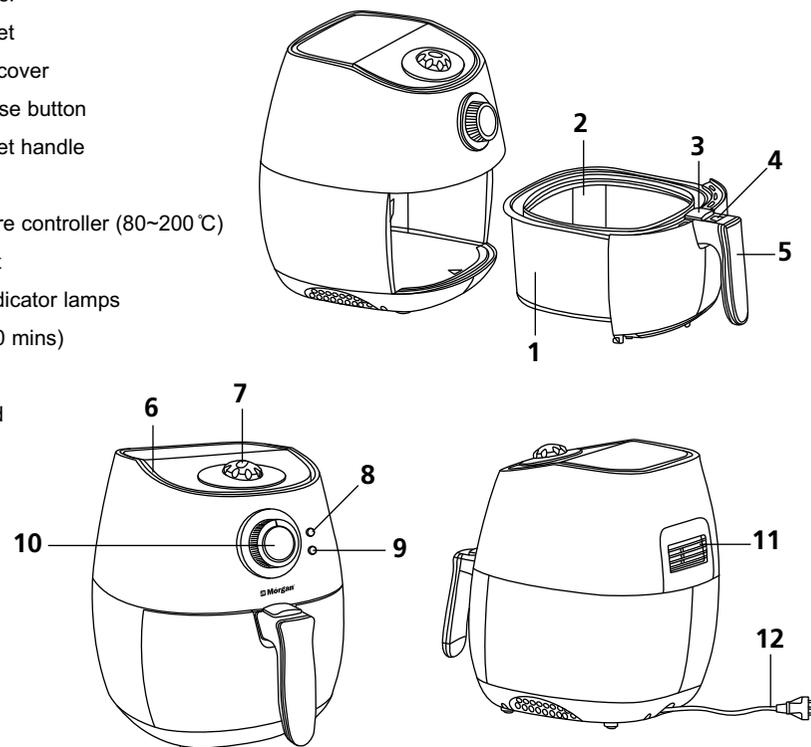

SPECIFICATIONS

MODEL	MAF-C607
RATED VOLTAGE / FREQUENCY	220-240V~ 50/60Hz
RATED WATTAGE	1300W
CAPACITY	2.8L

SAFETY PRECAUTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS CAREFULLY before using the product & keep the manual for future reference.
- This appliance contains electronic elements and heating elements. To protect against electric shock do not immerse power cord, power plugs, or appliance in water or other liquids.
- Do not detach the fryer drawer during operation. If required, set the timer to "0" before detaching the drawer during operation.
- Do not cover or obstruct the air inlet and outlet during operation.
- CAUTION: Do not touch hot surfaces. Use handles or knobs. Use oven mitts or potholders.
- Do not fill oil in the basket or drawer to prevent a fire hazard.
- Keep a safe distance when operating the fryer as hot air may escape from the air outlets.
- Do not insert fingers into the air outlets or put your face close to it during operation.
- CAUTION HOT SURFACES: This appliance generates heat and escaping steam
- During use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.
- Exercise extreme caution when moving the appliance containing hot food. Allow to cool before moving.

IMPORTANT SAFEGUARDS

- Do not use the AC power except 220V-240V to avoid the risk of electric shock, fire and other accidents.
- It is recommended to use only power sockets above 7Amp to avoid the risk of electric shock, fire and other accidents.
- Do not damage, yank, modify or entangle the power cord to avoid the risk of electric shock, fire and other accidents.
- Damaged power cords must be repaired by manufacturer or a similarly qualified person.
- Do not insert or detach the power cord from the power supply with hands to avoid the risk of electric shock.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years
- Do not use the appliance on or near flammable or explosive materials, such as tablecloths, curtains and others to avoid the risk of fire.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

IMPORTANT SAFEGUARDS

- Allow a 30cm space allowance away from walls or furniture to avoid damage.
- This appliance is not intended to be operated via an external timer or separate remote-control system.
- The use of accessory attachments not recommended by the appliance manufacturer may result in bodily injuries.
- Do not use outdoors.
- Do not allow power cord to hang over edge of table or counter or touch hot surfaces.

OPERATING INSTRUCTIONS

1. Insert power cable into the earthed power supply.
2. Turn the Temperature Controller to desired temperature (80~200°C)
3. Turn the Timer to 3 minutes for preheating.
4. When the Yellow Heating Indicator Light turns off, carefully detach the fryer drawer from the appliance and insert food into the fryer basket.
(CAUTION: do not exceed the maximum food level).
5. Insert the fryer drawer back into the appliance.
6. Set the timer to the desired cooking time;
7. Frying has completed, and food is ready for serving when the notification alarm sounds.
8. Detach the fryer drawer and place it on a heat resistant placemat.
9. Remove food onto dishes.
(Note: For best cooking results, overturn ingredients by shaking the basket in the midway through the cooking process.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance and contains no user-serviceable parts. Any servicing requiring disassembly other than cleaning must only be performed by a qualified appliance repair technician.

CARE & CLEANING INSTRUCTIONS

WARNING! Allow the Air Fryer to cool fully before cleaning.

1. Unplug the Air Fryer. Remove frying basket from the drawer. Make sure the fryer drawer and fryer basket have cooled completely before cleaning.
2. Wash the fryer drawer and fryer basket in hot soapy water. Do not use metal kitchen utensils or abrasive cleansers or cleaning products as this may damage the non-stick coating.
3. Wipe the Air Fryer exterior using a soft, non-abrasive damp cloth. Do not use corrosive liquids for cleaning. It is recommended to clean it after every use.
4. Do not immerse the appliance and power cord into water or any other liquids.
5. Keep the appliance in a box and store it in a cool and dry place if it is not to be used for a long duration.

PROBLEM	POSSIBLE CAUSES	SOLUTION
The air fryer does not work	The appliance is not plugged in	Insert the power plug into an earthed power socket
	Timer is not set	Turn the timer knob to the desired time to switch on the appliance
The ingredients fried with the air fryer are not done	The amount of ingredients in the basket is too big.	Put smaller batches of ingredients in the basket. Smaller batches are fried more evenly
	The set temperature is too low.	Turn the temperature control knob to the required Temperature setting
	Cooking Duration is too short.	Turn the timer knob to set desired cooking duration Temperature setting
Fried food is not crispy	Such foods must be cooked in the traditional fryer	Add some oil to the food to increase crispiness.
The ingredients are fried unevenly in the air fryer	Certain types of ingredients need to be shaken halfway through the preparation time	Ingredients that lie on top of or across each other (e.g. fries) need to be shaken halfway through the preparation time.
Unable to insert fryer drawer into appliance	Fryer drawer overloaded with food	Ensure food in fryer basket does not exceed the max. level.
	The basket is not correctly placed in the drawer.	Press the basket into the drawer.
	Fryer handle stuck	Place the fryer handle horizontally
White smoke comes out from the air fryer	Greasy ingredients.	When you fry greasy ingredients in the Air Fryer., a large amount of oil will leak into the pan. The oil produces white smoke and the pan may heat up More than usual. This does not affect the appliance or the end result.
	The pan still contains grease residues from previous use	White smoke is caused by grease heating up in the pan. Make sure you clean the pan properly after each use.



CORRECT DISPOSAL OF THIS PRODUCT:

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.