 


# **Mórgan®**


## USER MANUAL

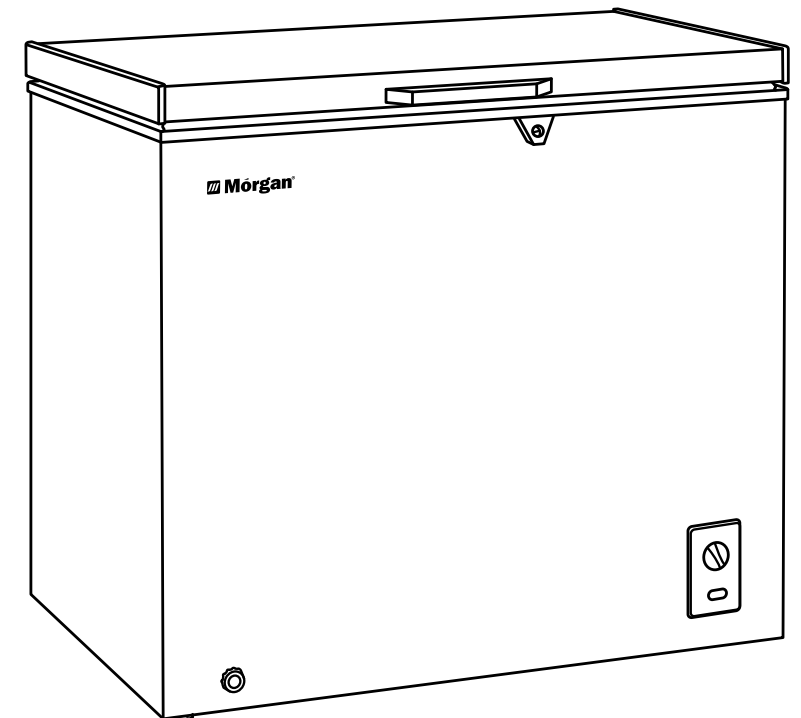

# Chest Freezer

MCF-EVEREST 20  
MCF-EVEREST 15  
MCF-EVEREST 10  
MCF-XC8

# **Mórgan®**

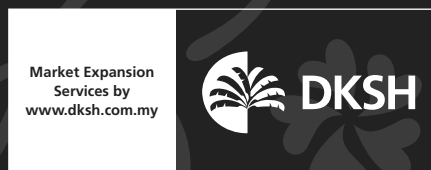

E-mail: [electrical.appliance@dksh.com](mailto:electrical.appliance@dksh.com)  
[www.morgan.my](http://www.morgan.my)

 [facebook.com/morganappliances](https://facebook.com/morganappliances)

# SAFETY PRECAUTIONS

- Please read these **SAFETY PRECAUTIONS** carefully to ensure proper operation.
- These **SAFETY PRECAUTIONS** will help ensure safe and proper operation of this appliance to minimize risks that could potentially cause serious damage to yourself and others, and they are divided into:

**WARNING** Improper operation of this appliance can lead to serious injuries and even death.

**CAUTION** Improper operation of this appliance can lead to serious repercussions depending on the circumstances.

Text accompanied with an exclamation mark **!** refers to safety information that must be adhered to.

 
## PRECAUTIONS FOR INSTALLATION.

### WARNING


**!** Installation of this appliance should only be performed by authorized service personnel or similarly qualified persons. Attempting to install the appliance yourself may result in refrigerant and water leakage, electric shock or fire.

## PRECAUTIONS FOR OPERATION


**DO NOT TAMPER** All repairs, disassembly and modifications should only be performed by qualified technicians or similarly qualified persons to avoid the risk of electrical shock, fire and personal injury.



 **ELECTRICAL SHOCK HAZARDS** Never splash water on the exterior or interior of the unit to avoid the risk of electrical shock or short circuit.



 
**CAUTION AGAINST EXPLOSION** Never store flammable gas and corrosive liquids in the unit as they may explode and cause a fire hazard.




**PROHIBITED** Do not bend, modify, twist or bundle up the power cord. Never place heavy objects on it or straining it to avoid a fire hazard or damaging it.



 **PROHIBITED** Connect the power cord to dedicated power supply only. Do not use power extension cords to avoid the risk of electrical shock, fire and overheating.

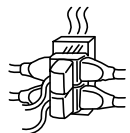


 **FLAMMABLE** Never install the unit near flammable or heat sources, or where it may be exposed to acid or corrosive gas which may cause the risk of explosion or fire.



# SAFETY PRECAUTIONS

 
**PROHIBITED** Do not store bottles and cans inside the appliance to avoid freezing and causing injuries.




**!** This appliance is only intended for storing ice cream and frozen foodstuffs. Storing items other than the intended may have adverse effects on the appliance and contents.



 
**PROHIBITED** This appliance is intended for indoor use only.

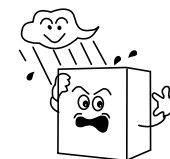

 **PROHIBITED** Never place heavy objects or items containing water on top of the appliance as these could topple over and result in personal injuries and short circuits.

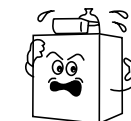

 **!** It is recommended to install the appliance on stable surfaces to avoid the risk of it and contents from toppling over.




**CAUTION AGAINST EXPLOSION** Avoid using the appliance if you suspect a gas leakage. Turn off the gas supply to avoid explosion and a fire hazard. Open the door for proper ventilation.




**!** Do not expose the appliance to rain or water. Never store in damp places to avoid short circuit and fire hazard.



 **!** Keep the appliance away from all heat sources to ensure optimal cooling performance and for energy savings.

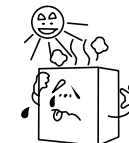

 
**!** Do not attempt to modify, repair or disassemble the appliance. Contact your authorized service agents or similarly qualified persons for support.

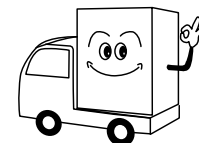


**!** Never store in a place where children can play with it. Ensure the appliance's door cannot be closed completely to avoid trapping children in it.

## SAFETY PRECAUTIONS

 
Ensure a minimum 10cm distance between the unit and wall/objects for optimal operating performance.

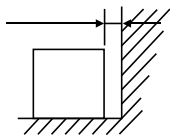

 Install an electrical leakage circuit breaker if installing in a damp area is unavoidable to prevent the risk of short circuit and electric shocks.




 Never allow children to hang by the appliance's door or climb on top of it as there is a risk of injury if the appliance topples over.

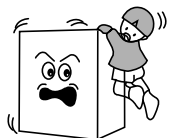


Disconnect power cord plug from wall outlet

 
Always ensure the power cord is disconnected from the power supply when moving/transporting the appliance to avoid electric shocks.



 
Do not operate the appliance with wet hands to avoid the risk of electric shocks.

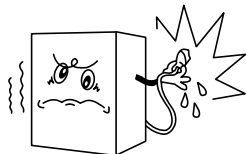

 
Never operate this appliance if the power cord or if the power plug cannot be inserted into the power supply socket. A damaged power cord and power plug can result in an electrical and fire hazard.

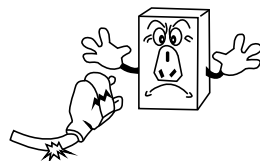

 Hold on the power plug and detach from the power supply instead of yanking on the power cord to prevent an electrical or fire hazard.

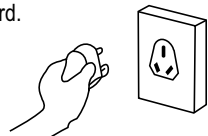


 Ensure the appliance does not tip over during moving or transporting to prevent potential damage and injuries.

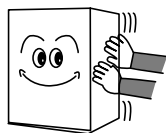

## TEMPERATURE CONTROL AND ADJUSTMENT

 1. The inner temperature can be adjusted through the temperature control knob.
2. The knob on shift "0" to R" is for refrigerating, the knob on shift "F to 6" is for freezing.
3. The higher the number, the lower the temperature.
4. Normal temperature for freezing is positioned between 3 and 4.
5. Turn the knob back to its original position after quick freezing "5-6". Do not turn the temperature control knob clockwise from "6" to "0".

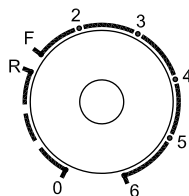


## INSTALLATION

- For built-in installation: keep ventilation openings free of obstructions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the power cord is damaged, have it replaced by an authorized service centre or a similarly qualified technician.

### HANDLE INSTALLATION

 Install the handle according to the instructions below.

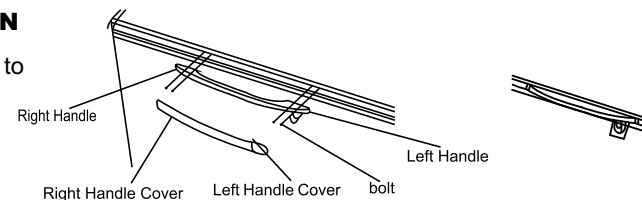

## OPERATING INSTRUCTIONS

### BEFORE FIRST USE

- Remove shipping packaging and leave the appliance door ajar for proper ventilation.
- Although the appliance is cleaned before shipment, it is still recommended to wipe the interior compartment clean before using.
- After installation, refrigeration should begin 10 minutes after initial operation.
- Leave the appliance operating on empty for at least 2 hours before storing food items.

### RESTARTING

- When appliance is powered off, wait for at least 5 minutes before restarting.
- Restarting the appliance immediately after powering off may blow the fuses and activate the circuit breaker – overloading the compressor and damaging the appliance.

### DEFROSTING

- It is recommended to defrost when frost covers about 5mm inside the freezer.
- Before defrosting, empty the appliance of all contents and disconnect the power cord from the power supply.
- The frost can be easily removed when it begins to thaw.
- Remove the drainage cap to drain excess water. After draining, wipe the interior clean and replace the cap back to its proper position.

**WARNING: Do not use bottle, hammer or knife to remove the frost to avoid damaging the freezing loop.**

**WARNING: Do not use mechanical devices or other methods to accelerate the defrosting process other than those recommended by the manufacturer.**

## STORAGE

- Refrain from storing items to the full capacity of the appliance. Always allow adequate space to ensure proper air cool air circulation and distribution.
- Do not store bottled or canned drinks below their freezing points to avoid frost cracks.
- Do not store any items not recommended by the manufacturer.

# CARE & CLEANING

**For hygienic reasons the appliance interior, including interior accessories, should be cleaned regularly.**

**To prevent the risk of electric shock, always unplug the power cord from the power supply and remove all food contents inside the freezer before cleaning.**

## 1. EXTERIOR & COOLING COMPARTMENT

Wipe with a damp and soft cloth. For soiled areas, apply a little mild detergent on the cloth and wipe.

**WARNING: Do not splash water directly onto the appliance and do not wash with water as doing so may result in short-circuit and damage the appliance.**

**Important! Keep the appliance clean at all times. Never use organic solvents or abrasive cleansing agents to clean as these may damage the finishing and plastic parts upon contact.**

## 2. DOOR

Detach the door and wipe with a damp, soft cloth.

## IN THE EVENT OF

### 1. POWER FAILURE

Do not open the freezer door to prevent cool air from escaping. Cover the appliance with a blanket or thick material will help maintain the appliance's inner temperature. For long power outage, place dry ice into the freezer compartment and avoid storing new items to avoid raising the inner compartment's temperature.

### 2. NOT USING FOR A LONG PERIOD

- Remove all food contents inside the appliance and disconnect the power plug from the power supply.
- Clean the inner compartment and remove all traces of water.
- To prevent mold formation and malodor, leave the appliance door ajar completely before covering with a plastic cover and storing in a cool, dry place.

## CAUTION!

- **Ensure power plug is disconnected from power supply and empty all contents inside the freezer compartment before attempting to troubleshoot.**
- **Only a qualified electrician is able to perform troubleshooting not specified in this user manual.**

PROBLEM	POSSIBLE CAUSES
No refrigeration at all	<ul style="list-style-type: none"> <li>• Is power supply interrupted?</li> <li>• Is the power plug disconnected from the power supply?</li> <li>• Fuse may have been blown or circuit-breaker activated.</li> <li>• Temperature control turned to MAX. If too cold, turn dial direction to OFF.</li> </ul>
Inadequate refrigeration	<ul style="list-style-type: none"> <li>• Inadequate ventilation where appliance is installed?</li> <li>• Appliance exposed to direct sunlight or heat sources?</li> <li>• Freezer door opened and closed frequently.</li> <li>• Overstocked food items inside the freezer.</li> <li>• Temperature control turned to MAX. If too cold, turn dial direction to OFF.</li> <li>• Excessive frost inside the freezer compartment?</li> </ul>
Excessive noise	<ul style="list-style-type: none"> <li>• Appliance placed on unstable surface, resulting in rattling &amp; vibrations.</li> <li>• Rear panel may be in contact with wall or other surfaces.</li> <li>• Loose part or object may be behind the appliance.</li> <li>• A louder than normal sound can be heard during appliance startup – this is normal.</li> </ul>
Condensation on cooler exterior	<ul style="list-style-type: none"> <li>• Condensation may form in the freezing compartment under hot &amp; humid conditions.</li> <li>• This is normal as water particles condenses on the cool surface of the freezer.</li> <li>• Wipe condensation away using a soft cloth.</li> </ul>
Exterior feels hot	<ul style="list-style-type: none"> <li>• This is normal during appliance startup.</li> <li>• An inner pipe inside the freezer radiates heat to prevent condensation and protects the freezer's contents.</li> </ul>

**NOTE: Operation may be affected if the appliance's thermostat has been turned OFF.**