

 **Mórgan®**

## USER MANUAL



 **Mórgan®**

Market Expansion  
Services by  
[www.dksh.com.my](http://www.dksh.com.my)



**DKSH**

E-mail: [electrical.appliance@dksh.com](mailto:electrical.appliance@dksh.com)  
[www.morgan.my](http://www.morgan.my)

 [facebook.com/morganappliances](https://facebook.com/morganappliances)


# Gas Stove

**MGS-SC9516CD**

## OPERATING INSTRUCTIONS

### 1. BURNER IGNITION AND FLAME ADJUSTMENT.

- A. Turn on the gas tank regulator tap.  
 B. Push the switch fully and turn to "ON" position. The flame can be adjusted between "ON" and "OFF" position by turning the switch to "OFF" position.

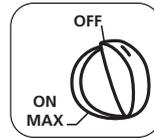


### 2. AIR ADJUSTMENT.

To produce a good flame, turn the Damper (air adjuster) up or down until the flame turns blue.

## PREPARATION

1. Ensure all parts of the household cooker are completely assembled correctly.
2. Attach rubber legs in its proper place and secure them using a screwdriver.
3. Insert a rubber hose in the edge on the gas pipe and insert it as deep as possible. Attach and tighten the rubber hose with hose clamp.
4. Place both of the Pan Support which have the same dimension on the right and left.

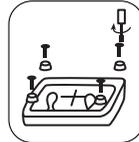


## MAINTENANCE

1. Clean the burner head and the top side of the burner with a brush to remove any dirt stuck to it.
2. Clean the pan support and other stainless steel parts using a little soapy water.
3. Remove dirt stuck to the electrodes to ensure proper ignition.



## CAUTION

 
1. The gas cooker must be placed at least 15cm from the side of the real wall and 100cm from the ceiling.




2. Keep flammable materials / liquid away from the cooker.




3. Ensure that the hose is not placed beneath the cooker.

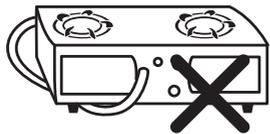


4. The gas cooker must be used in a well ventilated room.

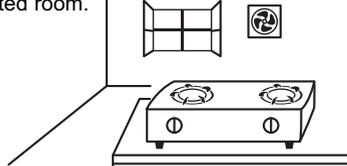

5. Should there be any gas leakage, detach the regulator from the gas supply. Open all windows to dispel the gas.

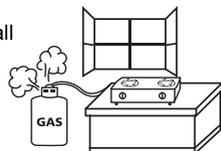


6. Attach a rubber hose on the gas tank.

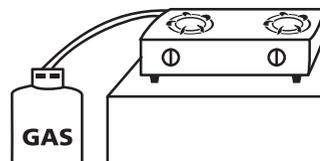

2

## CAUTION

7. Never use one single rubber hose for two cookers.

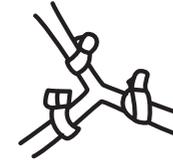

8. Never use a cooking's utensils that cover the flame on the burner because it will extinguish the flame.




9. Never use a cooking utensil that eclipses the entire cooker surface.




10. Replace worn/damaged rubber hoses with new ones.



11. Never use a lightweight cooking utensil as the wind may topple it.

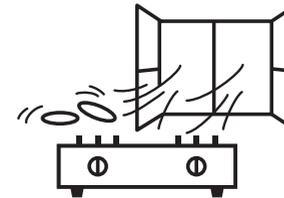


12. Always inspect the cooker before every use.

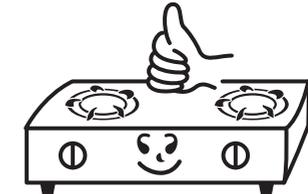


13. Always inspect for gas leakage. Do not turn on the fan or light a flame near the cooker.




14. CAUTION: Cooker surface is extremely hot after cooking and may burn your hands.

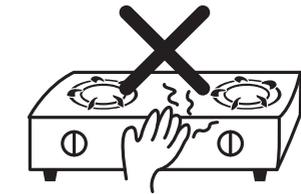

15. Always ensure boiling water does not overflow to the surface of the cooker.

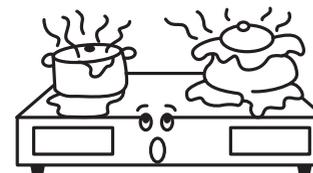

16. Never hang any cloth or flammable materials above the cooker. Accidents can happen.

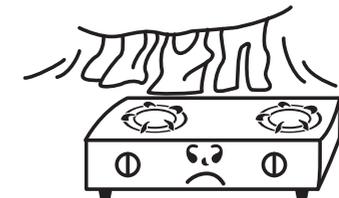

3