


 **Mórgan®**

USER MANUAL

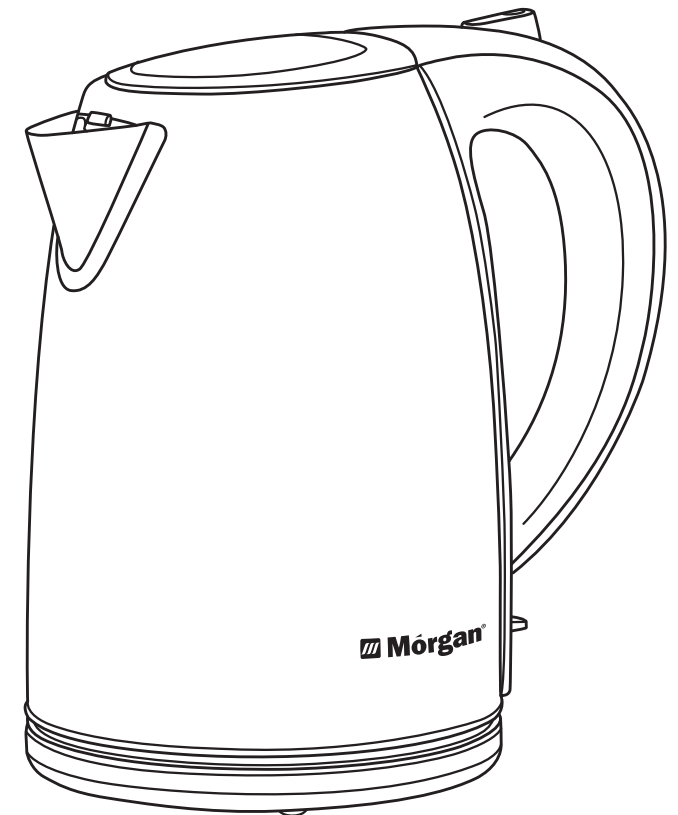

 **Mórgan®**

Market Expansion
Services by
www.dksh.com.my



E-mail: electrical.appliance@dksh.com
www.morgan.my

 facebook.com/morganappliances

Jug Kettle

MJK-8017LS

Read all instructions carefully and store

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury, basic safety precautions should always be followed, including the following.

SPECIFICATIONS

MODEL	MJK-8017LS
RATED VOLTAGE / FREQUENCY	220-240V~ 50/60Hz
RATED WATTAGE	1850-2200W
CAPACITY	1.7L

IMPORTANT SAFEGUARDS

1. Read these operating instructions carefully before connecting your kettle to the power supply in order to avoid damage due to incorrect use.
2. Incorrect operation and improper handling can lead to appliance malfunction and risk of personal injuries to the user.
3. Do not use for other than intended use. This appliance is intended for household use only, not for commercial or industrial use. Use for anything other than its intended use will void the warranty.
4. Unplug the appliance from power supply when not in use.
5. Keep the base unit away from damp areas and protect from splashes.
6. If the kettle is overfilled, boiling water may spill over. Do not immerse the power cord or plug in water or other liquids. If this should occur, remove the plug immediately and then have the unit inspected by an authorized service personnel before using it again.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Ensure that the power cord does not hang over sharp edges and keep it away from hot surfaces.
9. To disconnect, remove power plug from power supply. Do not yank on power cord as it may damage it and eventually cause electric shock.
10. Place the appliance on a stable surface, away from hot objects (e.g. hotplates), naked flames; do not place under curtains or low wall-cupboards
11. The kettle is only to be used with the base unit provided. Never leave the appliance unattended during use.
12. This appliance is not intended for use by person(s) (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given prior supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
13. Never remove the kettle from its base unit while in operation. Switch the appliance off before doing so.
14. To avoid possible steam damage, turn spout away from walls or cabinets during use; use protective pad under kettle to prevent damage to surfaces.
15. To avoid burns and risk of personal injury, use extreme caution when carrying/moving kettle containing hot water.
16. CAUTION: Ensure lid is properly closed before switching on power. Otherwise, the appliance will not switch off automatically and hot water may overflow.
17. The kettle is for heating water only and is not to be used for any other liquids

BEFORE USING FOR THE FIRST TIME

1. Remove all packing materials from the kettle.
2. Before connecting of the kettle check that the voltage indicated on the rating label corresponds the mains voltage in your home.
3. Fill the kettle with cool water up to the "MAX" mark and boil it. Empty the kettle. The appliance is ready for use.

OPERATING INSTRUCTIONS

FILTER INSTALLATION

1. Open the lid by pressing on the lid release button.
2. Place and install the filter between the two grooves near the spout at the front of the kettle.
3. Ensure that the filter is pressed down to the bottom of the grooves and fits correctly then close the lid.

NOTE: Never leave the filter loose in the kettle. Never remove the filter while the kettle contains hot water.

FILLING

1. Remove the kettle from the base unit.
2. You can fill the kettle with water via the spout or by opening the lid, by pressing on the lid release button.
3. Do not operate dry or with less than 1 litre of water to avoid damaging the kettle.
4. Do not overfill more than 1.5 liters of water (up to "MAX" mark). Avoid overfilling to prevent the water spilling out during the boiling process.

SWITCHING ON

1. After filling your kettle with water, place the kettle on the base unit.
2. Connect plug to power supply and pull down the On/Off switch. The appliance will begin to operate and the indicator light will come on.

SWITCHING OFF

When the water boils, the kettle will switch off automatically and the indicator light will go off.

NOTE: This appliance has a safety system which automatically switches off the heater element if the appliance is operated dry (boiled empty). If this happens, allow the appliance to cool down completely before filling with water again.

SWITCHING ON AGAIN

The kettle can be switched on again after cooling down about 15-20 seconds, after kettle has switched off automatically.

CLEANING AND MAINTENANCE

1. Always remove the power plug from the power supply and allow the appliance cool down completely.
2. Clean the exterior of the kettle and the base unit with a soft damp cloth and wipe dry using a clean cloth. Do not use scouring agents or harsh detergents.
3. Descale at regular intervals. Use a descaling agent, which can be obtained from specialist shops and follow the instructions given.

FILTER CLEANING

1. Remove the filter out of the kettle.
2. Place under a tap and rub gently any remaining using a soft brush (not included).
3. Replace the filter between the two grooves near the spout at the front of the kettle.

STORAGE

The base unit has storage compartment to store the power cord.