


 **Mórgan®**

USER MANUAL

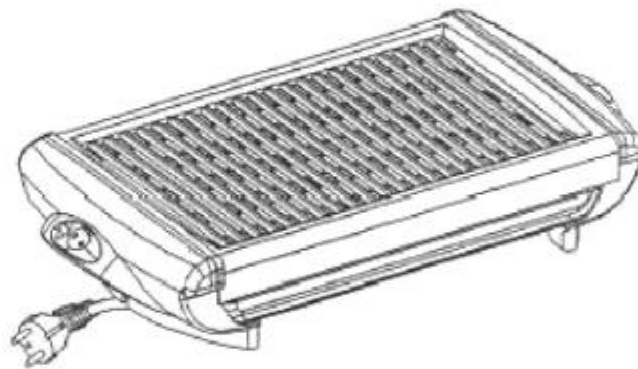

**HEALTH
GRILLER**

MPG-2898

CONTENTS

1 Parts Identifications


2 Specifications

3 Safety Precautions

4 Operating Instructions

5 Care and Cleaning

PARTS IDENTIFICATION

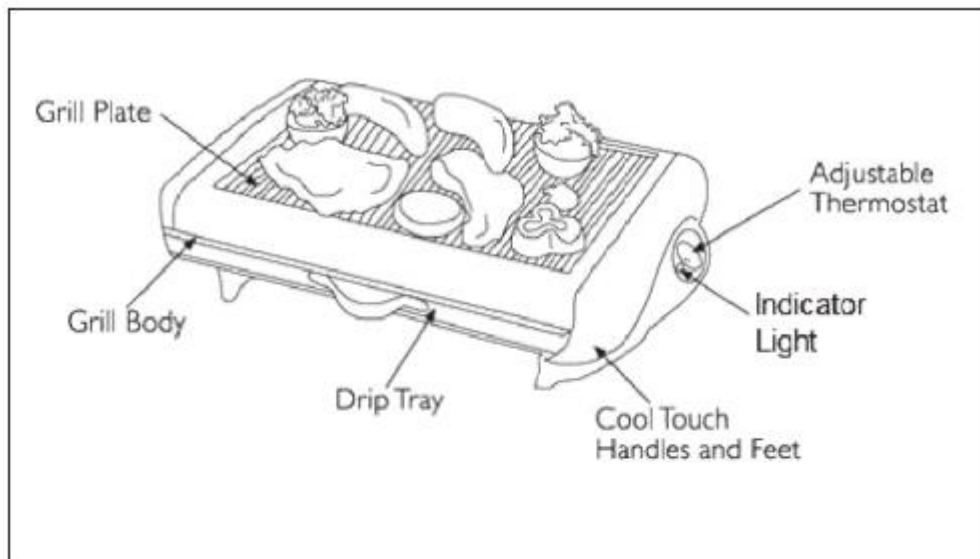

SPECIFICATIONS

MODEL	MPG-2898
RATED VOLTAGE	220-240V~
RATED POWER	1200-1400W
FREQUENCY	50-60Hz

SAFETY PRECAUTIONS

When using this appliance, especially when children are present, basic safety precautions should always be followed including the following:

1. Read all instructions carefully before use and keep them for future reference.
2. Ensure that the voltage range shown on the appliance rating label corresponds to the main power supply's voltage.
3. This appliance is suitable for normal household use only and not for commercial use.
4. This product must not be left unattended while it is connected to the main supply
5. Use the appliance only on a level working surface.
6. Do not operate the appliance with a damaged power cord or power plug. Return the appliance for examination, adjustments, or repair.
7. The use of attachments not recommended by the manufacturer may cause fire, electrical shock, or injury.
8. Unplug the unit when not in use and whenever you clean or move the unit.
9. To disconnect the appliance, set control to OFF (0), grip power plug and pull from power outlet. Never yank on power cord.
10. Only authorized service personnel should be allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.
11. If the power supply cord is damaged, have it replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
12. This appliance should not be used by the physically and mentally challenged or those with slow response (including children) unless sufficient supervision is provided during operation.

OPERATING INSTRUCTIONS

- Before using for the first time, wash the base and plate with lukewarm water. Dry thoroughly.
- Insert the plug into the main power supply, and then switch it on.
- You may adjust the desired temperature while cooking.
- When the indicator light is switched on, it is warming up automatically. When Indication light is switched off, it means your desired temperature has already been achieved.
- Before frying, it is recommended to adjust the temperature to that desired or to the maximum. You may start frying after 10 minutes when optimal temperature has been achieved.
- While cooking, it will stop heating when the temperature reached the max temperature and restart again after about 1 - 2 minutes.
- After cooking, ensure the adjustable thermostat is in "OFF" position. Only then should you remove the power plug from the power supply.

CAUTION:

- Do not scratch the grill surface. Use non-metallic cleaning implements only.
- Do not touch hot surfaces. Use oven mitts to remove grill plate while the appliance is hot. Always place appliance on a heat resistant surface.
- Be extremely careful when removing the grill plate containing hot liquids or oil.
- Do not operate this appliance without the drip tray in place.
- Make sure the drip tray always fill with water to avoid overheating, as well as for easier clean-up.

CARE AND CLEANING


- Always disconnect the appliance from the power supply before cleaning.
- Always allow your appliance to cool completely before cleaning.
- Never immerse the appliance completely in water or any other liquids.
- Wash plate and base with lukewarm water and dry thoroughly.
- Don't wash or immerse the body and other internal components into water or other liquids.

 **Mórgan®**

Market Expansion
Services by
www.dksh.com



E-mail: electrical.appliance@dksh.com
www.morgan.my

 facebook.com/morganappliances