



Mórgan®

USER MANUAL

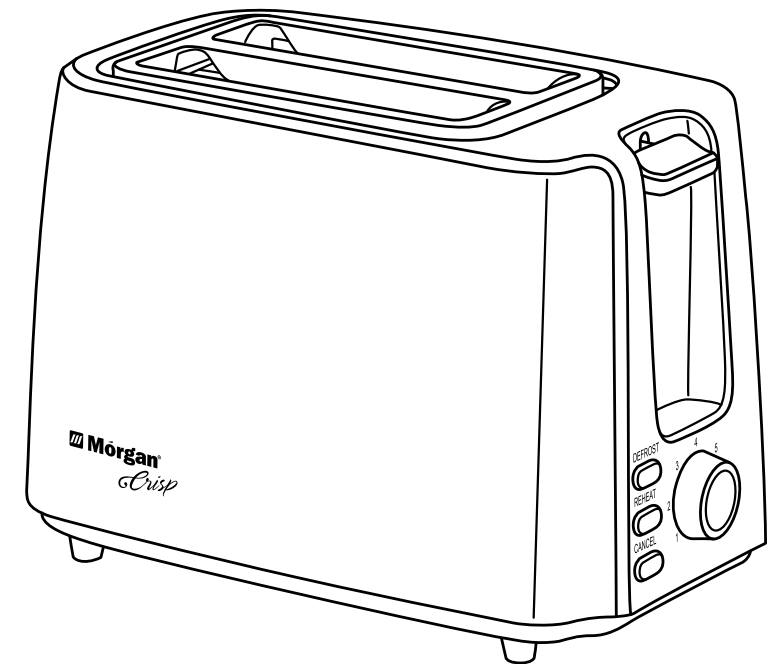

Mórgan®

Market Expansion
Services by
www.dksh.com.my



DKSH

E-mail: electrical.appliance@dksh.com
www.morgan.my

 facebook.com/morganappliances

Toaster

MTS-22A

Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new product. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

C O N T E N T S

IMPORTANT SAFEGUARDS

3 Important Safeguards

4 Parts Identification

4 Specifications

4 Using For The First Time

5 Operating Instructions


6 Care & Cleaning

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.

When using electrical appliances, basic precautions should always be followed, including the following:

1. Read all instructions carefully before operating this appliance.
2. Always unplug from outlet when the appliance is not in use, before assembling or disassembling parts and before cleaning. Allow to cool before cleaning or handling.
3. Do not touch hot surfaces, use handles or knobs.
4. To protect against the risk of electrical shock, do not immerse any part of the toaster in water or any other liquids. See instructions for cleaning.
5. This appliance should not be used by or near children, or individuals with certain disabilities.
6. Do not operate any appliance with a damaged power cord or power plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or if it is not operating properly. Return appliance to your nearest authorized service centre for examination, repair, or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended by the manufacturer may cause injury and/or void the manufacturer's warranty
8. This appliance is for domestic and indoor use only. Do not use outdoors.
9. Do not allow power cord to hang over the edge of the table or countertop or touch hot surfaces.
10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for other than intended use.
12. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen, areas in shops, offices and other working environments;
 - Farm houses;
 - In bed & breakfast establishments, hotels, motels and other residential type environments;
13. **WARNING:** Do not insert oversized foods, metal foil packages or utensils into the toaster, as they may involve a risk of fire or electric shock.
14. **WARNING:** Bread and burn. Therefore, do not operate the toaster near flammable materials such as curtains or draperies and the like to avoid a fire hazard.
15. Do not attempt to remove food from the toaster when it is plugged into the power supply.
16. To avoid possibility of fire, do not leave toaster unattended during use.
17. **WARNING:** Surfaces are liable to become hot during use. The Hot surface warning symbol is marked on the appliance means that the appliance may be hot during operation.
18. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
19. Do not operate your appliance in a garage or under a wall cabinet. When storing the appliance, always unplug the unit from the power supply. Not doing so could pose a risk of electric shock or fire.

PARTS IDENTIFICATION

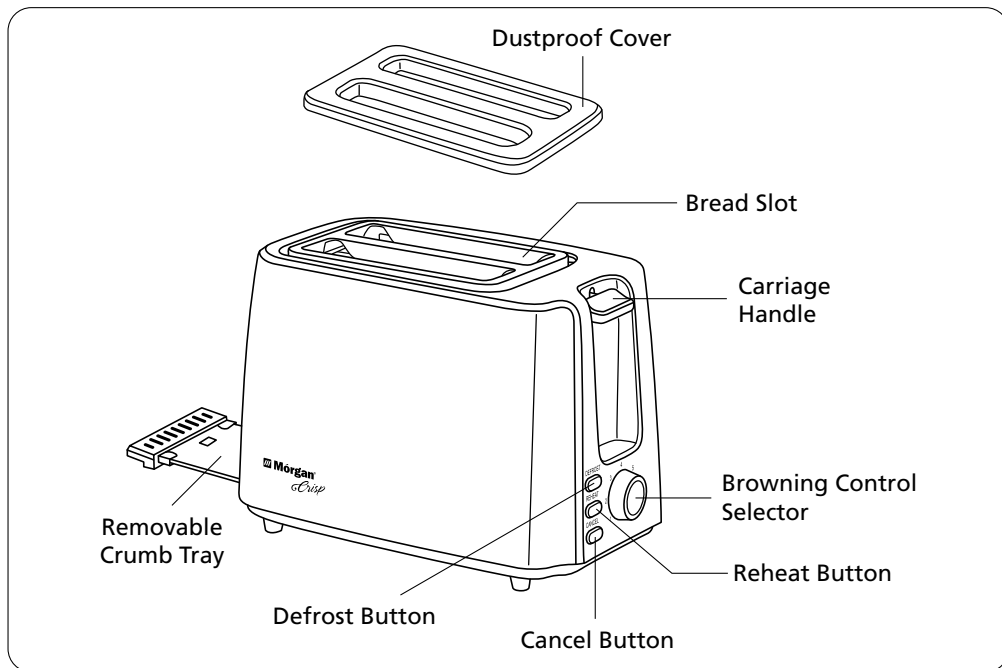

SPECIFICATIONS

MODEL	MTS-22A
RATED VOLTAGE / FREQUENCY	220-240V~ 50/60Hz
RATED POWER	750W
TYPE	2 SLICE

USING FOR THE FIRST TIME

- Unwind the power cord. Ensure that the removable crumb tray is in place and that there is nothing in the toaster slot(s).
- Insert power plug into the power supply.
- The toaster will release an odour during first time use, caused by manufacturing residue or oil remnants in the toaster or heat element. It is normal and will gradually disappear after consecutive use.
- For first time operation, it is recommended to operate the appliance according to the steps below, except without bread.
- Allow the toaster cool down and begin toasting the first slice of bread.

OPERATING INSTRUCTIONS

1. Insert bread slice into the bread slot which can be inserted two slices at most every time. Only the regular slice can be placed into the bread slot.
NOTE: Ensure the removable crumb tray is correctly positioned before using.
2. Insert power plug into the power supply.
3. Select desired browning with the Browning Control Selector with its 7 levels of shade.

BROWNING CONTROL SETTING	SHADE
1 – 2	Light
3 – 5	Medium
6 – 7	Dark

NOTE:

- To toast a single slice of bread, set the heat selector to a lighter setting than you normally would. The toaster is designed to heat the whole toasting chamber for two slices.
 - By lowering the heat for a single slice, you won't over toast.
4. Press carriage handle down vertically until it is positioned in place. The CANCEL indicator will illuminate, and toasting will begin.
 5. Once the bread has been toasted to the desired shade, the carriage handle will be automatically spring up, indicating bread toasting has completed and can be removed.
NOTE: The carriage handle can only be latched when appliance is connected to the power supply.
 6. Toasting shade can be observed during the toasting process and can be interrupted by pressing the Cancel button at any time.
 7. For refrigerated bread – set Browning Control Selector to desired shade. Press carriage handle down vertically until it is positioned in place, then press DEFROST button. The DEFROST indicator will illuminate.
 8. To reheat cold toasted bread - press carriage handle down vertically until it is positioned in place, then press REHEAT button. The REHEAT indicator will illuminate using a pre-set duration.

CAUTION

- Remove all protective wrappings prior to operation and toasting.
- If toaster emits smoke during operation, press CANCEL to stop toasting immediately.
- Avoid toasting food with extremely runny ingredients such as butter.
- Never attempt to remove bread stuck in the slots without first unplugging the toaster from the power supply. Ensure not to damage the internal mechanism or heating elements when removing stuck bread.
- The bread slot is only applicable for toasting regular bread slices.
- To achieve uniform shades, it is recommended to wait minimum 30 seconds between each toasting interval so shade control can reset automatically.

DUSTPROOF COVER

When not use, place the dustproof cover on top of the toaster to prevent dust or insects/objects from entering into the bread slots.

CARE & CLEANING

1. Unplug the appliance from the power supply and allow to cool down before carrying out cleaning or maintenance.
2. Do not use abrasive cleansers to clean the exterior. Use a clean damp cloth to wipe and allow to dry thoroughly. Apply any cleansing agent to a cloth, not to the toaster, before cleaning.
3. To remove crumbs, slide out the removeable crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the removable crumb tray in place.
4. To remove any bread remnants in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard.
5. Never wrap the power cord around the toaster's exterior.
6. Any other repairs/servicing should only be performed by an authorized service representative.



ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal centre.