 


 **Mórgan®**

USER MANUAL

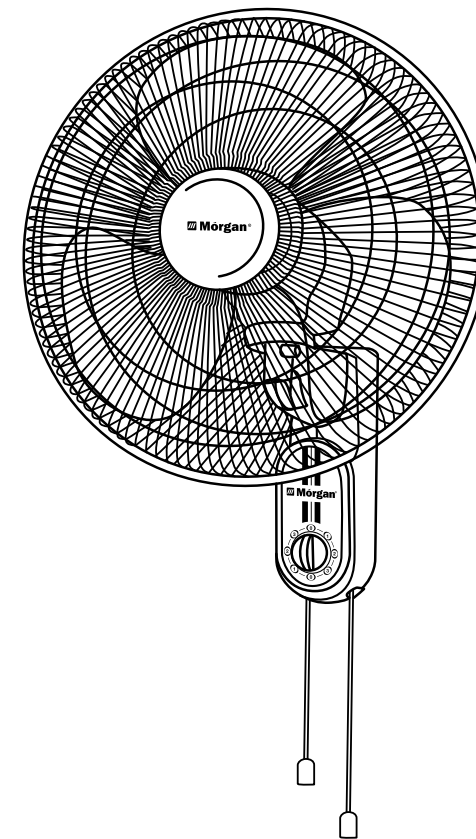

 **Mórgan®**

Market Expansion
Services by
www.dksh.com.my



DKSH

E-mail: electrical.appliance@dksh.com
www.morgan.my

 facebook.com/morganappliances

Wall Fan

MWF-NC168MS

C O N T E N T S

3 IMPORTANT SAFEGUARDS

4 PARTS IDENTIFICATION

4 SPECIFICATIONS

5 ASSEMBLY INSTRUCTIONS

6 OPERATING INSTRUCTIONS

7 CARE & CLEANING

 
IMPORTANT SAFEGUARDS

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

IMPORTANT: Read this instruction carefully before use and retain for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off the appliance and remove the power plug from the power supply when the appliance is not in use.
- Do not operate any appliance with a damaged power cord or power plug; or if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not use outdoors. This product is intended for household use only.
- Do not use this appliance for any purposes other than its intended use.
- Never carry the appliance by the power cord or forcibly yank on it to disconnect from the power supply. Instead, grasp the plug and pull to disconnect.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and pose a safety hazard to the user.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person to avoid a safety hazard.
- This product has not been designed for any uses other than those specified in this manual.

PARTS IDENTIFICATION

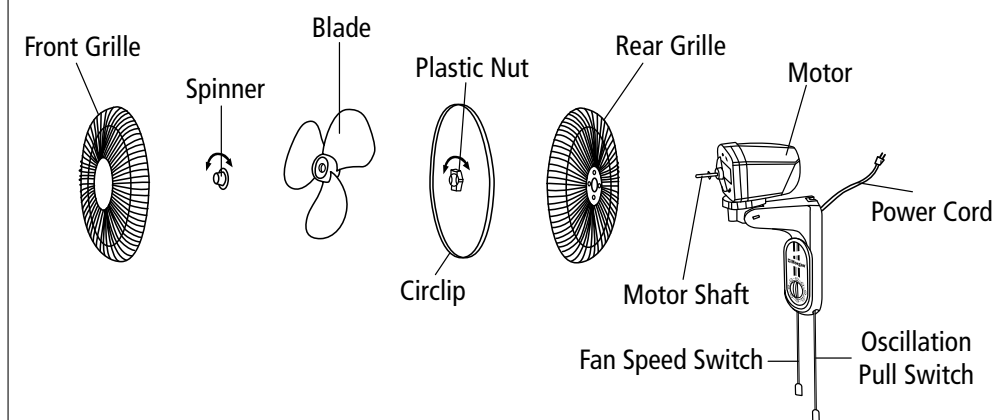



SPECIFICATIONS

MODEL	MWF-NC168MS
RATED VOLTAGE / FREQUENCY	240V~ 50Hz
RATED WATTAGE	45W
SIZE	40CM

ASSEMBLY INSTRUCTIONS

WARNING

- Ensure the Wall Fan is disconnected from the power supply before commencing assembly.
- Mount the hanging bracket (2) on the wall with the supplied screws (Fig 1).
- Secure the motor and control assembly with the bracket onto the hanging wall bracket (Fig 2).

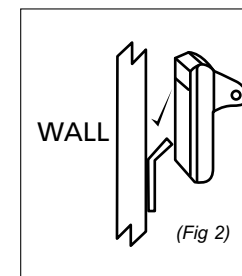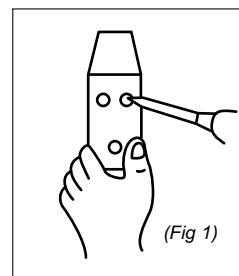

INSTALL FAN GUARD

Remove blade cap and rear guard locking nut from the motor shaft first. Then attach rear guard to the motor shaft and tighten the rear guard locking nut clockwise tightly.

INSTALL FAN BLADE

Install the fan blade onto the motor shaft, ensure that the retaining pin snaps into the groove on the blade. Turn the blade cap counter clockwise to secure the blade in position


- Recommended ground distance to the fan is 2.3 meters (7.5 feet).

OPERATING INSTRUCTIONS

SPEED SELECTION


- Pull on the Fan Speed Switch to select desired speed.

- 0 = Stop
- 1 = Low Speed
- 2 = Medium Speed
- 3 = High Speed

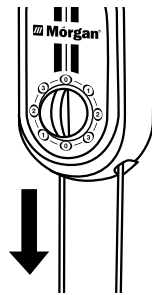


ADJUST DIRECTION

- Gently push & tilt the front grille to the desired Up/Down direction.

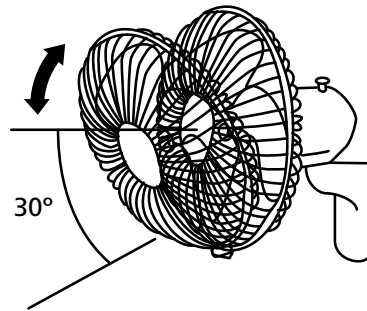

OSCILLATION SELECTION

- Pull on the oscillation pull switch to oscillate the fan.
- Pull again to stop oscillation.

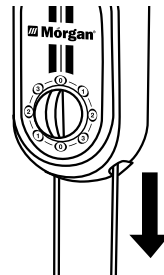

CARE & CLEANING

WARNING:

1. Switch off the fan and disconnect from the power supply before removing the guard for cleaning.
2. Disassemble the fan guard and blade from the fan motor and control assembly before cleaning.
3. Clean only the fan's surface & body using a mild detergent and soft cloth.
4. Allow to dry completely before reassembly.

NOTE:

1. If supply cord is damaged, have it replaced by a qualified technician.
2. Add a few drops of lubricant onto the base of motor shaft after cleaning to extend motor life.