




# Morgan®

## USER MANUAL

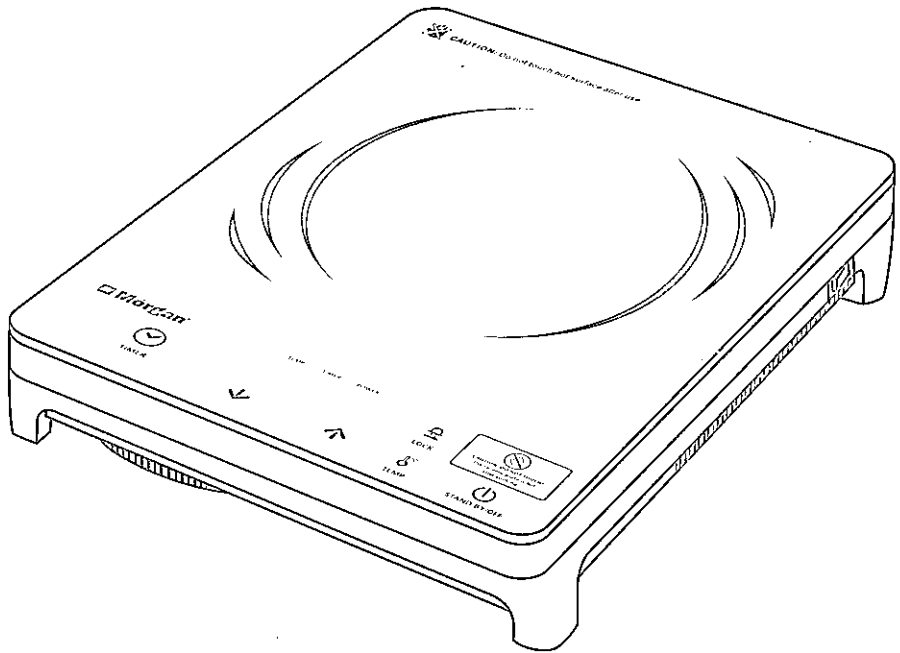


# Ceramic Cooker

MCC-2001SB

## CONTROL PANEL

1. Digital Display
2. Function Key Light
3. Child Lock
4. Caution Instruction
5. Timer Setting
6. Reduce
7. Increase
8. Power/Temperature
9. Stand By/Off Key

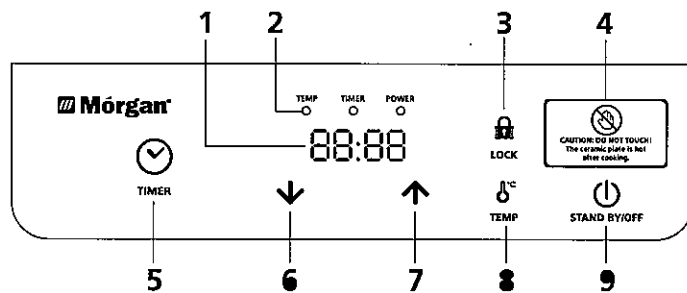

## SPECIFICATIONS

MODEL	MCC-2001SB
RATED VOLTAGE / FREQUENCY	220-240V~ 50/60Hz
RATED WATTAGE	2000W

## OPERATING INSTRUCTIONS

### 1. POWERING THE COOKER

- Before plugging in the appliance, ensure that the socket and power match those of the appliance displayed on the rating label found on the underside of the appliance.
- Ensure that cooking utensils such as pots are dry and dirt/grease-free before placing them onto the ceramic board.
- Place the pot onto the centre of the ceramic board.
- The buzzer will sound when the "ON" button at the side is switched on, and the digital display will illuminate in 1 second. The stand by/off lights will also be illuminated. The digital display will show "----" when the "STAND BY/OFF" key is pressed in 1 second. The cooker is ready to use and "▲" allows you to adjust the temperature. Pressing the "LOCK" key locks all other keys in 2 seconds.

### 2. STARTING UP/ADJUSTING THE SETTINGS

- Press and hold the "LOCK" key until the buzzer sounds and the "LOCK" light is turned off.
- Press the "STAND BY/OFF" key in and in 10 seconds, the buzzer will sound and the "STAND BY/OFF" light is illuminated. The digital screen will display "P1", if there is no further activity after ten seconds - a restart is required.
- Press the "▲" / "▼" key to adjust and select from 12 different settings between P1-P12.

### 3. TEMPERATURE SETTING

- Press the "TIMER" key and the digital display will show "50", indicating the "TIMER" function and light is on.
- There are 12 temperature settings: 50°C, 75°C, 100°C, 200°C, 250°C, 300°C, 350°C, 400°C, 500°C, 550°C, 600°C, 640°C.
- Press the key "TIMER" again to manually adjust the setting.

### 4. CHILD LOCK

- The appliance is locked and can only be unlocked when "LOCK" and "STAND BY/OFF" is pressed.
- Press the "LOCK" key and a buzzer will sound to indicate that child lock is activated.
- Hold and press the "LOCK" key to unlock and a buzzer will sound, indicating that the child lock is deactivated.

## OPERATING INSTRUCTIONS

### 5. TIMER SETTING

- To operate the appliance using the timer, press the "TIMER" key and the digital display will show "00:00" with temperature setting light turned on.
- Press the "▲" key within five seconds to increase the timer setting 5 minutes with each press. The maximum timer setting is two hours (or 120mins). Press the "▼" key will reduce timer setting by 1min with each press. Timer is cancelled when the setting is adjusted to "00: 00".
- After timer setting and no further activity takes place, the digital display will illuminate for 5 seconds and enter countdown.
- When the screen display "00:00", the cooker will stop heating and enter ready mode.
- Press the "TIMER" key to restart the timer.
- To reset Timer - Press the "TIMER" key first for timer heating and then wait for a few seconds to cancel it to set the time desired.

### 6. OFF

- The cooker will stop heating and enter ready mode automatically till the timer is off.
- Press the "STAND BY/OFF" key to stop heating and enter ready mode any time. If the child lock has been activated, press the "STAND BY/OFF" key to cancel it.

### 7. RESIDUAL HEAT INDICATORS

- The heat indicator light will illuminate as long as the cooker's power plug is plugged in and power switched on.
- The light will flicker for a few minutes after the cooker has stopped heating indicating that residual heat is over.
- The light will disappear when the temperature of the ceramic glass has been cooled to a reasonably safe level.

### 8. SAFETY INFORMATION

- The heating temperature can achieve 640°C during operation. DO NOT touch the ceramic heating zone.
- DO NOT yank the power plug to power off. Pressing the "STAND BY/OFF" key will stop heating. The inner temperature of the cooker is high and the inner fan will continue to work for safety reasons. Power off only after 8-10 minutes.
- To manually cool down the temperature of the ceramic heating zone, place a pot of 1-2kg water on it.
- Under heating mode, the appliance will be shut down automatically and enter ready mode if it is not in operation for two hours.

## TROUBLESHOOTING


PROBLEM	POSSIBLE REASONS
E1	Thermocouple cutting-out
E2	Thermocouple opening
E3	Cooling fan not working
E4	Thermostats opening
E5	Thermostats cuts off
E6	Heating element overheats
E7	Relay cuts off
E8	Relay opening
E9	The inner temperature is volatile

The logo for Morgan, featuring a square icon with three slanted parallel lines on the left, followed by the word "Morgan" in a bold, sans-serif font with a registered trademark symbol (®) to its upper right.

Market Expansion  
Services by  
[www.dksh.com](http://www.dksh.com)



E-mail: [electrical.appliances@dksh.com](mailto:electrical.appliances@dksh.com)  
[www.morgan.my](http://www.morgan.my)

 [facebook.com/morganappliances](https://facebook.com/morganappliances)