


 **Morgan®**

# USER MANUAL

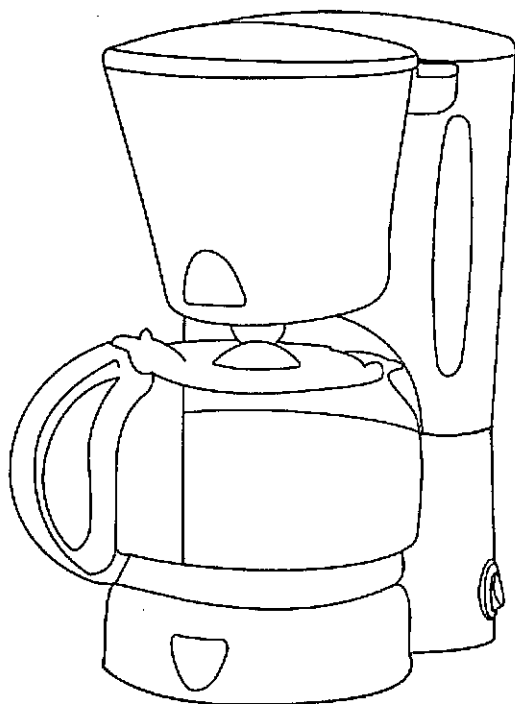

**Coffee  
Maker**

**MCM-NA10C**

# CONTENTS

## PARTS IDENTIFICATION


1 Parts Identification

1 Specifications

2 Safety Precautions

3 Operating Instructions

4 Care and Cleaning

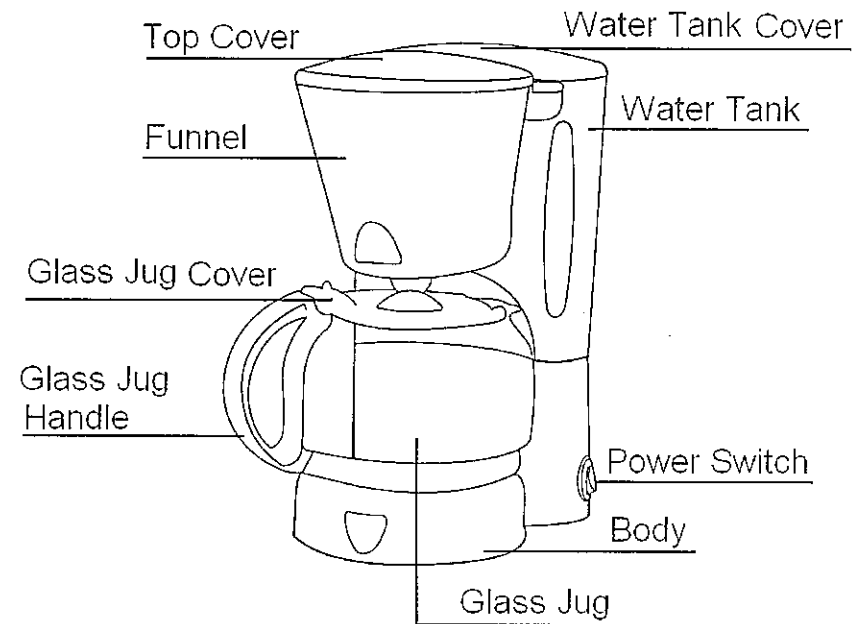

## SPECIFICATIONS

RATED VOLTAGE	220-240V~
RATED POWER	800W
FREQUENCY	50Hz

1. Before connecting the appliance, please check whether the voltage indicated on the appliance corresponds with the main voltage in your home.
2. Do not place the appliance on a hot surface.
3. Remove the main plug from the power socket before cleaning the appliance or if problems occur during making coffee.
4. Do not allow cord to hang over edge of table or counter, or touch surfaces.
5. Close supervision is necessary when any appliance is used by or near children. Prevent children from pulling the main cord.
6. Do not operate any appliance with a damage cord or plug in the event of a malfunction or has been damage in any manner. Return appliance to the manufacturer (see warranty) for examination, repair or adjustments.
7. This appliance is intended for household use only.
8. Do not pour any water into the appliance once it has been turned on.
9. The heating plate is hot when in operation. Do not touch to avoid risk of severe burns!
10. Use fresh cold water only when filling the water tank.

### Initial Use

- For a perfect taste, carry out 2 or 3 boil-processes with fresh water (without coffee). Once all the water has passed through, switch off the appliance and let it cool down for 5 minutes. Then repeat the process with fresh water.

### Making Coffee

- Fill the water tank with the required quantity of water. Ensure that the water level is not lower than the minimum mark and not higher than the "MAX" indication. Use fresh, cold water only. The number of cups can be read on the water level window. Insert filter paper size "1X4" if the basket hasn't been used and fill in the desired quantity of ground coffee.
- Switch on the appliance. Wait until the brewing process is finished and the funnel has run empty before removing the glass jug.
- For large cups: takes 5-6g of ground coffee each cup.
- If you have made one cup of coffee and wish to make more immediately, please switch off the coffee maker and allow at least 5 minutes for it to cool down. Only then should you refill the water tank.

## CARE AND CLEANING

- Always remove the main plug from the power socket before cleaning the appliance.
- Never immerse the appliance in water.
- Always clean with a damp cloth.
- The carafe, filter and funnel can be washed in hot soapy water.
- Descale your coffee maker regularly.
- Operate the appliance as described. However, use ordinary vinegar to fill the water tank and do not fill the funnel with ground coffee.
- After rescaling operate the appliance twice using only water to rinse away the vinegar and scale residues.