

 **Mórgan®**

Market Expansion
Services by
www.dksh.com.my




DKSH

E-mail: electrical.appliance@dksh.com
www.morgan.my

 facebook.com/morganappliances

 **Mórgan®**

USER MANUAL

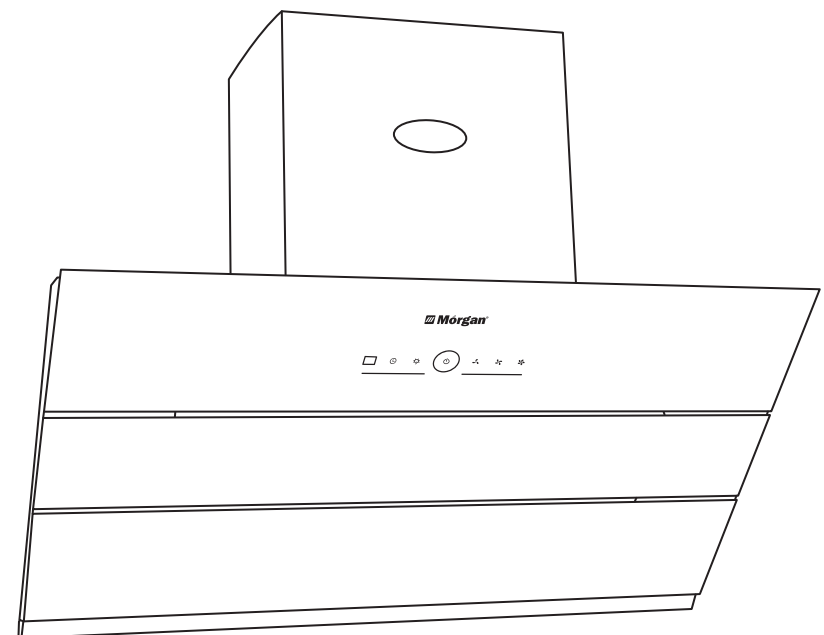

Designer Hood

MDH-960ST

C O N T E N T S

3 IMPORTANT

3 SAFETY PRECAUTIONS

4 BEFORE INSTALLATION

5 INSTALLATION GUIDE

6 OPERATING INSTRUCTIONS

7 CLEANING & MAINTENANCE

Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new product. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

IMPORTANT

- This appliance complies with all relevant local and national safety requirements. Inappropriate use can lead to personal injury and damage to property.
- To avoid the risk of accidents and damage to the appliance, please read these instructions carefully before using it for the first time. They contain important notes on the safety, installation, use and maintenance of the appliance.
- The manufacturer cannot be held liable for non-compliance with these instructions.
- Keep these instructions in a safe place and ensure that all users are familiar with the contents. Pass them on to any future owner of the appliance.

SAFETY PRECAUTIONS

- The kitchen hood has been designed exclusively for domestic use to eliminate kitchen odours.
- Never use the hood for purposes other than which it has been designed for.
- There is a risk of fire if cleaning is not carried out in accordance with the instructions.
- Do not flambe (cook using alcohol) under the range hood.
- Caution: Accessible parts may become hot when used with a cooking appliance.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervised instructions concerning the use of the appliance by a responsible person for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, have it replaced by the manufacturer or its service agent or a similarly qualified person to avoid a hazard.
- Never leave high naked flames under the hood when during operation.
- Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
- Deep fryers must be continuously monitored during use as overheated oil can burst into flames, posing a safety hazard.

BEFORE INSTALLATION

IMPORTANT: The appliance must be installed by qualified technicians only.

- Repairs and other work by unqualified persons could be dangerous. Installation, maintenance work and repairs to electrical appliances must only be carried out by qualified service technicians only.
- Before connecting the appliance to the power supply, ensure that the power supply voltage corresponds to that indicated on the rating plate on the hood.
- Remove any packing materials (plastic bags, screws, metal strips etc.) away from the reach of children for safety reasons.
- Do not attempt to alter or modify the technical features of the designer hood as doing so can pose a safety risk. The manufacturer does not accept any liability for any damage or injury caused by improper installation.
- This designer hood has been designed to be wall-mounted above a Gas stove/Hob. Before commencing installation, consideration should be given to how the installation is to be carried out, ensuring adequate space and clearances above the Gas stove/Hob.
- When installed, the designer hood must be positioned at least 350mm above the gas stove.

INSTALLATION GUIDE

- Use an electrical drill with diameter of 8mm.
- Locate the two screw holes for the mounting brackets. The screw holes must be perfectly horizontal, and the centre hole must be aligned with the proposed centre of the designer hood.
- Drill the holes and insert the wall plugs.
- Secure the screws for the wall bracket to the top two holes drilled in the previous step.
- Rivet the flexible ventilation pipe to the cover with the screws to hang the main frame.
- Install the flexible pipe. Ensure that the flexible pipe retains its original condition.
- Ensure that the joint is air proof. Minimize the number of bends and elbows to maximize the efficiency of the appliance.
- **NOTE:** The wall shutter is not included in the carton.
- The designer hood can be ducted through a roof or through a wall.

IMPORTANT:

- Install the designer hood on the wall above the Gas Stove/Hob securely and ensure a distance at least 350mm (13.8") between the designer hood and the Gas Stove/Hob.
- Ensure that the ventilation pipe can access open air or enter the cold air suction flue.
- Check the joints are airtight.
- Earth the electrical outlet (must be performed by a qualified electrician only).
- Ensure that the gas expelled from the designer hood is not discharged into the flue which is used to discharge fumes produced by burning coal, gas or other fuels.

OPERATING INSTRUCTIONS

It is advised to follow these instructions before first use.

- Install the oil cup by inserting it from the rear to the front side.
- Insert the power plug into the power supply. A beep will sound when it is first switched on.
- Press the power button.
- Press the lamp button to ensure that it functions properly.
- Press the lamp button to switch off.
- Press the fan speed buttons to ensure that the motor functions properly.


If the following abnormalities are found during the test, shut off the power immediately:

1. Mainframe vibrates excessively.
2. Inflated pipe becomes flexible
3. Loud noises from the motor.

Press the power switch to stop operation. Contact the manufacturer or its authorized service agents to inspect, troubleshoot or repair (Including damage to power supply).

DO NOT attempt to alter/modify/repair the appliance yourself. Failure to follow the advice can affect your personal safety and your appliance.

CONTROL PANEL

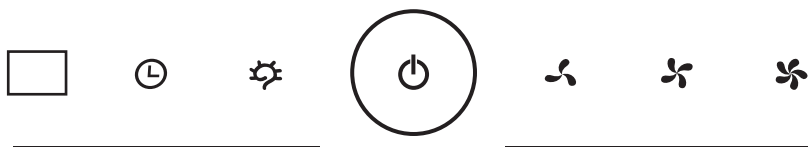

From left to right: Digital display, Timer, Light, Power, Low Speed, Medium Speed and High Speed.

- When the hood is powered on for the first time, the upper glass panel will respond and close automatically.
- Power: Press it and the upper glass panel will open. It takes 8 seconds to open and prepare the machine in standby mode.
- Timer: When the hood is on standby, press it and then the machine will be in timer mode for 1 minute. The digital display will show the remaining time left (in minutes). After 1 minute of inactivity, the upper glass panel will close automatically, and power will be shut off. Press the timer button once more to activate.
- Light: In standby mode, press once to turn on the lights and once more to turn them off.
- Low Speed: Press it for low speed.
- Medium Speed: Press it for medium speed.
- High Speed: Press it for high speed.

CLEANING & MAINTENANCE

- Ensure that the power plug is switched off and detached the power supply before performing any cleaning and maintenance.
- Clean the mainframe and the filters regularly.
- There are two types of inlet filters on these models. Both are detachable by pulling on the lever at the adage of the filters and lifting them out of the slots which secure them.
- Wash the filters in a dishwasher, or by hand using household dish-washing liquid and clean it with a soft brush.
- Allow filters to dry thoroughly before replacing them.
- When replacing, ensure the filters are inserted in their correct positions.
- Wipe any residual dirt on the mainframe with a wet cloth and mild detergent.
- IMPORTANT: DO NOT use abrasive cleaners or sources as these will damage the surface.
- Use commercial stainless-steel cleaning products to remove stubborn stains.
- Wash the grease filters on a regular basis wearing gloves.
- Empty oil from the oil cup. It is recommended to empty the oil cup when the oil reaches the 2/3 mark.
- Unplug the power plug from the power supply if the appliance is not to be used for a long duration.