

 **Mórgan®**

USER MANUAL



Electric Kettle

MEK-4802SSCL

 **Mórgan®**




E-mail: electrical.appliance@dksh.com

www.morgan.my

 facebook.com/morganappliances

PARTS IDENTIFICATION

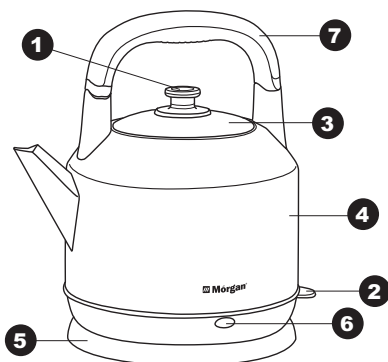

1. Kettle Cover Button
2. Restoring Switch
3. Hinged Lid
4. Kettle Body
5. Kettle Base
6. Indicator Lamp
7. Handle

SPECIFICATIONS

MODEL	MEK-4802SSCL
RATED VOLTAGE / FREQUENCY	220-240V~ 50/60Hz
RATED WATTAGE	1850-2200W
CAPACITY	4.8L

BEFORE INITIAL USE

1. Read the following instructions in order to understand the structure and general knowledge of the kettle.
2. Remove all packaging materials.
3. Ensure the appliance voltage rating corresponds to that stated on the rating label (indicated at the base of the kettle).
4. It is recommended to fill kettle to the MAX line and bring to a boil. When the unit completes the boiling cycle, discard the water.
5. Wipe the exterior surface with damp cloth.

OPERATING INSTRUCTIONS

1. FILLING WATER

- a) The capacity of filled water is limited by the ultimate line graduated on the appliance body.
- b) DO NOT fill water exceeding the MAX line.
- c) DO NOT allow overfilling the kettle and allow water to flow onto the kettle's exterior surface.

2. PLACEMENT

- a) Place the appliance on solid, stable and flat surfaces.
- b) Never heat the appliance on any wet surface, nor should you allow water to penetrate the electrical parts inside the kettle.
- c) Do not place the appliance on or near hot surfaces or near open flames.

OPERATING INSTRUCTIONS

3. SWITCHING ON

- a) Insert the power plug into a power supply.
- b) Do not allow the cord to hang over the edge of the table or counter to prevent accidentally tripping over it, or come into contact with hot surfaces.
- c) Push the restoring switch.
- d) The red indicator lamp will illuminate, indicating that the kettle is heating.

4. BOILING

- a) The kettle will automatically switch off several seconds after the water has boiled.
- b) The red indicator lamp will be turned off.

5. RESTORING

- a) As a safety feature, the unit may not start immediately after shutting off. Allow 15 to 20 seconds for kettle to cool down before switching on again.
- b) The temperature sensor may prevent the red indicator lamp from illuminating even after pushing the restoring switch as the kettle is still hot. Wait for about 15 minutes before re-operating the kettle.

CLEANING & MAINTENANCE

1. Always rinse the kettle with hot water before use.
2. Always allow the kettle to cool down completely before unplugging it from the power supply. Discard any remaining water inside it before cleaning.
3. Do not immerse the appliance in water or any other liquids.
4. Use a small quantity of hot water to brush the kettle's exterior sides and rinse with hot water until it runs clean.
5. Use a soft cloth to wipe the appliance body. Do not use abrasive materials to avoid scratching.

IMPORTANT

1. This kettle is intended for heating water only. Use of any other liquids or food may damage the interior and void the warranty.
2. DO NOT use the kettle for other purposes other than for its intended use.
3. DO NOT touch the power base or bottom of the kettle after use to avoid scalding or burns.
4. Close supervision is necessary when this appliance is to be used by or near children.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience any knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety:
6. When removing the power plug from the power supply, never yank or pull on the power cord
7. Do not use the kettle if it has been damaged or modified or appears to have malfunctioned in any way.
8. Do not operate the kettle with a damaged or incorrect cord or plug.
9. Do not remove the lid during the heating cycle. Scalding may occur.
10. Do not fill above the MAX line; this may cause water to overflow, which may cause scalding.
11. If the supply cord is damage, it must be replaced by a service agent or similarly qualified persons in order to avoid a hazard.
12. Do not allow power cord to overhang counter top to avoid risk of being pulled by children.
13. Do not place the appliance near edge of the table, it's to prevent overturn the kettle.