


 **Mórgan®**

## USER MANUAL

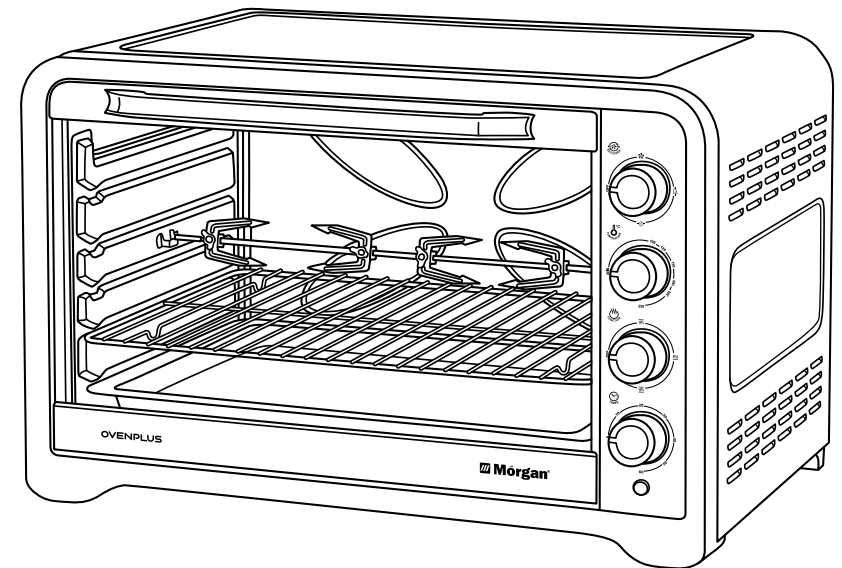

 **Mórgan®**

Market Expansion  
Services by  
[www.dksh.com.my](http://www.dksh.com.my)



**DKSH**

E-mail: [electrical.appliance@dksh.com](mailto:electrical.appliance@dksh.com)  
[www.morgan.my](http://www.morgan.my)

 [facebook.com/morganappliances](https://facebook.com/morganappliances)


# Electric Oven

**MEO-1002RC**

# C O N T E N T S

- 3** Parts Identification
- 4** Important Safeguards
- 5** Control Panel
- 6** Operation Instructions
- 7** Care And Cleaning
- 7** Specifications

## PARTS IDENTIFICATION

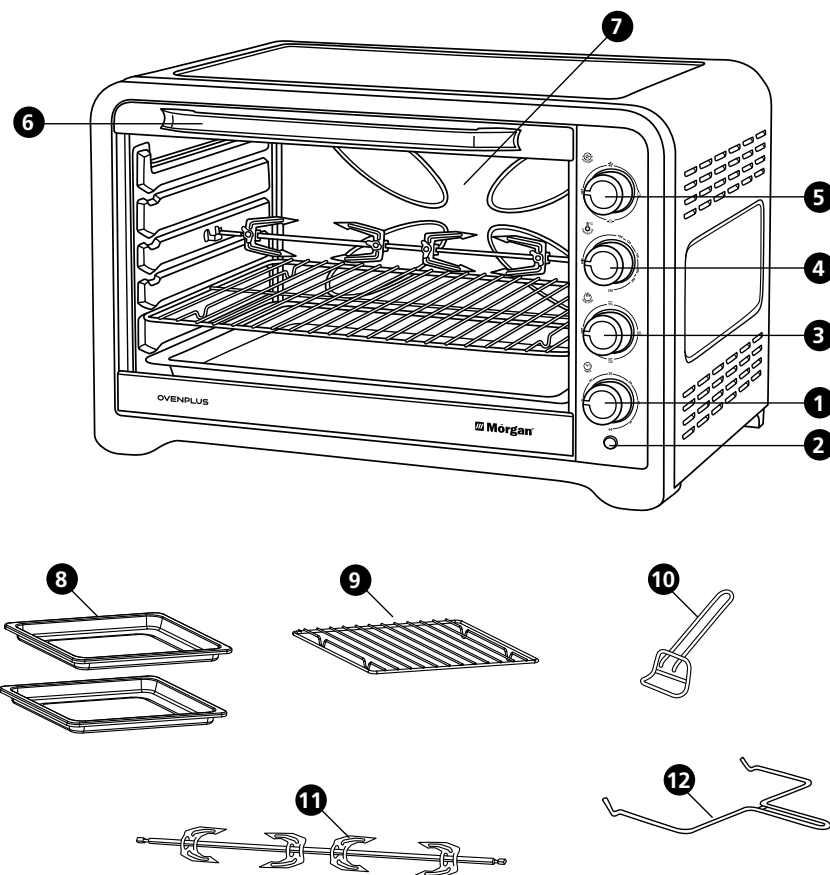

- |                           |                        |
|---------------------------|------------------------|
| 1. Timer switch knob      | 7. Tempered glass door |
| 2. Indicator light        | 8. Bake tray           |
| 3. Heater switch knob     | 9. Wire rack           |
| 4. Thermostat switch knob | 10. Tray/rack Handle   |
| 5. Functions switch knob  | 11. Rotisserie fixing  |
| 6. Door handle            | 12. Rotisserie handle  |

Please read all instructions carefully before using the appliance and keep this manual for future reference.

## IMPORTANT SAFEGUARDS

**WARNING: To reduce the risk of fire, electrical shock, injury to persons, or damage when using the range, follow basic precautions, including the following:**

1. Read all instructions thoroughly before using.
2. Do not touch hot surfaces. Use oven gloves for removing or touching any hot part.
3. Close supervision is necessary when any appliances are used by or near children.
4. To protect against electric shock, do not immerse cord, plug, or any parts of the oven in water or other liquid.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliances with damaged cord or plug or after the appliances malfunctions, or has been damaged in any manner. Return appliances to the nearest Authorized Service Center for examination, repair, or adjustment.
7. The use of accessory attachments that are not provided by the manufacturer may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
9. When operating the oven, keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
10. Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts, and before cleaning.
11. To disconnect, turn the control to OFF, then remove the plug. Always hold the plug, never pull the cord.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Do not clean with metal scouring pads as pieces can break off from the pad and touch electrical parts, creating a risk of electric shock.
14. Never leave the appliances unattended while broiling or toasting.
15. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.

## IMPORTANT SAFEGUARDS

16. A fire may occur if the oven is covered or near any flammable material, including curtains, draperies, etc, when in operation. Do not store any item on the oven during operation.
17. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
18. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
19. Do not store any materials, other than recommended accessories, in this oven when the oven is hot.
20. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
21. Do not use outdoors. For household use only.
22. Do not use appliance for other than intended use.







## CONTROL PANEL

### TEMPERATURE CONTROL

Choose the desired temperature from 100° to 250°C for cooking.

### FUNCTION CONTROL

This oven is equipped with different functions for a variety of cooking needs.

-  Upper heating element is working during this function..
-  Lower heating element is working during this function.
-  Upper and Lower heating elements are working together during this function..
-  Convection is working during this function.
-  Rotisserie is working during this function.
-  Rotisserie and convection are working during this function.

### TIME CONTROL

60mins timer. You can set the time by turning the control clockwise. This function has a bell ring indicator at the end of the programmed time.

## OPERATION INSTRUCTIONS

**After re-assembling your oven, we recommend that you run it at the highest temperature on the toast function for approximately 15 minutes for eliminate any packing residue that may remain after shipping. This will also remove all traces of odor initially present.**

1. Insert the removable wire rack or bake tray with food.
2. Set the temperature control to desired position.
3. Set the function control.
4. Turn the Time Control to desired timing. Bell will ring to signal at the end of the Toast cycle.
5. To pause cooking, turn the timer dial till position "Off" to switch off the oven.

**PLEASE NOTE:** initial start-up operation may result in minimal smell and smoke. This is normal and harmless. It is due to burning of the protective substance applied to the heating elements in the factory.

## CARE & CLEANING

1. It is important that you clean the appliance after each use to prevent an accumulation of grease and avoid unpleasant odors.
2. Allow the appliance to cool and unplug from outlet before cleaning.
3. Do not immerse appliance in water or wash it under tap.
4. Removable wire rack, bake pan, crumb tray can be washed, as normal kitchenware.
5. Clean outside of appliance with a damp sponge.
6. Do not use abrasive cleaners or sharp utensils to clean the oven glass, as scratching may weaken it and cause shattering.
7. Let all parts and surfaces dry thoroughly prior to plugging oven in and using.

## SPECIFICATIONS

<b>Model</b>	<b>MEO-1002RC</b>
<b>Rated Voltage / Frequency</b>	<b>220-240V~ 50/60Hz</b>
<b>Rated Wattage</b>	<b>2800W</b>
<b>Capacity</b>	<b>100L</b>