



Mórgan®

USER MANUAL

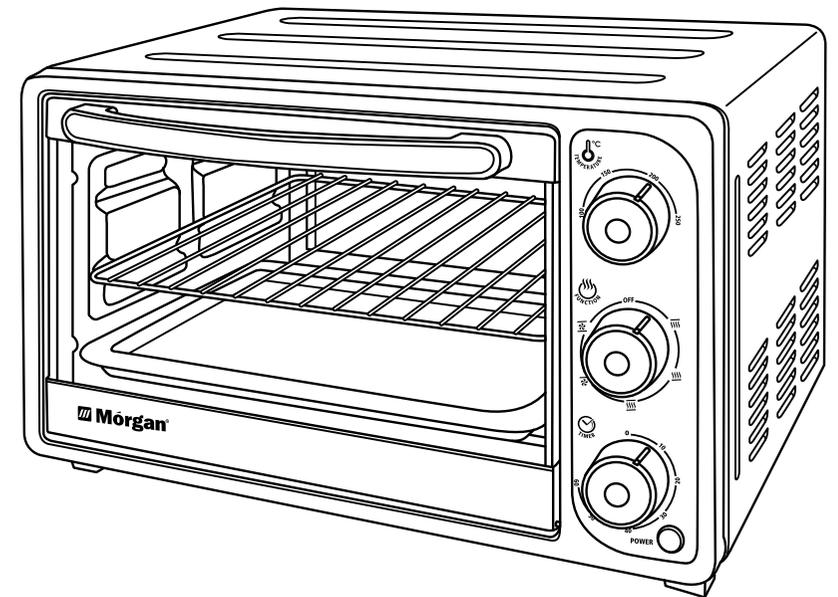

Mórgan®

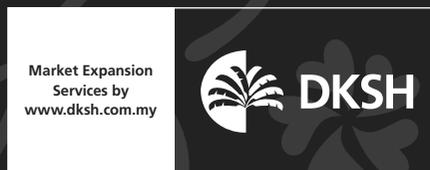

E-mail: electrical.appliance@dksh.com
www.morgan.my

 facebook.com/morganappliances

Electric Oven

MEO-HC26C

Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new product. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. All safety and operating instructions should be read before operation and user manual should be retained for future reference.
2. Do not touch hot surfaces.
3. Close supervision is necessary when appliance is used by or near children.
4. To protect against the risk of electric shock, do not immerse any part of the appliance in water or other liquids.
5. Do not allow power cord to hang over edge of table, counter or touch hot surfaces. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
6. **WARNING:** The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
7. When operating the oven, keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
8. Always detach power plug from the power supply when appliance is not in use, or before cleaning. Allow it to cool before assembling or disassembling parts, or before cleaning.
9. To disconnect, turn the control knob to STOP, then unplug the power plug. Always grasp the power plug firmly, but never yank on the power cord.
10. Do not cover CRUMB TRAY or any part of the oven with metal foil. This may cause the oven to overheat.
11. Do not clean the appliance with metal scouring pads as pieces can break off the pad and contact with electrical parts, creating a risk of electric shock.
12. Do not insert oversized foods or metal utensils into an electric oven as they may create a fire or risk of electric shock.
13. Do not cover the oven or allow it to touch flammable materials including curtains, draperies, walls, and the like, during operation to avoid a fire hazard.
14. Do not place any item on the oven during operation.
15. Extreme caution should be exercised when using containers constructed if anything other than metal or glass.
16. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
17. Do not store any materials, other than manufacturer's recommended accessories in this oven when not in use.

18. **WARNING:** To prevent accidental burns, always use/grip the handles and knobs when operating this appliance. Always wear protective, insulated oven mitts when placing or removing items from a hot oven.
19. This oven's safety tempered glass door is stronger than ordinary glass and more break-resistant. Tempered glass can break, but not into sharp edge pieces. Avoid scratching door surface or nicking edges. If the door glass has a scratch or nick, contact our customer service center before using the oven.
20. This appliance is for indoor and household use only. Do not use outdoors.
21. Do not use appliance for other than its intended use.
22. The temperature of the door and other accessible surfaces may be higher during operation.
23. Do not rest cooking utensils or baking dishes on glass door.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.
26. Food weight placed on the Food Tray/Grill Rack should not exceed 3.0kg. Space out food evenly on the Food Tray/Grill Rack and not on one side only for best cooking results.
27. For appliance with type Y attachment: if the power cord is damaged, it must be replaced by the manufacturer, its services agent or similarly qualified persons in order to avoid a hazard.
28. Rear surface of appliances should be placed against a wall.
29. It is recommended to clean this appliance regularly as grease build-up may pose a fire hazard.
CAUTION: APPLIANCE SURFACES ARE HOT AFTER USE. ALWAYS wear protective, insulated oven gloves when touching hot oven or hot dishes and food, or when inserting or removing rack, pans or baking dishes.

SAVE THESE INSTRUCTIONS


Before using your oven for the first time, be sure to:

1. Read all instructions included in this manual and save them for future reference.
2. Ensure oven is not connected to the power supply and Timer Knob is in the "0" position.
3. Remove all racks and pans. Wash the racks and pans in hot sudsy water or in a dishwasher.
4. Thoroughly dry all accessories and reassemble them in the oven. Insert power cord into the power supply and you are ready to use your new oven.

Important tips on first use:

1. Ensure that the voltage of the appliance corresponds to the voltage indicated on the power supply rating label at the bottom of the appliance
2. Do not allow power cord to hang over edge of table or counter to prevent children from tripping over.
3. **WARNING:** Do not operate the appliance if the power cord is damaged. Return it to the manufacturer, authorized service center or a similarly qualified person for repairs to avoid a hazard.
4. This unit has a short power cord to reduce the risk of tripping over a long cord.
5. An extension power cord may be used if its power rating matches or exceeds the appliance's power rating.

PARTS IDENTIFICATION

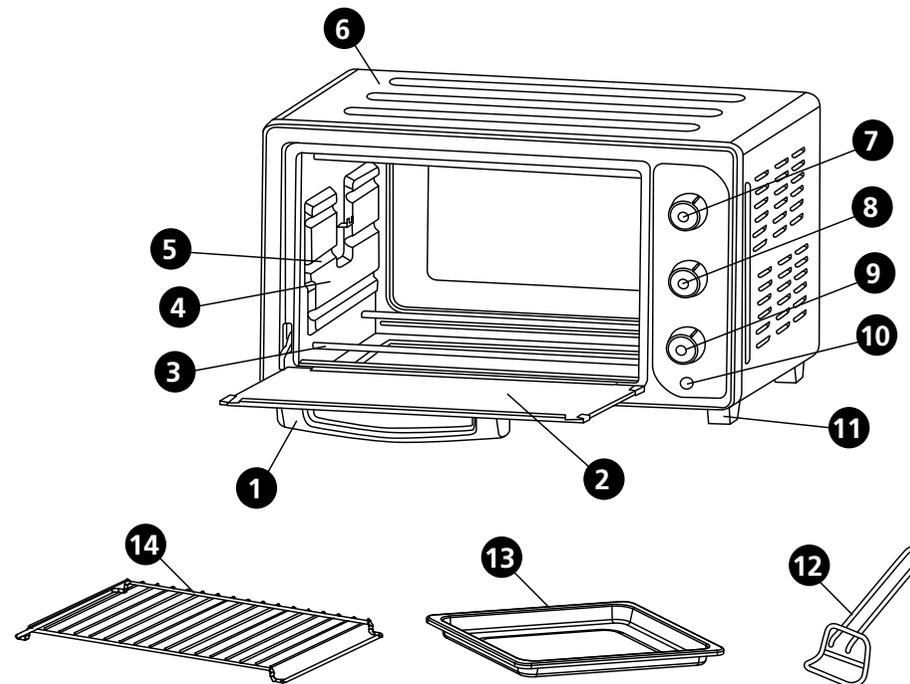

- | | |
|-----------------------------|----------------------------------|
| 1. Door Handle | 8. Heating/Function Control Knob |
| 2. Glass Door | 9. Timer Control Knob |
| 3. Heating Element | 10. Indicator Light |
| 4. Inner Cavity | 11. Oven Foot |
| 5. Rack Support | 12. Tray Handle |
| 6. Housing | 13. Baking Tray |
| 7. Temperature Control Knob | 14. Wire Rack |

SPECIFICATIONS

Model	MEO-HC26C
Rated Voltage / Frequency	220-240V~ 50/60Hz
Rated Wattage	1500W
Capacity	26L

HEATING/FUNCTION & TEMPERATURE KNOB

- Select cooking mode using the Heating/Function Knob
- Use the temperature knob to select the desired cooking temperature.

PLACE THE FOOD ON GRILL RACK OR FOOD TRAY AND CLOSE THE OVEN DOOR

- Do not place food on paper or plastic container when cooking in the oven.
- Use the Food tray for smaller food items that is likely to drip while cooking.
- Place food evenly on the grill rack.

INSERT THE POWER PLUG INTO THE POWER SUPPLY.

- Select the desired cooking function and temperature.
- When cooking is finished, turn the Timer knob to "0" position.
- Detach power plug from the power supply after cooking.

Note: The weight of the food placed on the Food Tray/Grill Rack should not exceed 3.5kg (as a reference) to ensure & maintain even cooking. It is also important to place food on the Food Tray/Grill Rack evenly for best cooking results.

TEMPERATURE CONTROL

- Choose the desired temperature from 100°C to 250°C for cooking.

FUNCTION CONTROL

- This oven is equipped with different positions for a variety of cooking needs:

(OFF) NO operates for all.

() Operates upper heating.

() Operates lower heating.

() Operates both upper & lower heating.

() Operates upper heating & convection.

() Operates both upper & lower heating & convection.

TIMER CONTROL

- 60mins timer. You can set the time by turning the control clockwise. This function activates a notification sound at the end of the programmed time.

ALWAYS UNPLUG OVEN AND ALLOW TO COOL BEFORE CLEANING MAINTENANCE:

MAINTENANCE:

- This appliance has been designed to operate for prolonged periods with minimum maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.
- **WARNING:** Always disconnect appliance from the power supply before performing any maintenance or cleaning tasks.

CLEANING:

- To protect against the risk of electrical shock, do not immerse the unit, power cord or power plug in water or other liquids.
- Use a damp cloth to wipe over the exterior surface of the appliance.
- The oven features a Quick-Clean internal coating which can be cleaned using a damp cloth moistened with mild detergent to wipe.
- Wash all accessories in hot sudsy water or in a dishwasher.
- Wipe the door with a clean damp cloth, and dry with a paper or cloth towel. Clean exterior with damp cloth.

DO NOT USE ABRASIVE CLEANERS ON ANY PART OF THIS APPLIANCE. ALWAYS UNPLUG THE OVEN FROM THE POWER SUPPLY AND ALLOW TO COOL BEFORE CLEANING.

DRY ALL PARTS AND SURFACES THOROUGHLY BEFORE OPERATING!