

 **Mórgan®**

Market Expansion  
Services by  
[www.dksh.com.my](http://www.dksh.com.my)



 
**DKSH**

E-mail: [electrical.appliance@dksh.com](mailto:electrical.appliance@dksh.com)  
[www.morgan.my](http://www.morgan.my)

 [facebook.com/morganappliances](https://facebook.com/morganappliances)

 **Mórgan®**

## USER MANUAL

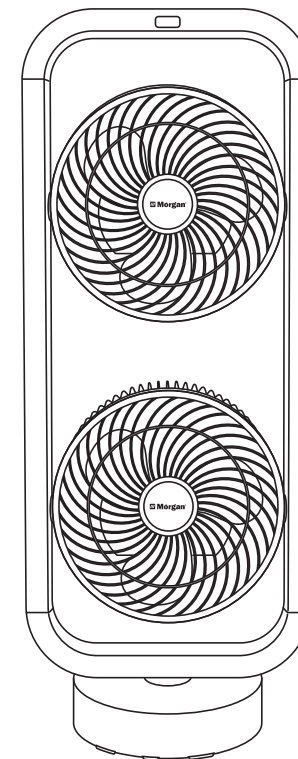

## Circulation Fan

**MFQ-D2RC**

# C O N T E N T S

**4** IMPORTANT SAFETY PRECAUTIONS

**5** PARTS IDENTIFICATION

**6** OPERATION INSTRUCTIONS

**6** SPECIFICATIONS

**7** CLEANING & MAINTENANCE

 
Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new product. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

## IMPORTANT SAFETY PRECAUTIONS

1. Read all instruction carefully and keep this manual for future reference.
2. To avoid electric shocks, do not immerse the power cord, power plug or the appliance in water or any other liquids.
3. Close supervision is necessary when the appliance is used by or near the children.
4. Unplug the power plug from the power supply when not in use and before cleaning.
5. Do not operate the appliance with a damaged power cord or power plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to our authorized service centre for examination.
6. Do not allow the power cord to hang over the edge of a table or counter or come into contact with hot surfaces. Do not place the appliance on unstable or cloth covered surfaces.
7. Always inspect the power cord & power plug and check for defects before using them. Examine the body for signs of cracks or other faults. Contact the nearest authorized dealer or a similarly qualified technician for assistance should you discover any anomalies.
8. Always unplug the appliance from the power supply before moving or not in use.
9. Do not operate the fan in a high humidity area where the temperature is higher than 40°C or in a dusty area.
10. Do not insert fingers or foreign objects into the fan during operation. This is especially important when operating the appliance near young children.
11. Do not direct the fan at children or the elderly for prolonged period of time to avoid serious health issues.
12. Do not directly spray detergent or water-based insect repellants into the fan during operation to avoid damaging the fan's plastic components.
13. This appliance is intended for household use only. Do not use it outdoors or for commercial or industrial purposes.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that do not play with the appliance.
16. Always disconnect the appliance from the power supply before cleaning or for routine maintenance purposes.
17. If the power cord is damaged, it must be replaced by the sole distributor, its service agent or similarly qualified persons in order to avoid a hazard.
18. Always ensure that the fan is switched off from the power supply before removing the protective housing.
19. Only operate the appliance on a 220-240VAC, 50-60Hz power supply.
20. Do not operate the fan near flammable items and fumes.
21. Do not place the fan or any parts near an open flame, cooking or other heating appliances.
22. Do not hang or mount the fan on a wall or ceiling.
23. Do not use the fan if the housing is damaged in any manner.


## PARTS IDENTIFICATION

1. Receiver
2. Front cover
3. Fan blade
4. Body
5. Base
6. Control panel
7. Back cover

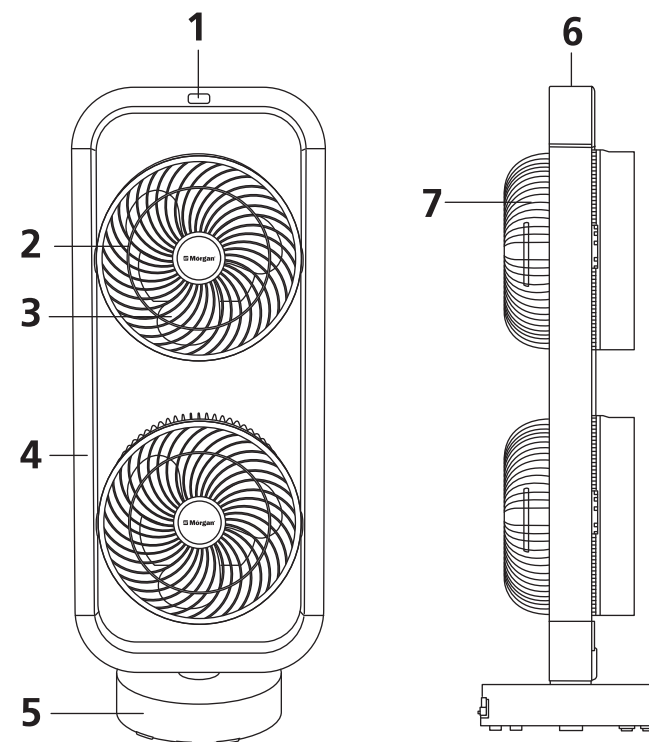

### CONTROL PANEL

 1. ON/OFF
2. Low speed
3. Mid speed
4. High speed
5. Nature Mode
6. OSC
7. Timer
8. Sleep Mode

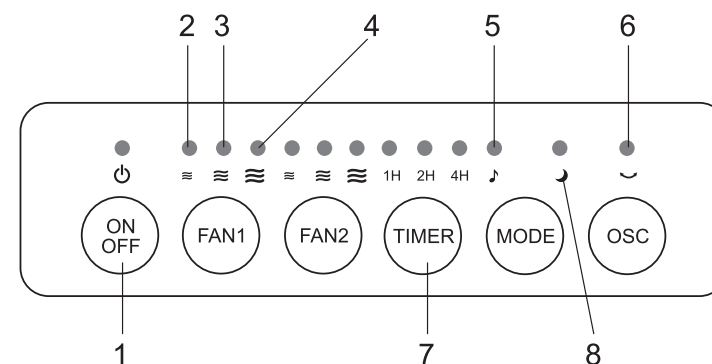

## OPERATION INSTRUCTIONS

Ensure that the household's voltage corresponds with the appliance's rated specification specified on the base & plug into a 220-240V~, 50-60Hz power supply.

### ON/OFF

Insert the power plug into the power supply. A notification alarm will sound. Press the "ON/OFF" button and the appliance will begin to operate in LOW-speed.

### SPEED

This appliance features 3 speed levels: LOW-MID-HIGH.

The indicator light will illuminate when a speed is selected.

( ≡ ) Indicates LOW speed.

( ≡ ) Indicates MID speed.

( ≡ ) Indicates HIGH speed.

### TIMER

You can set the timer for minimum 1 hour & maximum 7 hours. Every subsequent pressing of the timer button will add one hour to the timer function:

1H-2H-3H.....7H-0H-1H.....

The indicator light will illuminate when the timer button is pressed.

### MODE

By pressing the mode button you can switch between normal (constant) wind speed, natural or sleep mode. The control panel will indicate the working mode of the unit by illuminating the chosen mode. If no indicator light is illuminated, the fan is working in normal mode.

### OSC

Press the "OSC" button once to oscillate the fan automatically to the left and right. Press again to stop the oscillation function. The vertical and horizontal angles of the fan head can also be adjusted manually.

 
- **All three fans can be controlled independently.**
- **Remove the power plug from the power supply if it is not going to be used for a prolonged period of time.**

## CLEANING & MAINTENANCE


**WARNING: ALWAYS UNPLUG THE UNIT FROM THE POWER SUPPLY BEFORE MOVING OR SERVICING. DO NOT IMMERSE THE POWER CORD, PLUG AND THE ENTIRE UNIT INTO WATER OR ANY OTHER LIQUIDS NOR RINSE IT UNDER A RUNNING TAP!**

**Caution: Do not use detergent, gasoline, benzene, thinner, or other solvents to clean the unit to avoid damaging the appliance.**

1. Remove the power plug from the power supply before disassembling the fan for cleaning.
2. Remove the three screws from the back cover and then twist the front cover to the left to detach it.

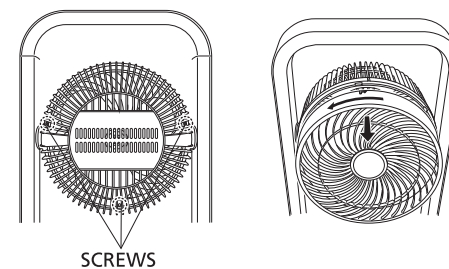

 3. Twist the fan blade screw to the right and detach the fan blade.
4. Proceed to clean the fan blade.

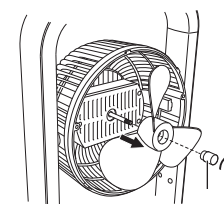

5. Ensure all parts are thoroughly dry before reassembly.

## SPECIFICATIONS

Model	MFQ-D2RC
Rated Voltage / Frequency	220-240V~ 50-60Hz
Rated Wattage	70W
Product Size (mm)	275 x 196.5 x 699