 


 **Mórgan®**

USER MANUAL

 **Mórgan®**

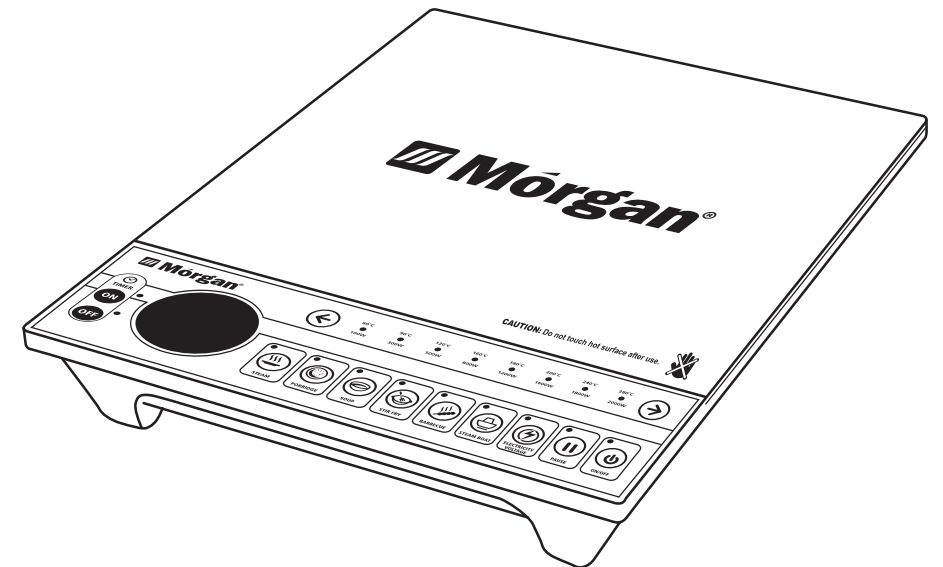

Induction Cooker

MIC-BB20EC

Market Expansion
Services by
www.dksh.com



E-mail: electrical.appliance@dksh.com

C O N T E N T S

3 Important

4 Instructions For Use

5 Trouble Shooting

6 Usable and Non-usable Utensils

6 How To Clean

6 Specifications

INSTRUCTIONS FOR USE

1. ON/OFF SWITCH

- Connect power supply. The buzzer will sound, indicating that the induction cooker is on standby mode and the fan will begin operation. The display show “- - -”, If there is no operation, induction cooker will automatically switch off.

* Start up functions: press the On/Off button or any function key, the buzzer sound if there is no pot on the heating plate. If there is still no pot on the heating plate, the buzzer will sound for 30 seconds and the fan will work for one more minute then automatically switch off. If a pot is placed on the heating plate, the unit will resume start up operation.

2. STEAM

- When power is on, select the “Steam” function and the respective indicator light will illuminate.

3. PORRIDGE

- When power on, select the “Porridge” function, the respective indicator light will illuminate.
- When the congee is finished, the screen will display “End”. It will automatically switch to “Keep Warm” mode for 2 hours with the respective indicator light illuminated.

4. SOUP

- When power on, select the “Soup” function and the respective indicator light will illuminate
- When soup is finished, the screen will display “End”. It will automatically switch to “Keep Warm” mode for 2 hours with the respective indicator light illuminated.

5. STIR FRY

- When power on, select the “Stir Fry” function, the respective indicator light will illuminate.
- Adjust the temperature accordingly.

6. BARBECUE

- When power on, select the “Barbecue” function, the respective indicator light will illuminate.
- Adjust the temperature accordingly.

7. STEAM BOAT

- When power is on, the cooker will enter the steam boat mode and the “Steam Boat/Power” light will illuminate.
- Adjust the power
- Press the “Timer”, set the time for power off. The screen will display the remaining time before power off. If required, you may revise the set time for power off.

8. ELECTRICITY VOLTAGE

- When the induction cooker is working, press “Electricity Voltage”, the display show the electricity voltage from start up till now, Press “electricity voltage” again to display current voltage for about 10 seconds before reverting to normal operation mode.

9. PAUSE

- When the induction cooker is on “Stir Fry” or “Steam Boat” modes, pressing the “Pause” key will halt the operation. The display will show “STOP”. Press “Pause” again to resume operation.


TROUBLE SHOOTING

PROBLEM	POSSIBLE REASONS	SOLUTIONS
E1	The induction cooker is left on without a pan or with an incompatible pan.	The unit will automatically shut down and will only operate again when the right or compatible pot is in used.
E2	Induction heat emitter has overheated (>105°C)	The unit will operate again once the PCB board has cooled down and back to room temperature.
E3	Supply voltage exceeded 270V	The unit will operate again when supply voltage is back to normal.
E4	Supply voltage is lower than 145V	The unit will operate again when supply voltage is back to normal.
E5	Thermal sensor has overheated.	Switch off the unit and let the unit to cool down until the thermal sensor is back to room temperature.
E6	The inner pot has overheated	Switch off the unit and let the unit to cool down before operating again. (Note: BBQ & Stir fly function is without this feature.)
E0	Inner Circuit Malfunction	Switch off the unit and send back to nearest authorized service agent.

USABLE AND NON-USABLE UTENSILS


1. USABLE PANS

Steel, cast iron, enamelled iron, stainless steel, flat-bottom pans/pots with 12 to 26cm diameters.

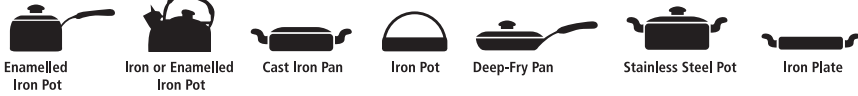

2. NON-USABLE PANS

Heat-resistant glass, ceramic container, copper, aluminium pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.

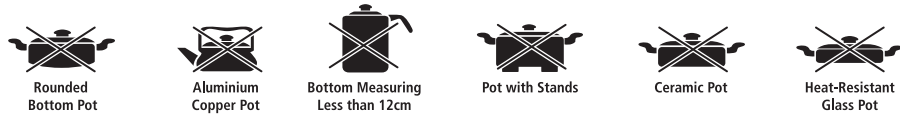

HOW TO CLEAN

- 1). Disconnect plug and wait until the unit has cooled down completely. Clean after every use.
- 2). Discolouration or stains may appear if pots/pans used are not clean.
- 3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- 4). Use only a damp, clean cloth with a bit of mild dish washing agent to clean the unit's exterior.
- 5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- 6). Do not immerse the unit in water or other liquids as this may result in malfunctions).

SPECIFICATIONS

MODEL	MIC-BB20EC
RATED VOLTAGE / FREQUENCY	220-240V~ 50/60Hz
RATED WATTAGE	2000W

IMPORTANT

Please read the following instructions carefully before using the induction cooker.

1. Do not insert power cord into power outlet with wet hands.
2. Do not plug into a socket where several other appliances are plugged in.
3. Do not use if the power cord is damaged or the power plug does not fit the socket securely.
4. Do not modify the parts, or repair the unit by yourself.
5. Do not use the unit near open flame or wet places.
6. Do not use where children can easily touch the unit, or allow children to operate the unit by themselves.
7. Do not place on unstable surfaces. Always place on solid and level surfaces.
8. Do not move the unit when the pot or the pan is on it.
9. Do not place an empty pot on the heating plate or overheat the pot.
10. Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminium foils on the heating plate.
11. Operate the unit with sufficient ventilation around it. Keep the front and the right or left side of the unit free from any obstruction.
12. Do not operate the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
13. Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
14. If the surface is cracked, please switch off and have it inspected at your nearest authorized service center immediately.
15. Do not block the air intake or exhaust vent.
16. Do not touch the heating plate right after removing the pot or the pan, as the heating plate will still be very hot.
17. Do not place the unit close to objects sensitive to magnet, such as: radios, televisions, automatic-banking cards and cassette tapes.
18. The power cord must only be replaced by qualified technicians.