




USER MANUAL

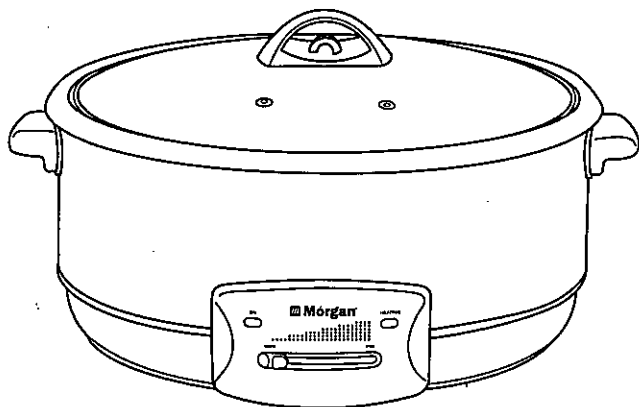

Multi-function Cooker


MMC-1380L

MMC-1500L

CONTENTS

- 1 Parts Identifications
- 1 Specifications
- 2 Safety Precautions
- 3 Before Using Your Multi-function Cooker
- 4 Operating Instructions
- 4 Care and Cleaning

PARTS IDENTIFICATION

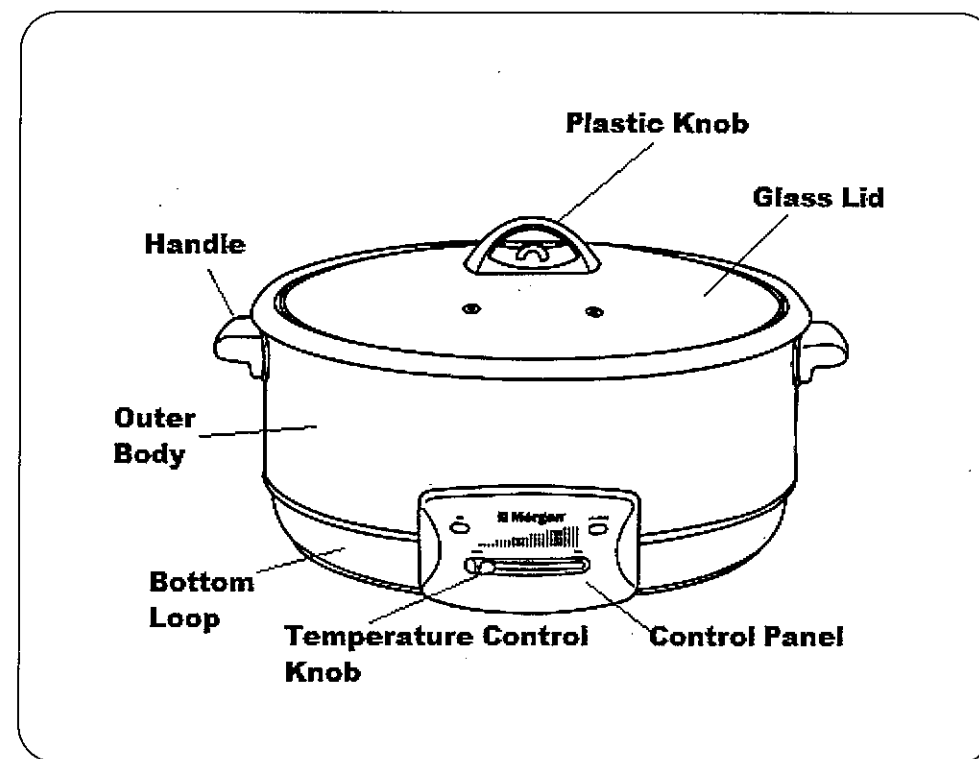

SPECIFICATIONS

MODEL	MMC-1380L	MMC-1500L
RATED VOLTAGE / FREQUENCY	220-240V~, 50Hz	220-240V~, 50Hz
RATED WATTAGE	1200-1420W	1650-1960W
CAPACITY	3.8L	5.0L

SAFETY PRECAUTIONS

When using the appliance, especially when children are present, basic safety precautions should always be followed including the following:

1. Read all instructions carefully before using the appliance.
2. Do not touch hot surfaces. Use handle or knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse cord, plug in water or other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the Service Center for examination, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a microwave oven.
9. When operating the cooker, provide space on all sides of the cooker to allow for adequate air circulation.
10. Unplug from power outlet when not in use and before cleaning. Allow to cool before attaching on or detaching and before cleaning.
11. To disconnect, switch the control switch to the left, then remove the plug but never pull the cord.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Do not use hard scrubbing brush to clean as it may damage the non-stick coating.
14. A fire may occur if the cooker is covered or come into contact with flammable materials including curtains, draperies, wall and the like, when in operation.
15. Do not store item on cooker during operation.
16. This appliance has a tempered, safety glass lid. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break but the pieces will not have sharp edges.

SAFETY PRECAUTIONS

17. NEVER put the removable pot on other heating sources for any types of cooking.
18. NEVER cook directly on a heating plate. Use the removable pot.
19. Always lift the glass lid away from you as there is steam trapped beneath the lid.
20. Place the air vent side of lid away from power point switch.
21. To prevent outbreak of fire, do not place easily flammable materials such as cloth, plastic cloth, and etc. above or beneath the main body during operation.
22. Handle the removable pot carefully. If the unit is dropped or knocked, contact between the pots and heating plate may no longer be sufficient, causing the unit to malfunction.
23. This appliance is not intended for outdoor use.
24. Do not use appliance for other purpose than its intended use.

BEFORE USING YOUR MULTI-FUNCTION COOKER

1. Remove spatula, removable pot, wash them in warm soapy water and dry thoroughly before use.
2. A "trial run" at high temperature to eliminate any substance or oil that may use for testing and packing. Smoke and odour may be detected and this is normal.
3. Connect the cooker to power socket. Do not use extension cords or outlet adapters.
4. This appliance is not intended for use by persons (included children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Do not let a child play the product alone. Put it out of the reach of babies to avoid electric shock, scald and other dangerous accidents.

OPERATING INSTRUCTIONS

1. Place the removable pot on the base.
2. Keep the base of the removable pot and the surface of the heating plate clean at all times. Should any crumbs and spills be accumulated on the heating plate, clean after every use.
3. Do not switch on power when the removable pot is not placed properly to the main body.
4. Switch the temperature control to "OFF" position.
5. Plug the power plug to the power socket.
6. Adjust the temperature setting to obtain your desired cooking temperature for versatility-Roast, Stew, Steam or fry.
7. When cooking, cover the cooking pot, food will cook faster and be more tender.
8. Do not place the removable pot or the glass lid on the table as it may leave marks.
9. Food will get dry and harden if cooked too long.
10. When cooking completes, switch the temperature control to "OFF" and unplug from socket.

CARE AND CLEANING

Heating Plate and Insulate Plate

- Remove any foreign matters that are trapped between the heating plate and insulation plate. When food particles become burnt onto the heating plate, remove with fine sandpaper and wipe off with damp cloth.
- If burnt food is not removed, it will be difficult to achieve the correct temperature.

Removable Pot

- The removable pot can be immersed and washed in water.
- Oil and food particles can be best removed while pot is still warm by wiping with a paper towel.
- When the removable pot is dirty, remove it from the main body and wash in warm soapy water.
- Dry thoroughly before storing.
- If the removable pot is left with either food or water for over night, the non-stick coating will easily peel off and may rust.
- Do not use a hard scrubbing as it may damage the non-stick coating.
- Use sponge or soft cloth for washing.

CARE AND CLEANING

Ensuring a longer life span for this appliance

- Be sure to unplug from power socket before cleaning.
- Clean only after the main body and the removable pot has cooled.

Main Body

- Wipe off food residues and oil with a damp cloth. Do not wash in water.

Lid and Spatula

- The cover can be washed with warm soapy water.
- Handle glass lid carefully.

 **Mórgan®**

Market Expansion
Services by
www.dksh.com



DKSH

E-mail: electrical.appliance@dksh.com