

 **Mórgan®**

 
USER MANUAL



Mini Multi Cooker

MMC-NC3100

 **Mórgan®**

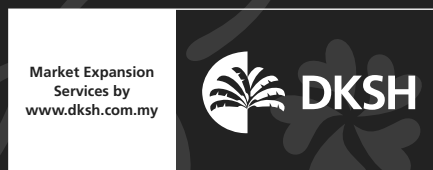

E-mail: electrical.appliance@dksh.com
www.morgan.my

 [facebook.com/morganappliances](https://www.facebook.com/morganappliances)

 
C O N T E N T S

- 3** PARTS IDENTIFICATION
- 3** SPECIFICATIONS
- 4** SAFETY PRECAUTIONS
- 5** OPERATING INSTRUCTIONS
- 6** CARE & CLEANING

Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new product. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

PARTS IDENTIFICATION

1. Transparent Tempered Glass Lid
2. LED Indicator Light
3. Slow & Quick Cook Switch
4. Steam Vent
5. Steam Tray
6. Stainless Steel Inner Pot
7. Anti-scald Plastic Body & Handle

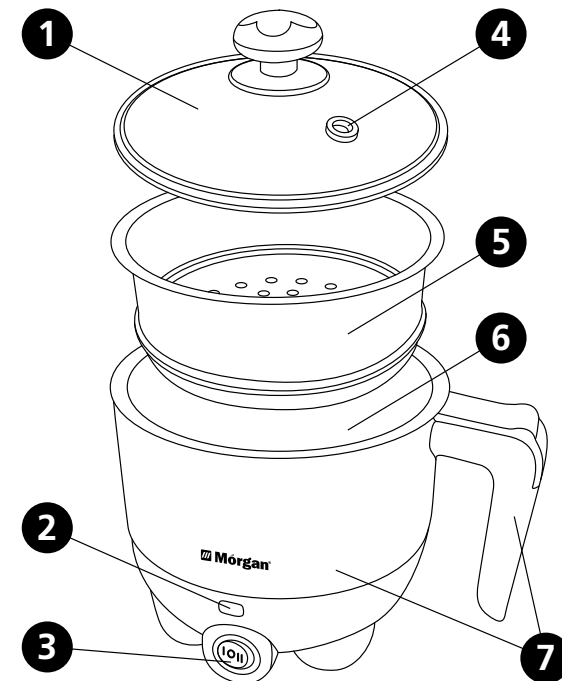

SPECIFICATIONS

MODEL	MMC-NC3100
RATED VOLTAGE / FREQUENCY	220-240V~ 50/60Hz
RATED WATTAGE	450W
CAPACITY	1.0L

SAFETY PRECAUTIONS

When using this appliance, basic precautions should always be followed, including the following:

1. Read all instructions carefully. Keep this User Manual for future reference.
2. Always unplug the appliance from the power socket before cleaning or when not in use.
3. Close supervision is necessary when operating the multi cooker near children. Ensure that the power cord does not hang over the work surface.
4. Do not use this appliance with a damaged power cord or power plug, or if it has been damaged in any manner. Return it to the nearest Authorized Service Centre for examination, repair, or adjustment.
5. Do not use the multi cooker for other than its intended use.
6. Do not operate this appliance in the presence of flammable materials such as curtains, furniture etc., and near inflammable substances such as gas, petrol etc.
7. Always detach the power plug from the power supply before cleaning.
8. Always operate the appliance on a flat sturdy surface.
9. Do not immerse the appliance in water or any other liquids, and do not spray water on it.

FOR DOMESTIC USE ONLY.

DO NOT USE THE APPLIANCE FOR OTHER THAN ITS INTENDED USE.


OPERATING INSTRUCTIONS

HOW TO COOK INSTANT NOODLES

1. Fill appropriate amount of water into the cooker pot.



2. Cover appliance with glass lid.

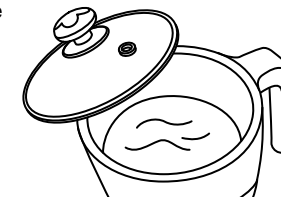

3. Connect appliance into power supply and turn switch selector to "Quick". Power indicator will illuminate*.




4. Water will begin boiling in a few minutes. Insert instant noodles into boiling water.



5. Add in desired ingredients.



6. Turn switch selector to "OFF" when complete and serve noodles.

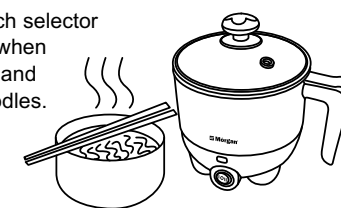


* Power indicator light will only illuminate during heating. When water is boiling, the power indicator light may power on and off intermittently to maintain boiling temperature.

BOILING EGGS

1. Fill appropriate amount of water into the cooker pot.



2. Insert eggs into the pot and cover appliance with glass lid.

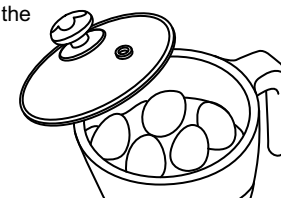

3. Connect appliance into power supply and turn switch selector to "Quick". Power indicator will illuminate* and water will begin boiling.



4. Turn switch selector to "OFF" when complete and eggs are ready to serve.



* Power indicator light will only illuminate during heating. When water is boiling, the power indicator light may power on and off intermittently to maintain boiling temperature.

CARE & CLEANING

CLEANING THE INNER POT

DISCOLORATION/STAINS	POSSIBLE CAUSES
Discoloration of inner pot	Usually caused by contents of tap water and not due to corrosion.
Reddish rust spots (stains)	Usually caused by the oxidization of iron in tap water.
Milky dark discoloration or multi-colour discoloration	Usually caused by various impurities in tap water.

HOW TO CLEAN THE DISCOLORATION / STAINS

1. Cut lemon into 4 pieces, wrap in cloth and place into the inner pot.
2. Pour in water and fill to the maximum water indicator mark.
3. Boil and allow water to stand for about 1 hour.
4. Drain water and use a soft sponge to clean discoloured areas.
5. Boil another pot of water and drain to remove lemon odour.

CLEAN WATER SPOTS

1. It is normal for brown/white water spots to appear after boiling with the cooker. Water spots are caused by the presence of minerals in the water.
2. When water is heated for long periods, minerals such as calcium will tend to accumulate on the heating elements.
3. Use either citric acid, ordinary white vinegar or lemon to remove these spots.

CLEAN CRUSTED OR FOOD BUILD-UP

1. Soak pot in warm, soapy water for a few hours or preferably overnight.
2. Alternatively, scrub vigorously using a scouring pad. Take note not to use steel wool or copper-based scrubbers and abrasive detergents as these may damage the exterior finishing.

CLEAN BODY & TOP COVER

1. Wipe body using a damp cloth.
2. Do not immerse in water or other liquids to avoid electrical damage.
3. Do not use abrasive detergents, gasoline and turpentine cleansers as these may damage the surface.
4. Wash the top cover with water or dishwasher.

STORAGE

1. Ensure appliance is thoroughly cleaned and dried.
2. Cover it with a plastic bag to prevent pests from getting into it.