


 **Mórgan<sup>®</sup>**

# USER MANUAL

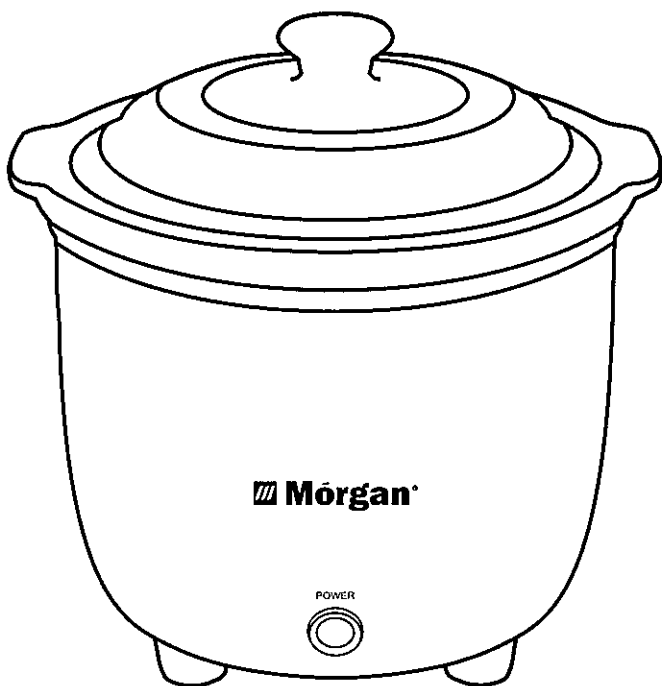

# Slow Cooker

MSC-NA07L

- 1 Parts Identifications and Specifications
- 2 Safety Precautions
- 3 How to Operate
- 3 How to Clean
- 3 Trouble Shooting

1. Switch on the power supply to turn on the appliance. The function indicator will light up, indicating that the appliance is working.
2. Put the food into the ceramic inner pot, together with proper amount of water (not exceeding 80% of the pot volume, warm water at about 70C is preferred). Place the inner pot into the main body and then put the ceramic cover on.


## HOW TO CLEAN

1. Always unplug the appliance after use and allow the appliance to cool down completely.
2. Use mild detergent and cleaning sponge to clean the ceramic cover and ceramic inner pot. Rinse and dry thoroughly.
3. Only the ceramic pot and ceramic cover can be rinsed with water. Use a damp cloth to clean other parts of the appliance to avoid damaging it.

## TROUBLE SHOOTING

1. Ensure the power cord is plugged-in correctly or when there is a power cut, or when the appliance can't work.
2. When the appliance is used to cook porridge, the porridge may spill over the edge of the ceramic inner pot. This is normal and can be rectified by rising the ceramic cover and leave a gap when the water

## PARTS IDENTIFICATION AND SPECIFICATIONS

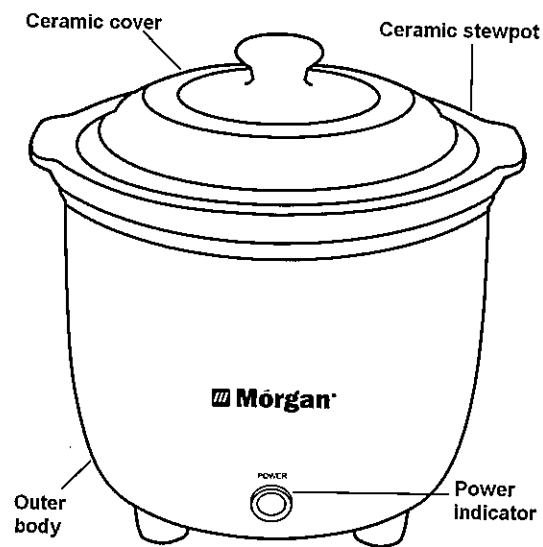

## SPECIFICATIONS

<b>RATED VOLTAGE / FREQUENCY</b>	<b>220-240V~, 50Hz</b>
<b>RATED WATTAGE</b>	<b>64-76W</b>
<b>CAPACITY</b>	<b>0.7L</b>

## SAFETY PRECAUTIONS

1. Do not use the appliance on/near carpet or plastic surfaces, which may lead to accidents.
2. Do not leave appliance unattended when plugged in. Switch off the Mains when appliance is not in use.
3. Avoid immediate cooling or immediate heating of the ceramic inner pot or the ceramic cover. Do not put them into water immediately after stewing (to avoid damage).
4. For your safety: Do not attempt to touch the surface of the unit after operating the appliance.
5. To protect against electrical shock or burns, do not immerse the unit, cord, or plug in water or other liquids.
6. Do not use the appliance outdoor.
7. Close supervision is needed when used near children.
8. Ensure the electrical cord does not hang over the table or touch hot surfaces.
9. Always place appliance on a flat sturdy surface.
10. Do not operate appliance with damaged cord, set, or plug. Any repairs should always be done by an experienced technician or by an authorized service centre.
11. Only use original accessories or equipment supplied by the manufacturer.