 




USER MANUAL

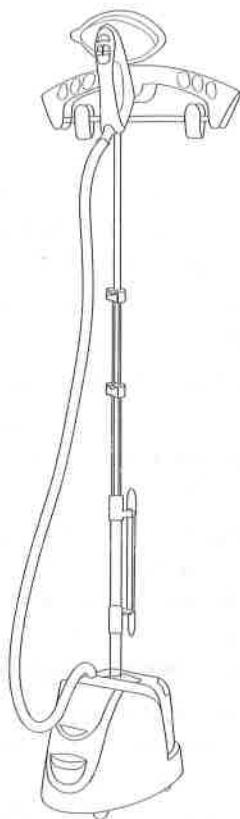

Garment Steamer

MSI-GA221C

IMPORTANT SAFETY INSTRUCTIONS

This appliance complies with the technical requirements and standards for safety currently in force (Electromagnetic compatibility, low voltage, environment...).

WARNING! The voltage of your electrical installation must correspond to that of the appliance. Connecting to the wrong voltage may cause irreversible damage to the appliance and will invalidate the warranty. When using your appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

1. To reduce the risk of contact with hot water emitting from steam vents, inspect the appliance before every use by holding it away from your body and by operating the steam button.
2. Use appliance for its intended use only.
3. Do not immerse the appliance in water or other liquids.
4. Appliance should always be turned "OFF" before plugging or unplugging from power supply. Never yank the power cord to disconnect from the power supply, instead grasp the power plug and pull to disconnect.
5. Do not allow power cord to touch hot surfaces. Allow the appliance to cool completely before storing. Loop cord loosely around appliance when storing.
6. Do not direct steam at people or animals, or use steamer on garments while they are being worn.
7. Always disconnect appliance from power supply when filling with water, emptying or when not in use.
8. Do not operate appliance with a damaged power cord, or if the appliance has been dropped or damaged. To reduce the risk of electrical shock, do not disassemble or attempt to repair the appliance yourself. Instead – have it taken to an authorised service centre for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used.
9. This appliance is not intended for use by or near children and other persons whose physical, sensory or mental capabilities or lack of experience and knowledge prevents them from using the appliance safely without supervision or instruction by a responsible person to ensure that they can use the appliance safely
10. Children should be supervised at all times to ensure that they do not play with the appliance.
11. Burns could occur from touching hot metal parts, hot water or steam. Exercise caution when emptying a steam appliance, as there may be residual hot water inside the tank or the appliance.

IMPORTANT SAFETY INSTRUCTIONS

12. Remove the water tank only when it is empty.
13. Never drop or insert any object into the vents or hose.
14. Always keep the hose and nozzle elevated above the water tank.
15. Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in. Use the stand provided.
16. Exercise caution when changing attachments, as they may contain hot water caused by condensation. Ensure the attachments are cooled off to avoid contact with hot water.
17. The use of accessory attachments other than those provided is not recommended and may result in fire, electric shock or personal injury.
18. This unit is for indoor use only.
19. Do not cut or attempt to extend the steaming hose.
20. To prevent the appliance from overheating, assemble all attached garment telescopic rod and extend it to the highest position to hang clothes on garment hook.

SPECIAL INSTRUCTIONS

To avoid a circuit overload, do not operate another high wattage appliance on the same circuit. If an extension cord is absolutely necessary, a 15-amp rated cord should be used. Power cords rated for less amperage may overheat. Care should be taken to organize the power cord so that it cannot be pulled or tripped over.

SPECIFICATIONS

MODEL	MSI-GA221C
RATED VOLTAGE / FREQUENCY	220-240V~ 50/60Hz
RATED WATTAGE	2000-2400W

SAVE THESE INSTRUCTIONS

FEATURE

- Fast heating time: 1.5min
- Removable transparent water tank (2600c.c.)
- Adjustable steam rate (from 15g/min-40g/min)
- Easy fill water tank
- Adjustable temperature knob
- Thermal block boiler
- Continuous steam
- Steam ready light
- 90 degree rotary iron steam head
- Brushing set for Garment care
- Folding hanger
- Cord swivel hook
- Foot operated power switch

GARMENT STEAMER ASSEMBLY

Pole assembly

1. Place the base on the floor and fill the water tank.
2. Insert the telescopic pole into the base and turn the locking ring to secure it into place.
3. Fit the hook onto the top of the pole.
4. Insert the hanger into the hole located on the pole and secure it tightly.
5. Place the steam head on the hook.

FUNCTIONS OF THE ROTARY HANGERS

Fabric brush assembly

1. Insert the fabric brush into the holes located on the steam head.
2. Before removing the fabric brush, ensure that the appliance is unplugged and completely cool.
3. Pull the brush out of the steam head to remove it.
4. Ensure unit is unplugged and completely cool before attaching the accessory.

SAVE THESE INSTRUCTIONS

FILLING THE WATER TANK

 
 
1. Ensure that the steamer is unplugged.
2. Remove the water tank from the base of the appliance by pulling the handle upwards. Unscrew the tank cap and fill the tank.
3. The steamer is designed to be used with TAP WATER.
4. If the water in your area is hard, we recommend that you mix half tap water and half distilled water, which reduces the hardness. You may also use bottled spring water or distilled water only.
5. After securing the cap, turn the tank down and hold it by the handle. Ensure that no water is leaking through the cap.
6. Place the water tank on the base. Ensure the water tank is placed correctly.

IMPORTANT

Never use water that contains additives such as starch, perfume, aromatic substances, softener, etc. in the steamer. Additives such as these can affect the properties of the steam and lead to the formation of deposits.



OPERATING INSTRUCTION

1. Only operate the steamer on the flat surfaces clear of any materials which may obstruct the base of the steamer (flat and horizontal surface). Do not obstruct the vents on the lower part of the appliance. If necessary, expand the pole to the desired height by unlocking it, pulling it gently and locking it again.
2. Load the steam brush into the soleplate when necessary (fig.1); the brush is able to remove lint easily.
3. Plug in the power cord, press the foot operating switch (fig.2), and the power light will on.
4. The steam will be ready for operation in 90 seconds.
5. Place the garment directly onto the hanger or on another hanger if necessary.
6. Grasp the steam head with the steam vents pointing away from you. Press the steam trigger under the handle, then start steaming by brushing material lightly with the grain of the fabric in an up/down vertical motion. The fabric brush opens the weave of the fabrics for better steam penetration.

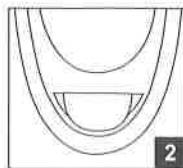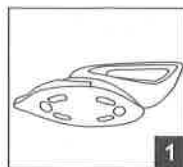


OPERATING INSTRUCTION

  7. Start at the top the garment and gradually move downward.
8. For best results, we recommend to pull the garment downward with your free hand while steaming. Be careful not to come into contact with the hot steam.
9. For ironing purposes, rotate the sole plate (fig.4) to the desired angle, and the steamer with the hot sole plate will be a regular steam iron.

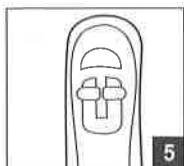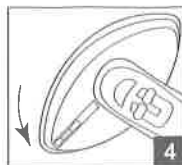

 10. Press the temperature or steam buttons on the handle (fig.5) to adjust the soleplate temperature and steam rate for different kinds of fabric

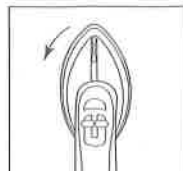

TIP: STEAM TRIGGER CAN BE LOCKED FOR CONTINUOUS STEAM (fig.3).

- Exercise caution and avoid any prolonged contact with the steam.
- The hose and steam head may become hot during use.
- Do not allow the steamer to run dry.
- Do not load or take off steam brush while soleplate was hot.
- Do not press the soleplate into garment while steam brush is on.

AFTER USE

1. After using the steamer, switch the power off. Once the power indicator light is turned off, you can unplug the appliance from the power supply.
2. Hang the steam head in an upright position on the hook when not in use.
3. Empty and rinse the water tank each time before storage in order to flush out any remaining water.
4. Wrap the cord around the power cord clips.
5. Do not carry the steamer by the water tank handle.

CAUTION: Never touch the steam head until it has cooled down completely

MAINTENANCE AND CLEANING

1. Clean the main unit with a damp cloth. To maintain maximum performance, your steamer must be descaled occasionally. The frequency between descaling operations depends on the quality of the water and the frequency with which you use the appliance. The appliance must be descaled at least once a year or after 50 hours of use.
 2. To carry out a descaling operation, follow the following steps:
 - i) Ensure that the appliance has cooled down completely.
 - ii) Fill the water tank with fresh water and place it on the main unit allowing water to fill the boiler.
 - iii) Remove the tank from main unit and empty the water from the boiler through the same way the water goes inside.
 - iv) Repeat steps 2 and 3 several times until the scale has been removed.
- **Don't fill the boiler by the steam head holes!**
 - **Never immerse the steam head in water!**

TIPS

1. We recommend to refer to the garment care label for manufacturer's recommendations before steaming. We also recommend testing the garment on an unobtrusive area such as an inner seam before steaming.
2. Read the manufacturer's recommendations for the maintenance of the fabrics on the labels of the clothing to be steamed.
3. Test the strength of the colour of the fabric on an area of the garment that is not visible (inside of a hem).
4. Avoid contact between the steam head with silk or velvet.
5. Certain garments are smoothed more easily on the reverse side.
6. If you are using the steam head at a position close to the ground, raise the hose frequently in order to avoid the formation of condensation. You may hear a gurgling noise if the hose is obstructed in any way.
7. Heavy fabrics may need to be steamed longer.
8. Exercise caution at all times.

ENVIRONMENTAL PROTECTION FIRST!

Your appliance contains valuable materials which can be recovered or recycled. When disposing, take it to a collection point or an approved service centre.


 **Mórgan®**

Market Expansion
Services by
www.dksh.com



DKSH

E-mail: electrical.appliance@dksh.com
www.morgan.my

 facebook.com/morganappliances