


 **Mórgan®**

USER MANUAL

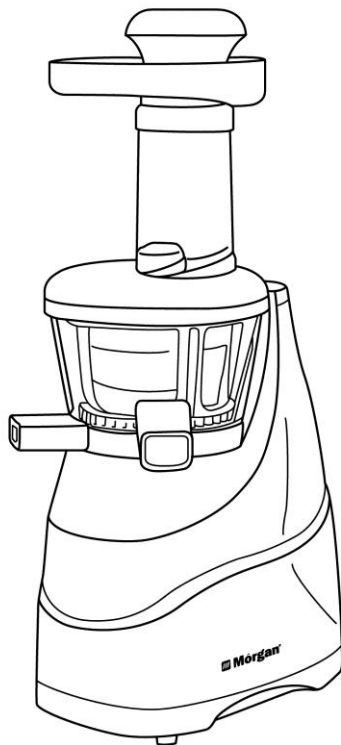

**Slow
Juicer**

MSJ-A12

CONTENTS

1 Safety Precautions

2 Parts Identifications

3 Specifications

3 How to Assemble

6 How to Use Slow Juicer




8 Care and Cleaning

SAFETY PRECAUTIONS

When using the appliance, especially when children are present, basic safety precautions should always be followed including the following:


1. Read all instructions carefully before using the appliance.
2. Check that the voltage range given on the appliance-rating label corresponds with your main voltage.
3. This appliance is suitable for normal household use only and not for commercial use.
4. This product must not be left unattended while it is connected to the main supply.
5. Use the appliance only on a level working surface.
6. Do not hold the appliance on the slant while it is working.
7. Use only the pusher to push food into the filling shaft.
8. Never put your fingers in the filling shaft.
9. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged. Return the appliance for examination, adjustments, or repair.
10. The use of attachments parts which not recommended may cause fire, electrical shock, or risk of injury.
11. Never open the cover before the motor has stopped. Never immerse the motor base in water; wipe with a damp cloth to clean it.
12. Unplug the unit when not in use and whenever you clean or move the unit.
13. To disconnect the appliance, set control to off, grip plug and pull from wall outlet. Never yank on cord.
14. Repairs on electrical appliances must only be done by authorized service personnel. Faultily, unqualified repair work may cause accidents or injury to the user.
15. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

PARTS IDENTIFICATION

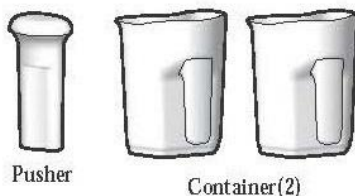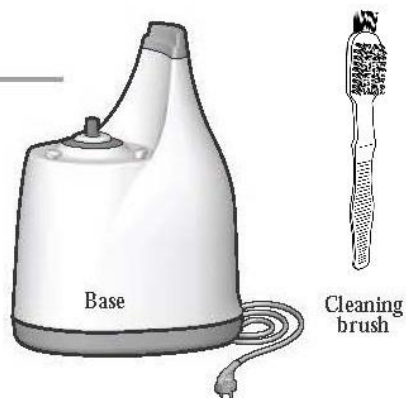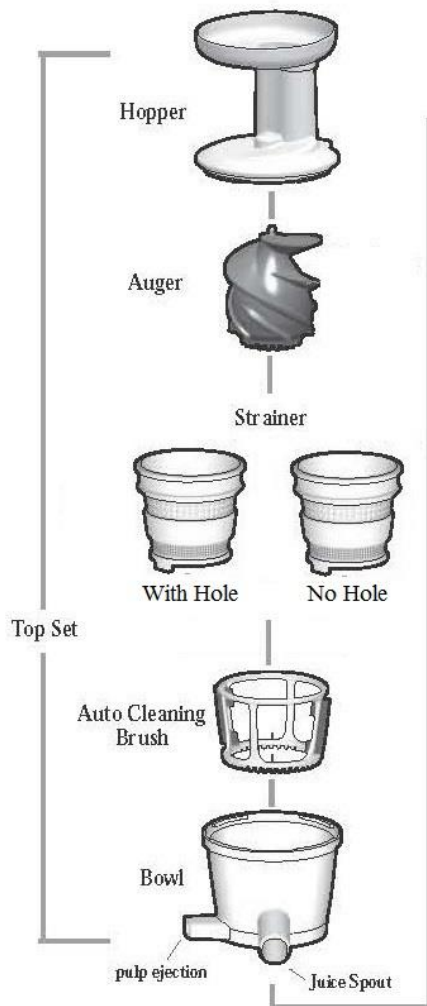

IMPORTANT

As shown below, the hopper edge must point to "close" sign on the base in order for the machine to operate properly.

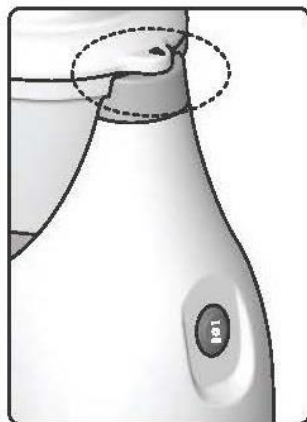

Notice

Do not pre-operate before inputting materials or do not operate with an empty bowl.

SPECIFICATIONS

RATED VOLTAGE	220-240V~
RATED POWER	150W
FREQUENCY	50Hz

HOW TO ASSEMBLE


1



Place the strainer into the auto cleaning brush. **There are 2 Strainer in this product:-**

- 1) Strainer With Holes – Use for juice extraction.
- 2) Strainer NO Holes – Use for fruit ice- cream

2

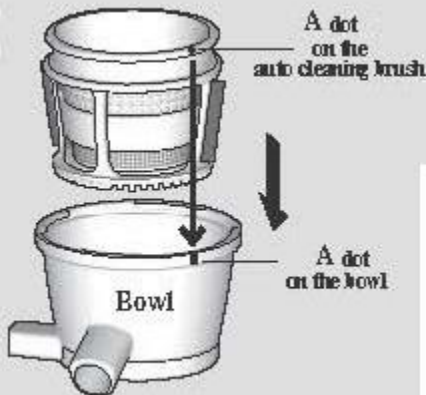


Place the strainer + the auto cleaning brush into the bowl.

3



Push in the auger into the strainer


4

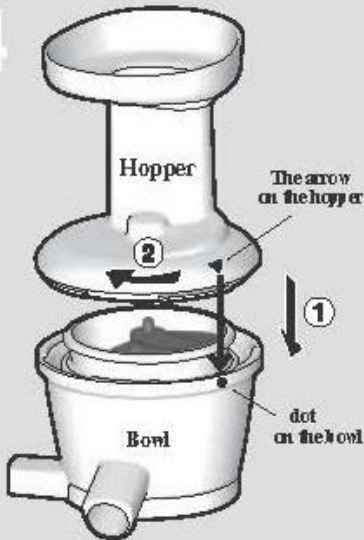

Assemble the hopper onto the bowl.

- 1) Make sure the arrow on the hopper and the dot on the bowl is aligned.
- 2) Make sure the arrow on the hopper is pointing to close sign on the base.

5

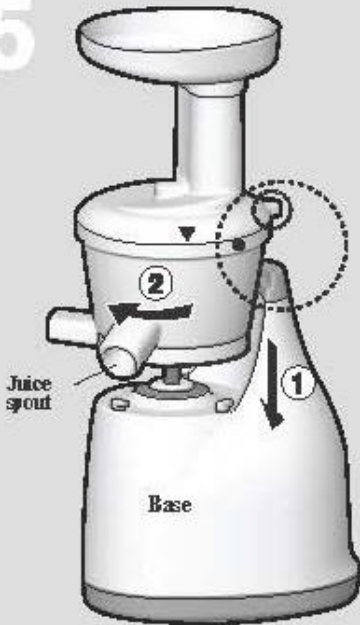

Assemble the entire top set onto the base.

As shown below, assemble the bowl onto the base and twist the bowl till the hopper edge is pointing to "close" sign.


OPEN



CLOSE




6

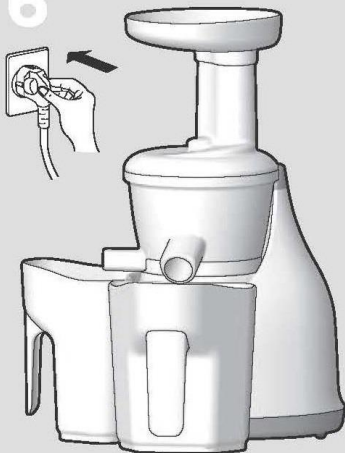

Must connect the power cord.


Place containers under both ejections. (Juice & pulp ejection)

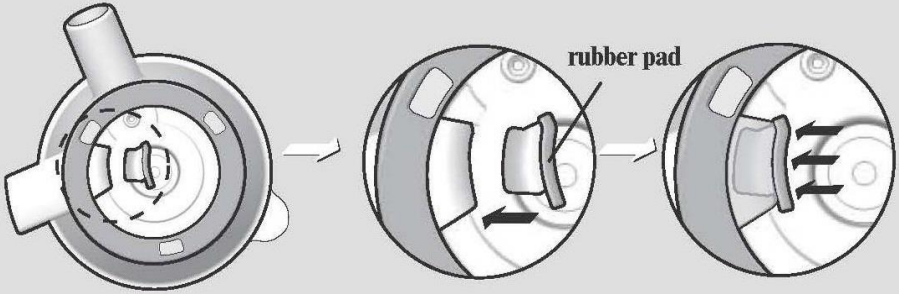

Under the bowl, there is a yellow rubber gasket which allows all the juice to only discharge from the fresh juice spout. The rubber gasket is removable, simply grip onto one of the rubber pad and pull out.

HOW TO USE SLOW JUICER


1

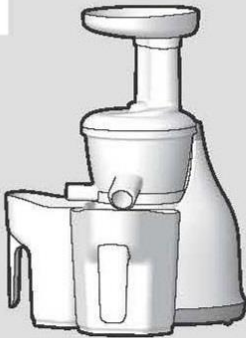

This Slow Juicer has 3 Setting.

- “On” Start motor, Start making juice.
- “Rev” is reverse. Only use when something is stuck and need to be unclog.
- “Off” Is at center position. This will turn off the slow juicer.

2

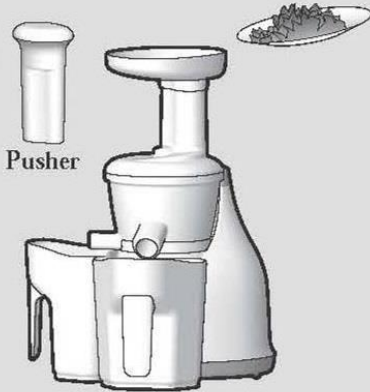

- Rinse all the ingredients thoroughly before putting into the slow juicer.
- Once the ingredients in place into the hopper, use the pusher to push.
- Always ensure to remove all the hard seeds before processing.

3



Warning

The excess juice which is not used should be refrigerated.

Do not operate the appliance with wet hands.

Do not operate the appliance before inputting the ingredients or do not operate with an empty bowl.

Warning

- 1) Do not use the appliance longer than 30 minutes at a time.
- 2) Do not use anything as a pusher such (fork, chopsticks, spoon, etc) other than the pusher itself. It may cause serious damage to the appliance.


Precautions

Fruit should not be placed in the freezer not exceed 24H, avoid prolonged freezing because it will loss the freshness of the fruit. Freezing the fruit for too long also will generating an excellent hardness to the fruit with will destruction of non-porous filter material schauburg plastic.


CARE AND CLEANING

1 Turn machine "Off".


2 Twist the hopper to unlock by grabbing the two ejections. Make sure the arrow is aligned with the open sign before pulling off the bowl.

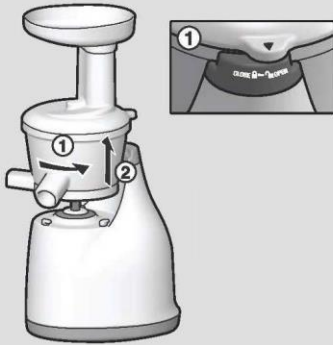

3 Order to disassemble.

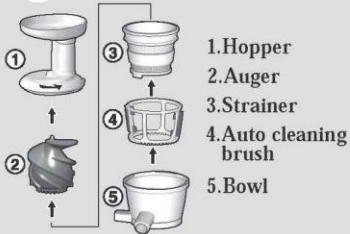


4 Use the brush to clean thoroughly after operating.

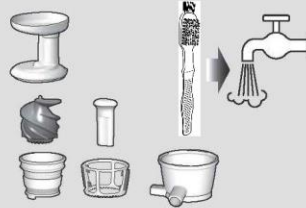

Do not use metal sponge to clean, it will damage the machine.

Do not use dishwasher to clean.

5 Do not rinse the base with direct water, use dry towel or wet towel to clean.

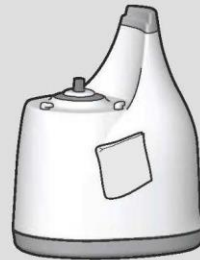

6 Please dry the attachments after cleaning.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

 **Mórgan®**

Market Expansion
Services by
www.dksh.com



DKSH

E-mail: electrical.appliance@dksh.com