


 **Mórgan®**

USER MANUAL

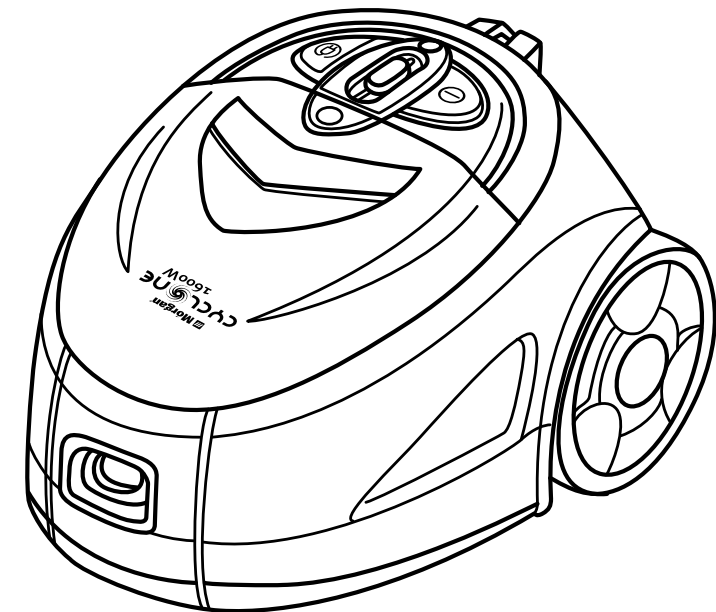

 **Mórgan®**

Market Expansion
Services by
www.dksh.com



DKSH

E-mail: electrical.appliance@dksh.com
www.morgan.my

 facebook.com/morganappliances

Vacuum Cleaner

MVC-CC1601BL


C O N T E N T S

- 3** Parts Identification
- 3-4** Important safety instructions
- 4** Important safety precautions
- 5** Vacuum Cleaner Assembly
- 5** Operating Instructions
- 6** Cleaning tools
- 6-7** Cleaning and maintenance
- 7** Troubleshooting

PARTS IDENTIFICATION

DESCRIPTION:

- Modern and elegant design
- Multiple air-filtering system assures hygienic cleaning
- Accessories: floor brush, nozzle etc.
- User-friendly wire rewriter pedal

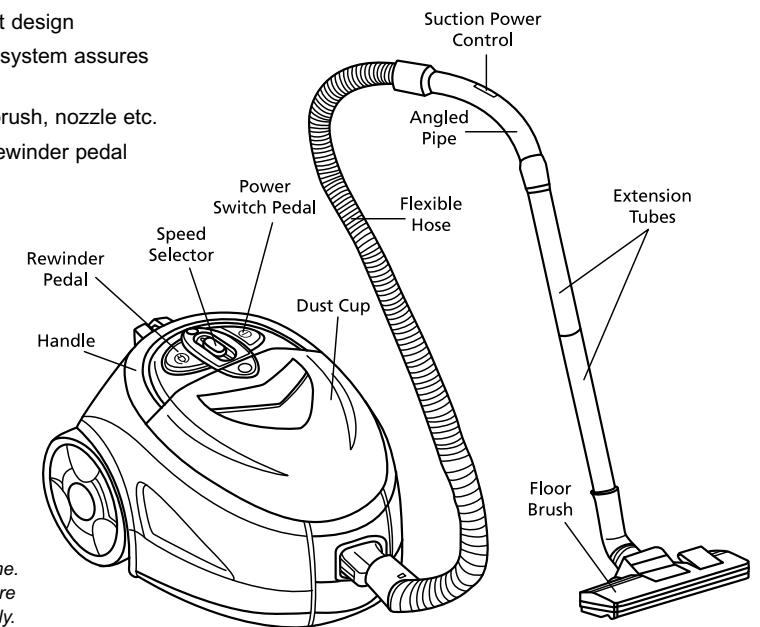


* Features are subject to change from time to time.
 * Features shown here are illustrative purposes only.

IMPORTANT SAFETY INSTRUCTIONS


- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person. This appliance is solely intended for household use only.



- Do not use for vacuuming detergent kerosene, glass, needle, cigarette ash, water etc.

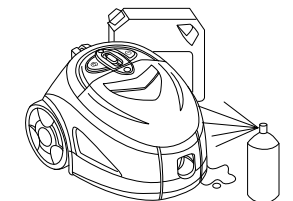


- The appliance should not be exposed to extreme heat

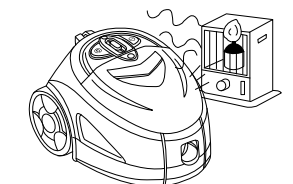


IMPORTANT SAFETY INSTRUCTIONS



- Do not vacuum any moist or liquid substances. Never immerse the appliance in water.

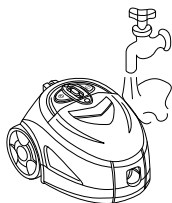

- Unplug the appliance from the power socket after every use and before cleaning.
- Pull and detach the power plug to disconnect the appliance from the power socket.

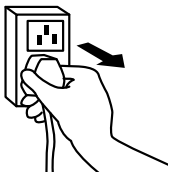


IMPORTANT SAFETY PRECAUTIONS


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.




- Do not insert any object into the vents. Do not operate appliance with any opening vents and always keep appliance free of dust, lint hair etc.

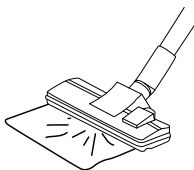

- Do not operate the appliance without the dust container or dust bag.

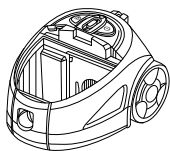

- Do not vacuum any flour, cement etc. to prevent overloads.

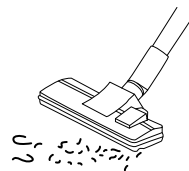


- The appliance should only be cleaned with a dry or damp cloth.
- Never immerse in water or any other liquids. Do not use any solvents for cleaning.




VACUUM CLEANER ASSEMBLY

CONNECT THE HOSE TO THE VACUUM CLEANER


- Insert flexible hose into the air-intake: press the knob until it clicks into position.
- Remove the flexible hose: unplug the appliance and press the knob at the end of the hose. Remove it from the air-intake opening.

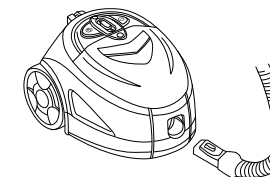

ATTACH THE TELESCOPIC TUBE TO THE ANGLED PIPE

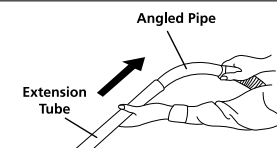


ATTACH THE FLOOR BRUSH TO THE TELESCOPIC TUBE.

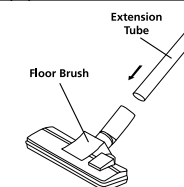


OPERATING INSTRUCTIONS


- A yellow mark on the power cord shows the ideal cable length. Do not expand the cable beyond the red mark.
- To rewind the power cord, press the rewriter pedal with one hand and guide the cord with the other hand.

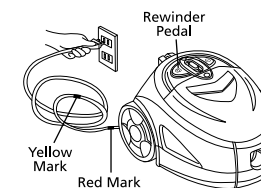


- Press the power switch to turn on the appliance.
- Use the speed selector to control the suction power of the cleaner.

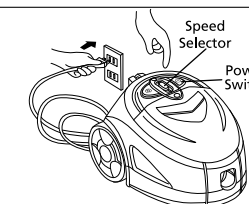

- Alternatively, the suction power can be adjusted using the sliding control on the angled pipe.

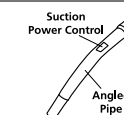


- Place the telescopic tube into the fixing hook of the appliance when appliance is not in use.
- Caution: Do not move the appliance when the telescopic tube is still attached to the fixing hook.

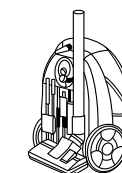

CLEANING TOOLS


CREVICE TOOL

- For cleaning difficult to reach places such as corner edges, drawers, gaps, keyboards, bookshelves or windows.

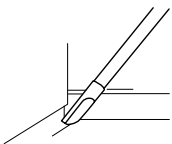


CONVERTIBLE BRUSH

- Turn the crevice tool 90° and attach it to the extension tube. This tool is ideal for cleaning beds, sofa, couch etc.

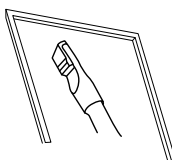


USE OF THE SELECTOR ON FLOOR BRUSH

- Bristles extend for carpets. Bristles retract for solid, hard floors

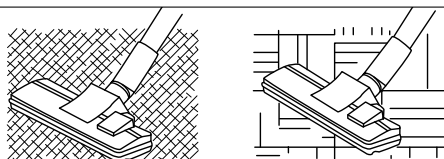

IF THE ANGLED PIPE IS BLOCKED


- Insert it into the air-intake and switch the appliance on to release blockage

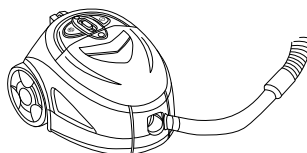

CLEANING AND MAINTENANCE


EMPTYING THE DUST CONTAINER

- After removing the flexible hose, press the cover lock button and open the dust container.
- Remove the dust filter from the container.
- Close the dust container until it is firmly locked to position.

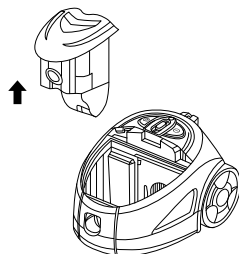


REPLACE THE MOTOR FILTER

- Open the dust container and remove the motor filter. Fix the new filter in the position

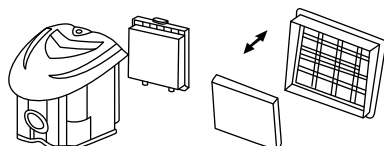


REPLACE THE OUTLET FILTER

- Detach the grille by pulling firmly away from the appliance, remove the outlet filter and replace the new filter. Fix the grille again.

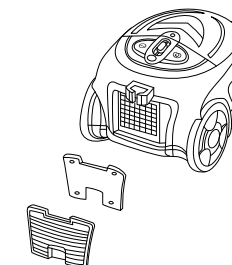


CLEANING THE HEPA FILTER

- Clean the filter in water and allow them to dry completely before replace them.

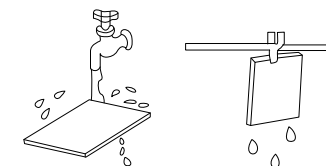

CLEANING THE DUST CUP

- Clean dust cup with water and a little detergent (if needed). Allow the filter to dry completely before replacing

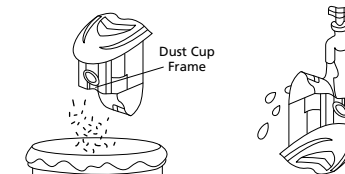

TROUBLESHOOTING

Before you contact our service centre, please ensure the following:

PROBLEM	POSSIBLE REASON(S)	ACTIONS
Motor does not start	<ul style="list-style-type: none"> Power cord not firmly plugged into power outlet Power outlet damaged 	<ul style="list-style-type: none"> Plug unit firmly Check the power outlet Switch on the appliance
Suction power is weak	<ul style="list-style-type: none"> Unit is clogged Dust filter needs cleaning Dust container not securely positioned Filter is blocked 	<ul style="list-style-type: none"> Remove the blockage Clean the dust filter Close the dust container Clean the filter
The power cord cannot be wound completely	Cord may be twisted or detached from the winding wheel	Draw the wire a little then rewind
The power cord wire cannot be released	Cord may be twisted or detached from the winding wheel	Press the rewinder button and try again
Speed selector does not function	Appliance is defective	Return the appliance to an authorized service centre
Power cord winds back unexpectedly	Rewind mechanism is defective	Return the appliance to an authorized service centre
The dust container can not be closed	Dust filter is not in the position	Reposition the dust filter and retry

WARNING:

If the supply cord is damaged, have it replaced by the manufacturer, service agent or a similarly qualified person.