 



 **Mórgan®**

 **Mórgan®**

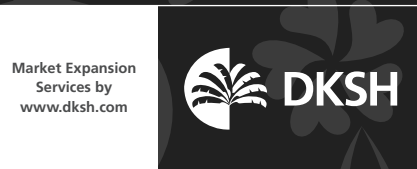

E-mail: [electrical.appliance@dksh.com](mailto:electrical.appliance@dksh.com)  
[www.morgan.mv](http://www.morgan.mv)
 
## USER MANUAL

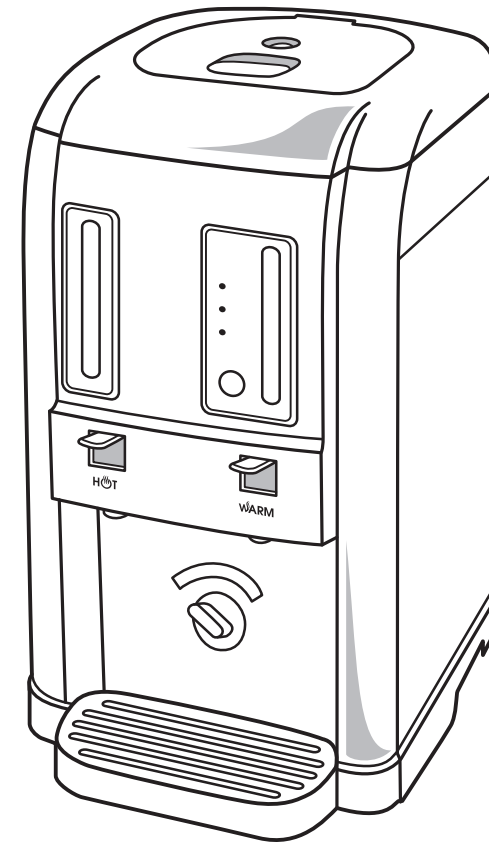

# Water Dispenser

**MWD-BA80L**

## BOILING FUNCTION

1. To obtain 100°C boiling water, push the re-boil button.
2. When re-boiling is in operation, pushing the re-boil button will not repeat subsequent re-boiling. This safety feature is to avoid damaging the unit.
3. The “Boiling” light will illuminate when boiling is in operation.

## MAINTENANCE

1. Always keep the exterior of the unit dry and clean at all times.
2. Do not immerse the unit into water or any other liquids.
3. Always keep the base of the unit dry.

## SAFETY PRECAUTIONS

1. Keep the unit away from any flammable materials.
2. Position the unit on flat surface.
3. Do not place the unit close to walls and glass windows.
4. Ensure grounding of the earth wires in order to prevent electrical shocks and other personal injuries.

# C O N T E N T S

**4** Parts Identification

**4** How To Detach And Attach The Top Cover

**5** Refilling Water

**5** Boiling Water

**5** Keep Warm Function

**6** Boiling Function

 
**6** Maintenance

**6** Safety Precautions

**7** Cleaning And Maintenance


**7** CAUTION

## PARTS IDENTIFICATION

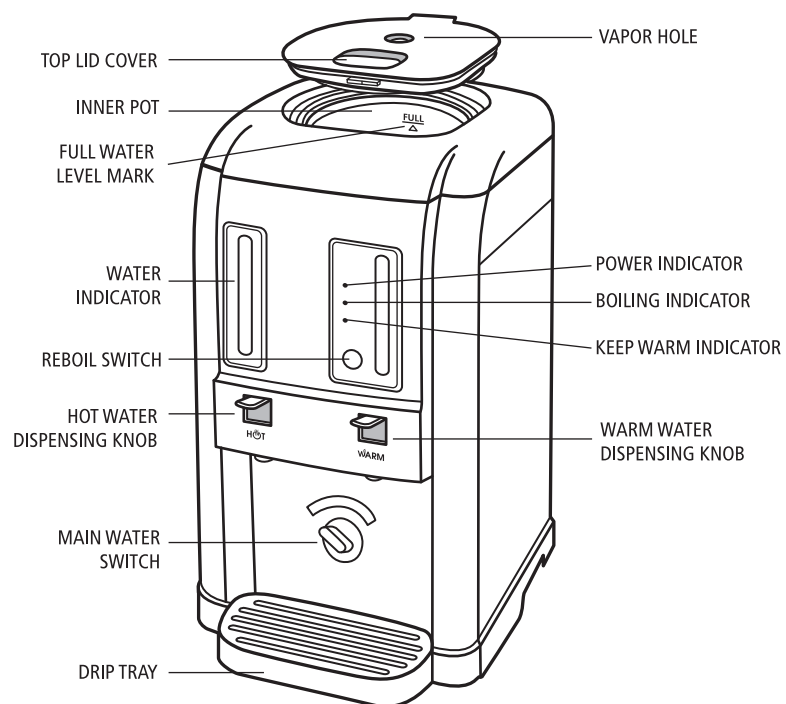


## HOW TO DETACH AND ATTACH THE TOP COVER

 1. Open the top cover to about 30 degrees, pull forward and lift upwards.
2. Insert the cover into joint grooves to attach the cover.

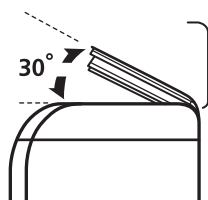


## REFILLING WATER

1. When water is being refilled, make sure to turn the main water switch to the left to separate the unboiled water from the boiled.
2. Do not refill water above the full water mark.
3. To prevent electrical shock or damage to the unit, ensure the exterior is always dry.
4. Secure the hood by closing it tightly but do not use force to avoid damaging the unit.

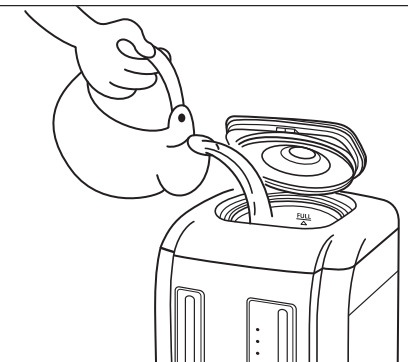

## BOILING WATER

1. Plug in to power supply and start boiling.
2. During boiling, avoid opening the top cover. Escaping hot steam may cause severe injuries.
3. Do not add any water to tank during boiling.

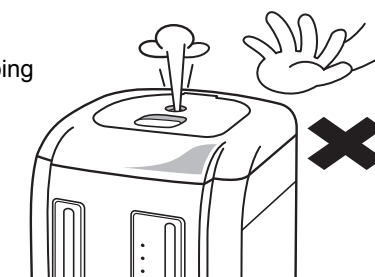

## KEEP WARM FUNCTION

1. After boiling, it will automatically keep water warm in Keep Warm function. The "keep warm" indicator will illuminate.
2. NOTE: For first time use, it will take about a minute to supply warm water.
3. WARNING: Always refill water if water level falls below the minimum water indicator line.
4. WARNING: Exercise caution when opening the top cover. Escaping hot steam may cause severe personal injuries.
5. Before refilling water, turn the main water switch to refill water position.
6. After refilling water, the auto-boil function will automatically initiate.

## CLEANING AND MAINTENANCE

1. Wash the inner pot with warm soapy water using a sponge or dish cloth.
2. Wipe the exterior unit with a damp cloth.
3. Due to impurities in water, the inner pot may change colour after using several times.
4. Clean the container with a sponge and rinse with warm water using the following:
  - Cut 2 to 4 lemon slices and squeeze juice into the inner pot.
  - Fill the remainder of the tank with water till it reaches the full mark.
  - Plug in the unit and let the lemon mixture sit for at least 2 hours.
  - Discard the remaining water and clean the tank with sponge before rinsing.
5. CAUTION: Do not use abrasive cleansers or scouring pads.

<b>POWER</b>	<b>220-240V~ 50/60Hz, 680W</b>
<b>KEEP WARM</b>	<b>70W</b>
<b>FUSE TEMPERATURE</b>	<b>133°C</b>
<b>LENGTH OF WARE CABLE</b>	<b>1.8M</b>

## CAUTION

1. Always keep the appliance out of reach of children.
2. Never obstruct the steam vent during operation.
3. The water dispenser is intended for use with water only. Never put ice, soup, milk, tea to boil.

**NOTE:** Pictures and illustrations shown may be different from the actual product. Specifications are subject to change without prior notice.