 


 **Mórgan®**

 
USER MANUAL

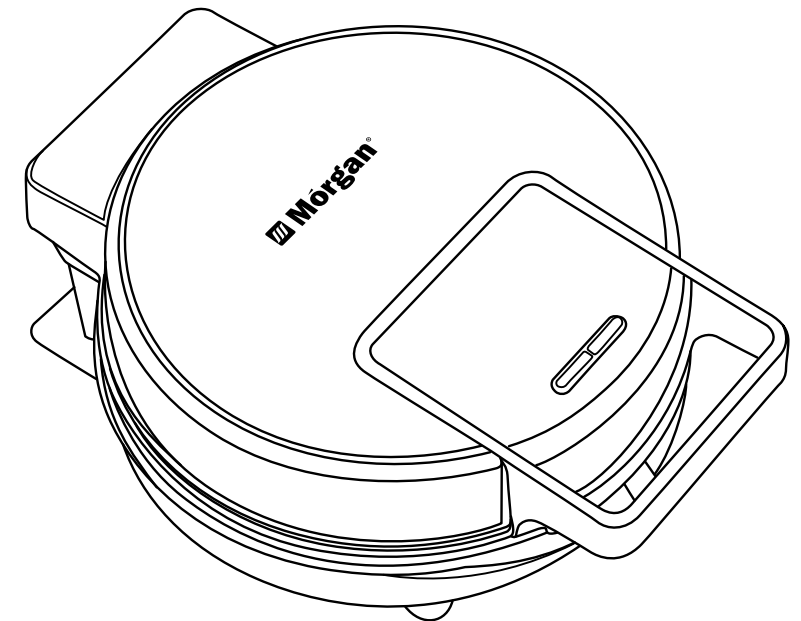

Cupcake Maker

MDM-B382

 **Mórgan®**

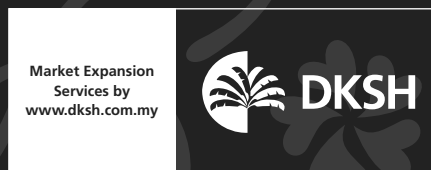

E-mail: electrical.appliance@dksh.com
www.morgan.my

 facebook.com/morganappliances

C O N T E N T S

3 Important Safeguards

4 Parts Identification

4 Specifications

5 Operation Instructions

6 Care & Cleaning

Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new product. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be adhered to, including the following:

 
- Read all instructions carefully and retain them for future reference.
- Before connecting to the power supply, ensure that the unit is earthed and its voltage corresponds to the voltage indicated on the power supply rating label.
- This appliance is intended for household use only and connected to an AC 220-240V power supply.
- Children should be supervised to ensure that they do not play with the appliance.
- **CAUTION:** Do not touch hot surfaces. Use handle or knobs.
- To protect against the risk of electric shock, do not immerse power cord, power plug or unit in water or any other liquids.
- **IMPORTANT:** The appliance must always be positioned horizontally during use.
- Unplug from power supply when not in use and before cleaning. Allow to cool completely before assembling/disassembling parts, and before cleaning appliance.
- Do not operate any appliance with a damaged power cord, or when appliance has malfunctioned or damaged in any manner. To avoid the risk of an electric shock, never modify / repair the appliance yourself. Contact an authorized service personnel examination and repair.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
- This appliance is not intended for outdoor or commercial applications.
- Do not allow power cord to hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or heated oven.
- Disconnect appliance from the power supply after every use.
- Do not use appliance for other than its intended use.
- Do not use the unit near gas or other inflammable materials (such as benzene, paint thinner, sprays, etc.)
- Ensure the appliance is does not touch flammable materials such as curtains, draperies, walls, and the like during operation to avoid a possible fire hazard.
- Warning: Do not use this appliance near water sources to avoid the risk of shock circuit.
- Do not leave the appliance unattended when switched on.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge provided they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

IMPORTANT SAFEGUARDS

- Children should be prohibited from playing with the appliance. Do not allow children to perform cleaning and user maintenance service unless they are older than 8 and supervised.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **CAUTION: HOT SURFACE!** The temperature of accessible surfaces may be high when the appliance is operating.

PARTS IDENTIFICATION

1. Upper Housing
2. Power Indicator
3. Ready Indicator
4. Bottom Housing
5. Heating Plate
6. Power cover

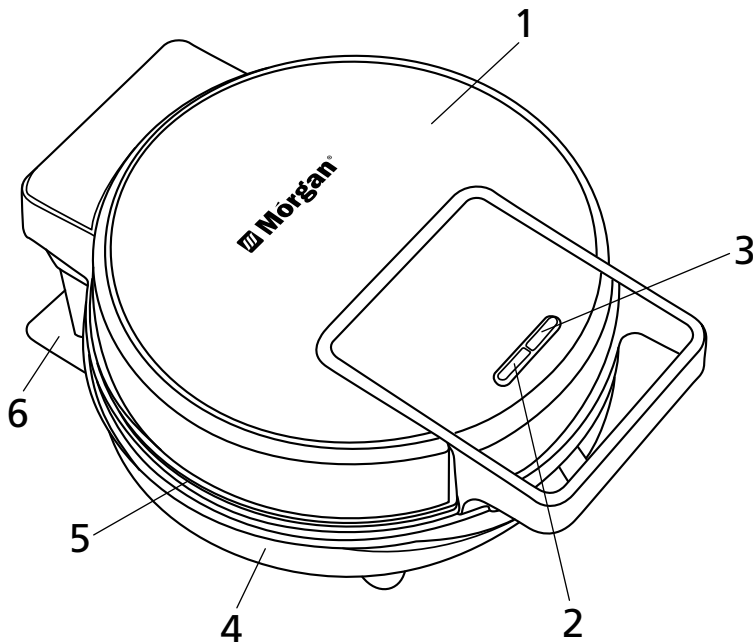

SPECIFICATIONS

Model	MDM-B382
Rated Voltage / Frequency	220-240V~ 50-60Hz
Rated Wattage	1200W

OPERATION INSTRUCTIONS

BEFORE FIRST USE

- Before using the appliance for the first time, detach any promotional materials and stickers.
- Ensure that the cooking plates are clean and free of dust.
- If necessary, wipe over with a damp cloth.
- For best results, pour a teaspoon of vegetable oil on to the non-stick plates. Spread over with an absorbent kitchen towel and wipe off any excess oil.

DURING FIRST USE

When heated for the first time, the appliance may emit a slight smoke or odor. This is normal with many heating appliances and does not affect the safety of your appliance.

- Connect the power plug into the power supply. The Power indicator will illuminate, indicating that preheating has begun.
- Allow the appliance to pre-heat until the ready indicator goes off, indicating that the cooking plates have reached the correct temperature for cooking.
- For best results, lightly spray the cooking plates with a cooking oil spray before using to assist in the removal of cupcake after cooking.
- Divide mixture into pan holes as per recipes using a jug & spoon or fabric piping bag.
NOTE: Do not use disposable plastic piping bags as these may melt on contact with hot plates.
- Gently close the lid. Do not slam the lid down as it may cause the mixture to run off the cooking plates.
- Allow to cook for approximately 5-8 minutes or until golden brown.
- Always use a plastic or wooden spatula to remove the cupcake. Never use a sharp object or metal, as this will damage the non-stick surface of cooking plates.

CARE & CLEANING

- Always disconnect the power plug from the power supply before cleaning.
- The cooking plates are coated with non-stick cooking surface, therefore little cleaning is required. Simply wipe cooking plates over with a damp cloth.
- Do not immerse the appliance in water or any other liquids.
- Do not use liquid or powder detergent or oven cleaners on the heating plates. To clean handles and other parts, use a damp cloth with mild soap and towel
- Do not place into the dishwasher.
- Before next use, lightly grease the cooking plates for easy removal of cooked cupcake.
- Pour a little cooking oil onto the heating plates to remove stubborn food residues and wipe off after 5 minutes, when the filling has softened.
- CAUTION: DO NOT IMMERSE IN WATER

STORAGE

- Always disconnect the appliance from the power supply before storage.
- Ensure the appliance is cool and dry before storage.



ENVIRONMENT-FRIENDLY DISPOSAL

- Meaning of crossed – out wheeled dustbin:
- Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.
- Contact your local government for information regarding the collection systems available.
- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
- When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.