 


 **Mórgan®**


USER MANUAL

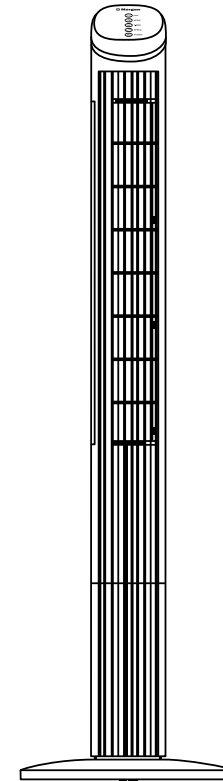

Tower Fan

MFT-50R

 **Mórgan®**

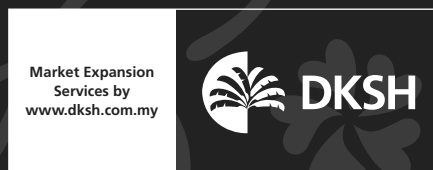

E-mail: electrical.appliance@dksh.com
www.morgan.my

 facebook.com/morganappliances

Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new product. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be adhered to, including the following:

- Read all instructions carefully and retain them for future reference.
- Before connecting to the power supply, ensure that the unit is earthed and its voltage corresponds to the voltage indicated on the power supply rating label.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This product is intended for DOMESTIC USE ONLY and not intended for industrial or commercial use.
- In the event of improper use or operation due to negligence or otherwise; the manufacturer will not accept any liability for resulting damages.
- **WARNING:** The use of accessories and components not expressly recommended by the manufacturer may result in injuries or damages and will void the warranty.
- If the power cord is damaged, it must be replaced by an authorized service centre.
- Never leave the device operating unattended without supervision.
- Do not place heavy objects on top of the appliance.
- Never immerse the appliance, power cord, power plug or any electrical parts of this appliance in water or any other liquids during cleaning or operation.
- Do not, under any circumstances, attempt to modify or repair the appliance yourself. For servicing and repairs, please consult an authorised dealer or qualified customer service centre personnel.
- Do not operate this appliance with an external clock timer or separate remote-control system.
- Ensure to place the appliance on a flat, sturdy and heat-resistant surface.
- Do not operate this appliance near curtains, textiles, walls and other flammable materials. Ensure a sufficient safe distance from flammable materials.
- Keep this appliance away from all heat sources such as ovens, hot plates and other heated appliances/objects.
- Ensure a distance of 30 cm / 1 feet from other objects, as they can strongly influence its operation.
- Never cover or obstruct the air outlets during operation.


IMPORTANT SAFEGUARDS

- Use this appliance in dry indoor areas only. Do not operate outdoors.
- **WARNING:** Do not operate this appliance near windows or where water collects, or other water sources such as damp basement, beside a swimming pool or bathtub to prevent the risk of fire or electric shock.
- Do not expose this appliance to extreme heat and temperatures over 35°C / 95°F) and cold (under 5°C / 41°F) as well as from direct sunlight and dust.
- Ensure the appliance is standing upright during operation.
- Ensure there are no objects nearby the fan which can obstruct proper oscillation.
- **WARNING:** Never insert fingers, pencils or other objects into the appliance during operation.
- To protect against the risk of electrical shock, do not immerse the appliance, power cord or power plug into water or any other liquids. If the power plug does not fit fully into the power supply outlet, reverse the power plug. Contact a qualified technician if it still does not fit.
- **IMPORTANT:** Unplug or disconnect the appliance from the power supply before servicing.
- Do not leave the appliance unattended. Always unplug it from the power supply when not in use.
- Do not pull on the power cord to disconnect. Always grasp on the power plug to detach it from the power supply.
- **WARNING:** Do not operate the appliance with a damaged power cord or power plug, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Please return it to the nearest authorized dealer or after-sales service centre for examinations, repairs, electrical or mechanical adjustments.


Warning - chemical burn and choking hazard. Keep batteries away from children

- This appliance contains a lithium button/coin cell battery "CR2032" in the remote-control unit that should be kept away from young children's reach. Seek immediate medical attention if you suspect batteries might have been swallowed or placed inside any part of the body.
- Do not install the batteries in reverse or short circuit them.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Follow the battery manufacturer's instructions when installing new batteries.
- Dispose used batteries properly, including keeping them away from children as even used battery cells may cause injury.

PARTS IDENTIFICATION

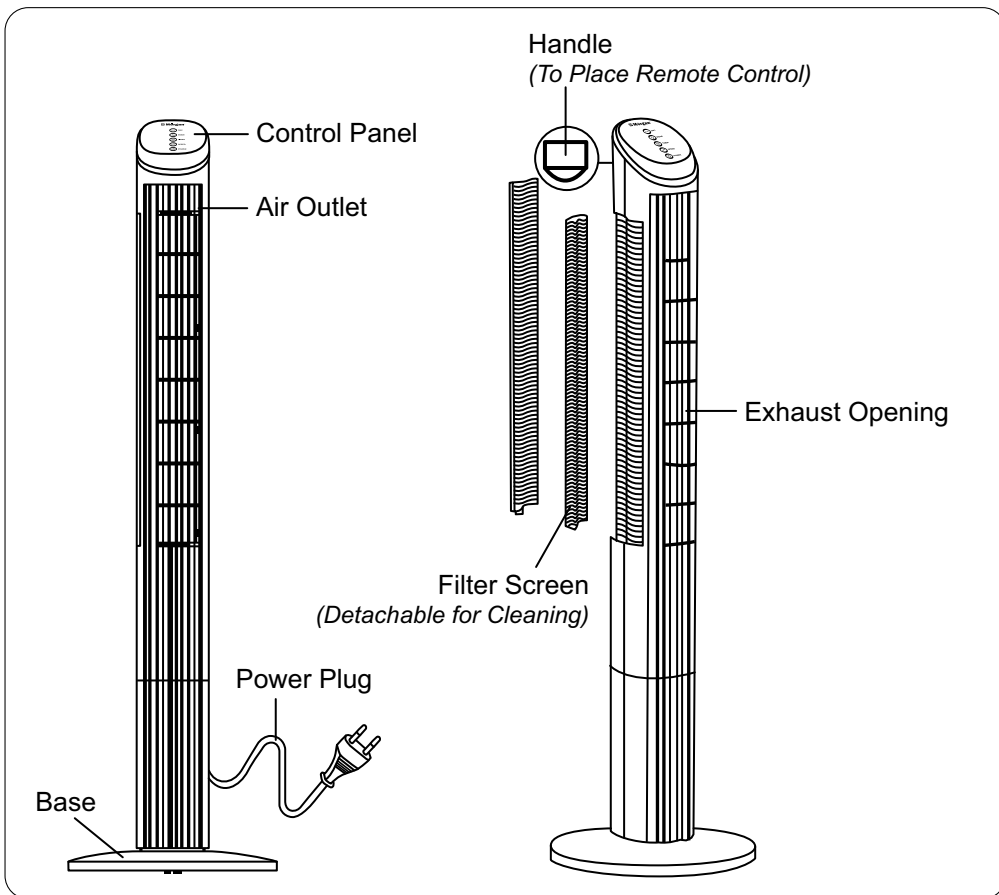


ASSEMBLY INSTRUCTIONS

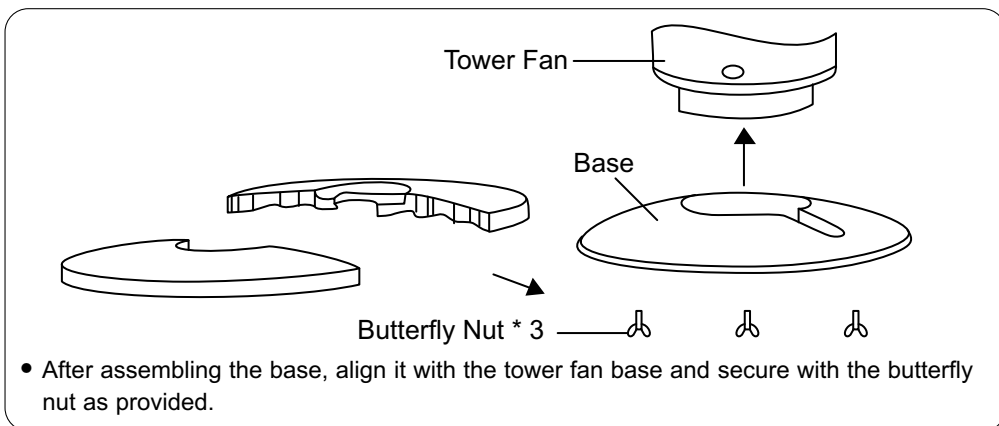


OPERATING INSTRUCTIONS

Control Panel

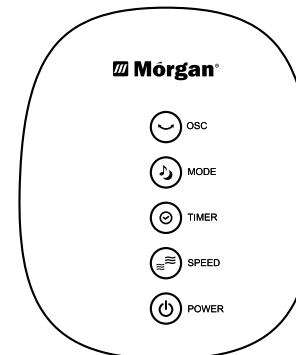

Remote Control

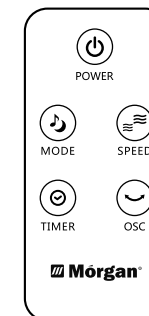

- This tower fan can be operated by the control panel or remote control. Please refer to the below diagrams for descriptions.

POWER

- Press the Power button once and the fan will begin operation. Press again to power off.

SPEED

- The default speed setting upon start-up is "Low". Press once for "Medium" speed and twice for "High" speed. Press three times to return to "Low" speed.

TIMER

- During operation, you can set the timer to power off the appliance. Press the timer button and the default time is 1 hour. Press the timer button continuously to set timer off function from 1 to 7 hours.

MODE

Choose from **NORMAL**, **NATURAL** or **SLEEP** modes.

- **USUAL** mode will operate the fan at selected speeds - from high, medium or low.
- **NATURAL** and **SLEEP** modes operate according to the computer's speed intervals.
- **OSC** Press once to oscillate the fan. Press again to stop oscillation.

CLEANING & MAINTENANCE

Over time, dust can accumulate on the fan grille, which can affect the appliance's performance. It is recommended to clean the fan at least once a month. Please follow the steps below:

- Turn the unit OFF and disconnect the appliance from the power supply.
- Remove any dust build-up using a soft brush.
- Wipe the surface of the unit with a soft damp cloth. Mild detergent can be used for any stubborn marks.
- We recommend using a pipe cleaner, flexible dust wand, vacuum cleaner or compressed air to clean between the grilles and remove any dust.
- Do not immerse the motor in water or any other liquids. Never allow water to drip into the motor housing.
- Do not use gasoline, paint thinner or other abrasive chemical cleaning agents to clean the appliance.

STORAGE

If not using the unit for an extended period of time. After cleaning please:

- Power the appliance off and disconnect from the power supply
- **Cover the appliance and store it upright in a location where it will not receive direct sunlight.**

NOTE: Prolonged exposure to direct sunlight will discolour the finishing.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	SOLUTIONS
Appliance unable to power on	<ul style="list-style-type: none"> • Ensure power plug is connected into power supply 	<ul style="list-style-type: none"> • Detach power plug from power supply, connect and power on again.
Vibration during operation	<ul style="list-style-type: none"> • Ensure appliance is placed on a level, stable surface. 	<ul style="list-style-type: none"> • Position appliance on a level and stable surface.
	<ul style="list-style-type: none"> • Ensure no foreign objects are inserted into the air outlet 	<ul style="list-style-type: none"> • Remove any foreign objects.
Control panel not working	<ul style="list-style-type: none"> • Check if water or other foreign matter covering the control panel. 	<ul style="list-style-type: none"> • Wipe with soft cloth.
	<ul style="list-style-type: none"> • Touching the control panel while wearing gloves? 	<ul style="list-style-type: none"> • Remove gloves and touch directly with bare fingers.
	<ul style="list-style-type: none"> • Touching the control panel with wet fingers? 	<ul style="list-style-type: none"> • Ensure hands are thoroughly dry before touching control panel.
Remote control not working	<ul style="list-style-type: none"> • Check whether battery is empty. 	<ul style="list-style-type: none"> • Replace with new batteries.
	<ul style="list-style-type: none"> • Check whether battery is inserted in the proper direction. 	<ul style="list-style-type: none"> • Remove and reinsert batteries into their proper directions.
Weak fan operation	<ul style="list-style-type: none"> • Check whether dust has accumulated on the air outlets. 	<ul style="list-style-type: none"> • Clean the air outlet with a vacuum cleaner & use a soft cloth to wipe away excess dust.

SPECIFICATIONS

Model	MFT-50R
Rated Voltage / Frequency	220-240V~ 50-60Hz
Rated Wattage	50W
Timer	1H – 7H