 
 




USER MANUAL

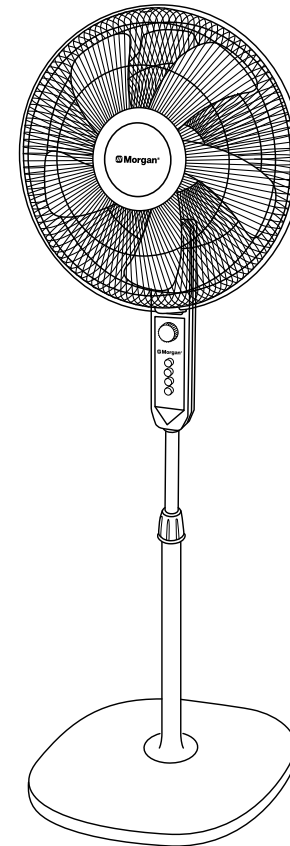

16" Stand Fan

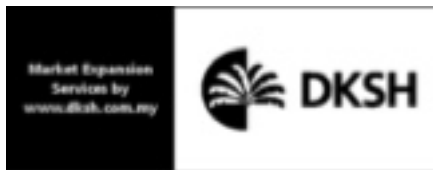

E-mail: electrical.appliance@dksh.com
www.morgan.my

facebook.com/morganappliances

MSF-16P5

C O N T E N T S

3	Important Safeguards
4	Parts Identification
4	Specifications
5	Assembly & Installation
6	Operating Instructions
7	Care and Cleaning

 
Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new product. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be adhered to, including the following:

- Read all instructions carefully and retain them for future reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged power cord or power plug or after the appliance malfunctions, or has been dropped or damaged in any manner. If the power cord is damaged, it must be replaced by the Service Centre to avoid a hazard.
- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of re, electric shock, and/or injury.
- Do not immerse appliance, power cord or power plug into water or other liquids.
- Disconnect appliance from the power supply when not in use, and before cleaning.
- Do not disconnect the appliance from the power supply by pulling on the power cord as this may result in electric shock and/or damage the appliance.
- Use the original accessories recommended by the manufacturer, as other non-recommended accessories may cause electric shock or injury.
- Never insert fingers, pencils or any other objects through the fan guards when the fan is in operation.
- Disconnect the appliance from the power supply when moving it from one location to another.
- Do not use the appliance near the window, as rainwater or moisture may result in an electrical hazard.
- The appliance is intended for household and indoor use only.
- Note: The fan guard is non-removable for cleaning purposes.
- **WARNING:** Never attempt to modify this product in any way to avoid a hazard.

PARTS IDENTIFICATION

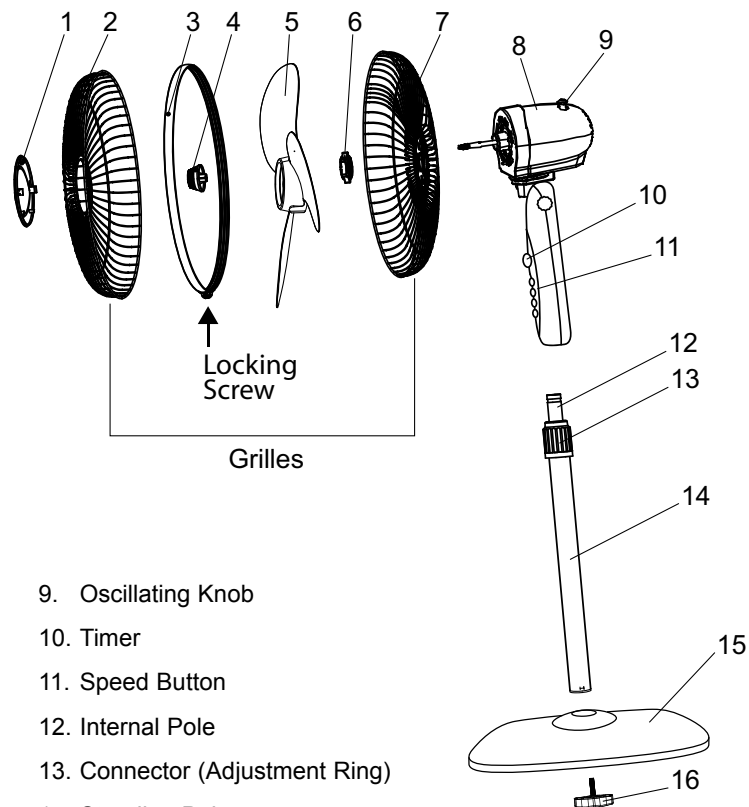




- | | |
|----------------|---------------------------------|
| 1. Center Ring | 9. Oscillating Knob |
| 2. Front Guard | 10. Timer |
| 3. Guard Ring | 11. Speed Button |
| 4. Blade Knob | 12. Internal Pole |
| 5. Blade | 13. Connector (Adjustment Ring) |
| 6. Guard Nut | 14. Standing Pole |
| 7. Rear Guard | 15. Base |
| 8. Motor | 16. Plastic Nut |

SPECIFICATIONS

Model	MSF-16P5
Rated Voltage / Frequency	220-240V~ 50Hz
Rated Wattage	50W
Size	40cm




ASSEMBLY & INSTALLATION

- Open the product packaging and inspect the parts by referring to the PARTS IDENTIFICATION illustration.
- Insert the standing pole into the base and fasten the plastic nut (See Fig. 1).
- Loosen the connector and adjust the internal pole to the desired height.
- Note: The internal pole is detachable and slides inside the standing pole (See Fig. 2).
- Loosen the thumb screw on the back of the fan body and attach it to the internal pole.
- Fasten the thumb screw, aligning it with the groove on the internal pole (See Fig. 3).

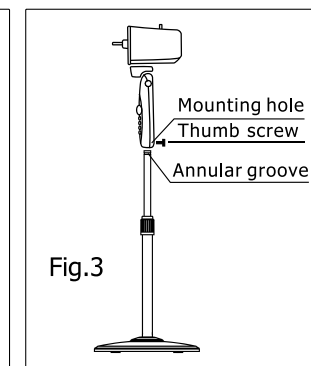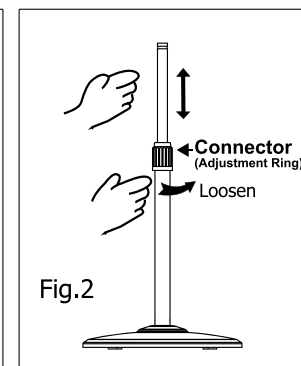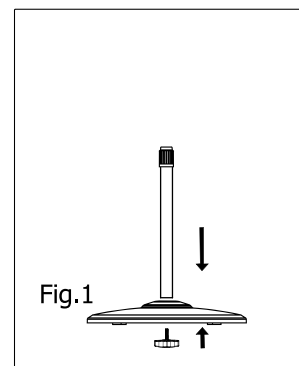

BLADE AND GUARD ASSEMBLY



- Remove the spinner and the plastic nut from the front of the motor.
- Fix the rear grill to the motor then tighten the plastic nut again (See Fig. 5).
- Discard PVC sleeve on shaft and insert the blade into shaft, ensuring the stopper pin is fitted into the blade groove. Turn the spinner anti-clockwise to tighten the blade (See Fig.6).
- Fix both grilles with Guard Ring (Part #3). Use a screwdriver to tighten the locking screw (See Fig.7).

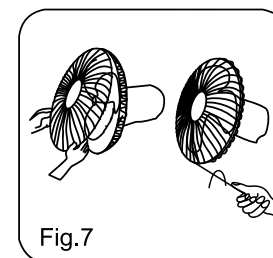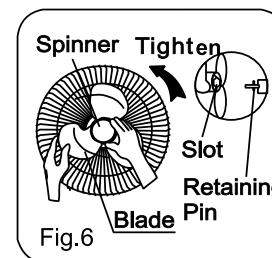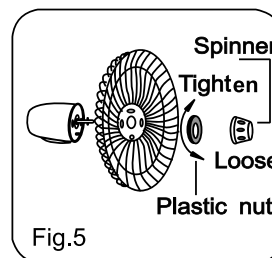

OPERATING INSTRUCTIONS

Speed is controlled by pressing the buttons of the speed regulator: 0---Stop 1--- Low Speed 2--- Medium Speed 3--- High Speed

- Turn the time switch knob to the right and set the timer.
- The timer will be deactivated within 120 minutes. If timer is not used, set the time switch to "ON".
- To activate/deactivate fan head oscillation, push down/pull up the clutch knob.
- Airflow can be adjusted upwards or downwards by loosening the tilt adjustment knob and by adjusting the vertical angle as desired.
- Tighten the knob to secure.
- To adjust fan height, loosen the Adjustment Ring by raising or lowering the internal pole, and tightening the Adjustment Ring to secure the fan (See Fig. 2).

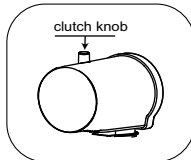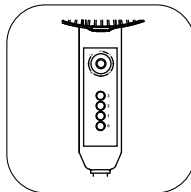

CARE & CLEANING

- This appliance requires minimal maintenance.

NOTE: Do not attempt to modify the fan specifications yourself.

- Disconnect power plug from the power supply before cleaning and assembling/disassembling.
- Regular cleaning is required to ensure the motor housing and air vents at the rear is free from dirt and dust. This ensures optimal air circulation during operation.
- Disconnect power plug from the power supply before using a vacuum cleaner to clean the air vents.
- Do not disassemble the appliance.
- Wipe exterior parts with a soft cloth soaked in mild detergent and dry with a clean cloth.
- Do not use any abrasive detergent or solvents which may damage the finishing.
- Do not use any of followings as cleaning agent: gasoline, thinner, benzene.
- Do not spray water or any other liquids into the motor housing or interior parts.