




USER MANUAL

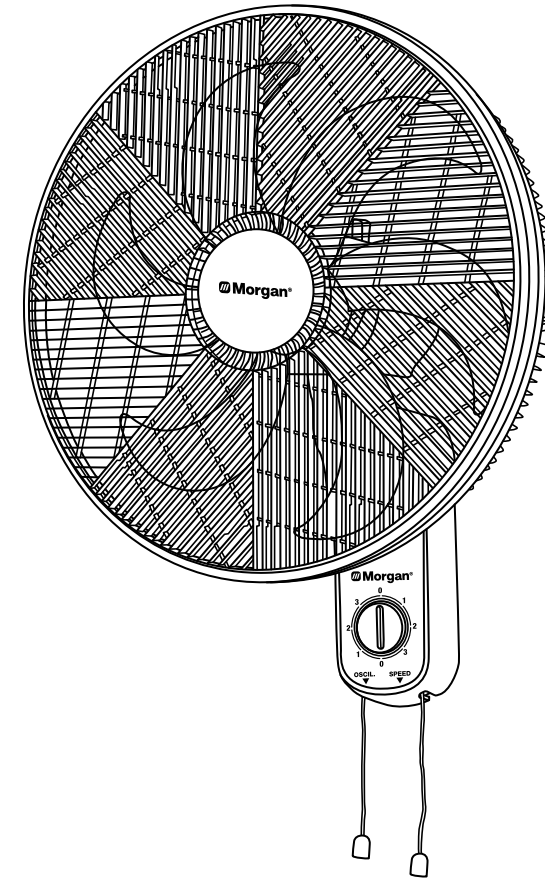

18" Wall Fan

MWF-180M

Market Expansion
Services by
www.dksh.com.my



DKSH

E-mail: electrical.appliance@dksh.com
www.morgan.my

facebook.com/morganappliances



ASSEMBLY

ASSEMBLE THE WALL BRACKET

- Drill 3 holes on the wall with a distance aligning with the hole on the wall bracket as shown in figure 1.
- Press the provided plastic insert into the holes.
- Mount the wall bracket on the wall using the three screws provided.
- Hang the fan body with motor onto the wall bracket as shown in figure 2.

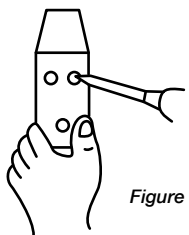


Figure 1

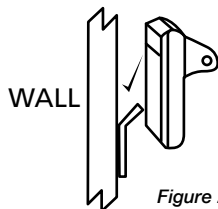


Figure 2

FAN BLADE & FAN GUARD ASSEMBLY

- Turn the locking nut anti-clockwise to loosen it from the motor housing.
- Position rear guard firmly to motor housing and then fasten by turning locking nut clockwise tightly.
- Push the fan blade along motor shaft. The groove in the centre of the fan blade aligns with a T-bar on the motor spindle to ensure correct positioning.
- Attach the fan blade onto the motor shaft with fan blade knob by turning anti-clockwise.
- Attach and clip the front grill on the rear grill and close the bottom clip with the safety screw provided as shown in figure 3.

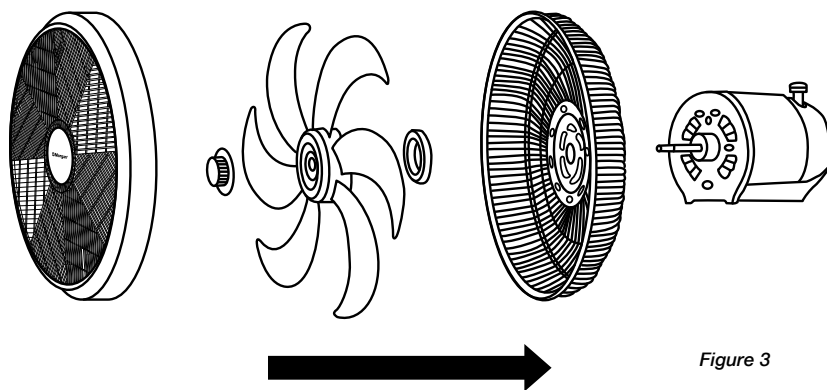


Figure 3

Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new appliance. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

IMPORTANT SAFEGUARDS


When using electric appliances, basic safety precautions should always be adhered to, including the following:

- Read all instructions carefully and retain them for future reference.
- Always operate the appliance from a power supply outlet of the same voltage, frequency and rating as indicated on the appliance identification plate.
- Inspect the power cord for any signs of damage, and have it replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Ensure children do not play with the appliance or perform cleaning and user maintenance without adult supervision.
- Do not use this appliance with any solid-state speed control device to reduce the risk of electric shock.
- Do not leave the appliance operating unattended.
- Do not operate the appliance if it is dropped, damaged or showing signs of malfunction. Do not operate the appliance with a damaged power plug or power cord. Return the complete appliance to the place of purchase for inspection, refund or replacement.
- If the appliance is not working properly, contact a qualified electrician or service centre for examination and repair, never try to dismantle it yourself.
- Do not immerse or expose the appliance or power cord to rain, moisture or any liquids.
- This appliance should not be used near water sources, such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
- The appliance is to be installed so that the blades are more than 2.3m above the floor level.
- Never install the unit where it could be subject to:
 - Heat sources such as radiators, heat registers, stoves or other heat-generating appliances.
 - Direct sunlight
 - Mechanical vibration or shock
 - Excessive dust
 - Lack of ventilation, such as a cabinet or bookcase
 - Uneven surface

IMPORTANT SAFEGUARDS

- Switch off and disconnect from the power supply outlet when the appliance is not in use, before parts assembly or disassembly, and before cleaning. Fully assemble the fan before switching on.
- Avoid contact with moving parts. Do not insert any body parts (e.g. finger) or objects through the grill when the fan is operating.
- Do not cover the grille, or operate in close proximity to curtains, etc.
- This appliance is intended for normal domestic/household use only.
- Always disconnect the appliance from the power supply when moving location.
- The use of attachments or accessories not recommended or sold by the appliance distributor may cause personal or property hazards or injuries.
- Ensure the appliance is located on a stable surface when operating to avoid overturning.
- READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

PARTS IDENTIFICATION

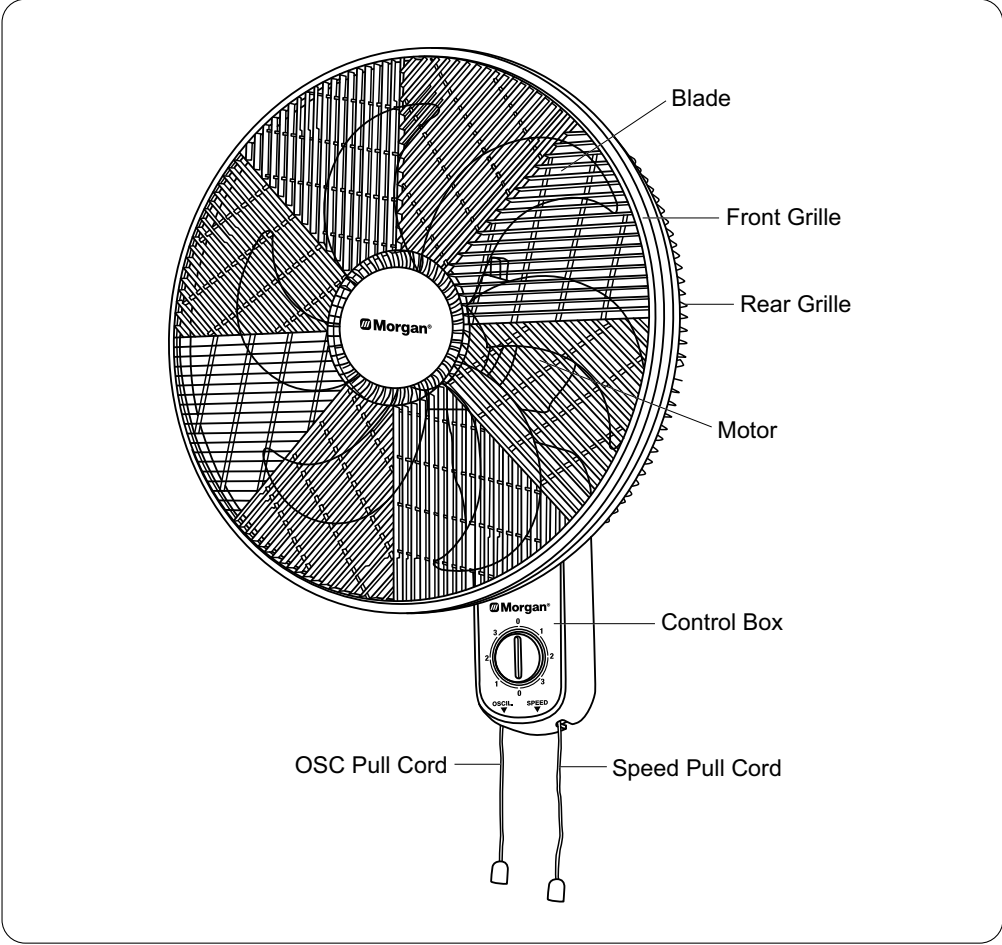

SPECIFICATIONS

MODEL NO.	MWF-180M
RATED VOLTAGE	220-240V~
FREQUENCY	50/60Hz
RATED WATTAGE	80W
SIZE	46CM

C O N T E N T S

3 Important Safeguards

5 Parts Identification

5 Specifications

5 Assembly

7 Operating Instructions

7 Care and Cleaning

OPERATING INSTRUCTIONS

1. This appliance features 3 speed settings which can be adjusted by tugging on the Speed pull cord on the right.


- 0 → for fan off
- 1 → lowest speed
- 2 → medium speed
- 3 → highest speed

2. Oscillation Adjustment

Pull on the OSC pull cord on the left to enable and control the fan head oscillation.

3. Angle Adjustment

Power off the fan. Slightly loosen the Adjustment Screw by turning it anti-clockwise. Adjust the fan to the desired angle and then tighten the Adjustment Screw by turning it clockwise.

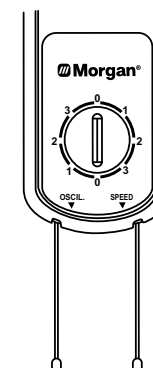

CARE & CLEANING

- Power off and unplug power cord from the power supply before assembling or disassembling and cleaning.
- Keep air vents at the rear of the main body free from dust or fluff by using a vacuum cleaner.
- Fan component parts should be cleaned using mild soap and a damp cloth or sponge. Do not allow any water or other liquid to enter the motor housing during cleaning.
- Thoroughly remove soap film with clean water.

CAUTION: Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the fan components.