

 **Mórgan[®]**

USER MANUAL



Rice Cooker

MRC-2318J
MRC-2310J

 **Mórgan[®]**

Market Expansion
Services by
www.dksh.com.my



DKSH

E-mail: electrical.appliance@dksh.com
www.morgan.my

 facebook.com/morganappliances

OPERATING INSTRUCTIONS

IMPORTANT

- Always inspect appliance to ensure that it is in proper operating condition.
- Before connecting to the power supply, ensure that the exterior of the inner pot is dry and clean, with no foreign object stuck on the heating plate or the magnetic switch.
- Close the lid firmly until a click is heard to ensure optimum operation.
- Connect to the power supply.

COOKING RICE

1. Connect the power cord to the rice cooker first before inserting the power plug into the power supply.
2. Press the control switch to begin cooking.
 - To begin the rice cooking process press down the control switch.
 - The cook mode light will stay on to indicate that rice cooking is in progress.

KEEP WARM

When cooking process is finished, the cook mode light will disappear, and the Warm mode light will illuminate automatically.

STIR THE RICE

For best results, open the lid 15 minutes after the Warm mode light illuminates and stir the rice to allow excessive water to escape. Then close the lid firmly to continue the keep warm function.

STEAMING

Your rice cooker can steam a variety of foods such as vegetables, fish, and even potatoes.

- Fill the steamer attachment with desired food for steaming.
- Fill the rice cooker half way with room temperature water.
- Set the steamer onto the rice cooker.
- Cover with lid.
- Press the control switch to "cook". The indicator light will illuminate.

NOTE: Be careful of escaping hot steam when removing the lid.


POWER OFF

Detach the power cord from the power supply to power off the keep warm function.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. COOK ONLY IN REMOVABLE CONTAINER.

Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new product. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

PARTS IDENTIFICATION

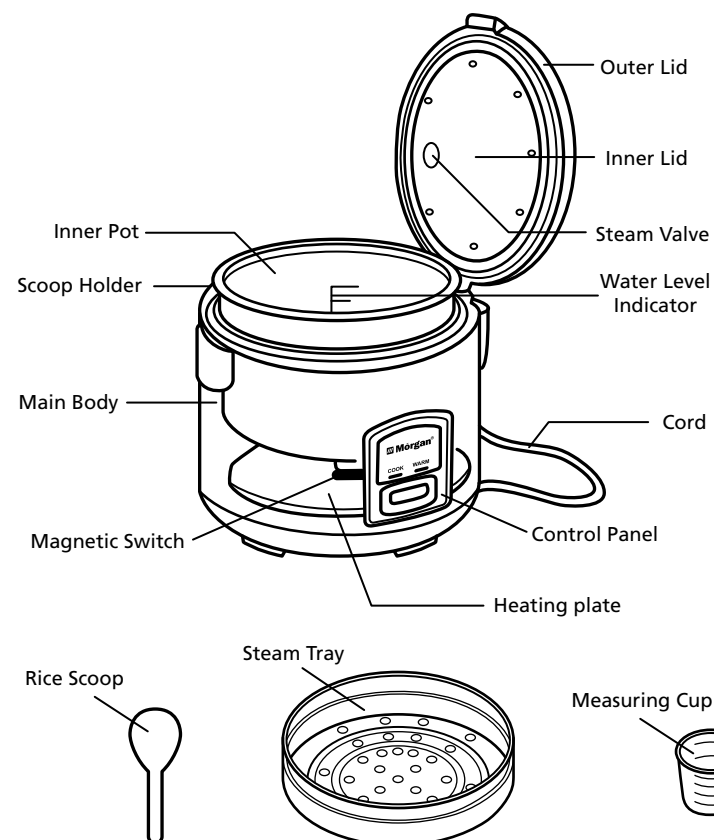

SPECIFICATIONS

MODEL NO.	MRC-2318J	MRC-2310J
RATED VOLTAGE	220-240V~	
FREQUENCY	50/60HZ	
RATED WATTAGE	700W	400W
CAPACITY	1.8L	1.0L

IMPORTANT SAFEGUARDS

When using this appliance, basic precautions should always be followed, including the following:

1. Read all instructions carefully.
2. It is important to connect the appliance to a power supply that matches the voltage indicated on the rating plate found at the bottom of the appliance.
3. Ensure that the exterior of the inner pot heating plate and the magnetic switch are clean and dry before placing it into the rice cooker.
4. Do not switch on the appliance when the main body is empty.
5. Do not obstruct the steam vent hole with any article.
6. Do not place the inner pot directly over open flame for cooking.
7. The rice cooker can only be used for cooking rice and keeping warm. It is not suitable for other purposes such as boiling water or soup, cooking porridge or vegetables etc. In doing so will cause water to overflow, affecting the safe use of the appliance.
8. This rice cooker is intended for indoor commercial and industrial use, and not for outdoor use.
9. To protect against the risk of fire, electric shock and injury, do not immerse power cord, power plug or appliance in water or any other liquids.
10. This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. The current voltage which indicates on the plate must correspond to your local voltage.
12. For your safety, do not detach the power plug from the power supply with wet hands.
13. Do not forcibly yank on the power cord to detach the power plug from the power supply. Pull on the power plug instead.
14. Do not allow the power cord to hang over the edge of the table or counter or touch any hot surfaces.
15. Do not operate any appliance with a damaged power cord or power plug, or after the appliance malfunctions or has been damaged in any manner.
16. Detach the power plug from the power supply if the rice cooker is not used for some time.

BEFORE USING

Please read these instructions carefully before use and keep them for future reference.

- Measure Rice Volume using the measuring cup provided.
- Each cup of uncooked rice normally cooks for 2 bowls of cooked rice.
- Do not cook rice outside the quantity range indicated inside the pot as it will affect the appliance's performance.
- Washing the rice: Wash the rice gently and thoroughly. It is recommended to use a separate container during washing to avoid damaging the non-stick coating of the inner pot.
- Pour the washed rice into the inner pot. Add water according to the water level indicator marks inside the pot corresponding to the cups of uncooked rice that are poured, and then smooth the rice surface.
- The water level indicator marks inside the pot is just a guide. You can always adjust the water level for different types of rice and according to your personal preference.

C O N T E N T S

3	Parts Identification
3	Specifications
4	Important Safeguards
5	Before Using
6	Operating Instructions
7	Cleaning & Maintenance

CLEANING AND MAINTENANCE

- Before cleaning, unplug the appliance from the power supply and allow it to cool down completely.
- Detach and clean the inner lid, inner pot and dew collector after every use.
- Wipe the body with a sponge or soft, damp cloth.
- Do not use any abrasive cleansers, steel wool or metal utensils to clean the non-stick inner pot as they will damage the non-stick coating.
- Do not immerse the main body in water or any other liquids.
- Occasionally wipe the exterior surfaces with damp cloth.
- Do not allow the electrical components to contact with water.
- Always store the rice cooker in a low humidity environment.