

# **Mórgan®**


## USER MANUAL



# Rice Cooker

MRC-TC06NC

# **Mórgan®**

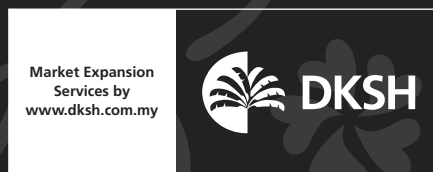

E-mail: [electrical.appliance@dksh.com](mailto:electrical.appliance@dksh.com)

[www.morgan.my](http://www.morgan.my)

 [facebook.com/morganappliances](https://facebook.com/morganappliances)

# C O N T E N T S

3 Important Safeguards

5 Parts Identification

5 Specifications

6 Before First Use

6 Care & Cleaning

7 Troubleshooting

Thank you for purchasing a quality MORGAN appliance. We trust that you will have a pleasant experience with your new product. To guarantee safety and best efficiency, please read this manual carefully and keep a copy for future reference.

## IMPORTANT SAFEGUARDS

**When using electric appliances, basic safety precautions should always be adhered to, including the following:**


- Read all instructions carefully and retain them for future reference.
- Before connecting to the power supply, ensure that the unit is earthed and its voltage corresponds to the voltage indicated on the power supply rating label.
- Only operate this appliance with a 220-240V AC power supply outlet.
- Use only on a level, dry and heat-resistant surface.
- Children should be supervised to ensure that they do not play with the appliance.
- **CAUTION:** Do not touch hot surfaces. Use handle or knobs.
- To protect against the risk of electric shock, do not immerse power cord, power plug or unit in water or any other liquids.
- Do not disassemble, repair or modify the appliance.
- Do not use when the power cord or the power plug is damaged or loose.
- Hold the power cord firmly to disconnect from the power supply. Do not forcibly yank the power cord to avoid damaging it.
- Do not break/scratch, bend, pull, or twist the power cord.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The use of accessories or attachments not recommended by the manufacturer may result in the risk of fire, electric shock or personal injuries.
- Do not cover the steam vent with cloth or any objects during operation.
- Do not operate the appliance near hot gas, electric burner or inside an electric oven.
- Ensure the appliance does not come into contact with flammable materials such as curtains, draperies, walls, and the like during operation to avoid a possible fire hazard.
- Do not allow the power cord to hang over table edge or counter, or touch hot surfaces.
- To disconnect, turn COOK switch to WARM and detach power plug from the power supply.
- Disconnect appliance from the power supply after every use.
- Do not use appliance for other than its intended use.
- Do not use the unit near gas or other inflammable materials (such as benzene, paint thinner, sprays, etc.)

## IMPORTANT SAFEGUARDS

- **WARNING:** Do not use this appliance near water sources to avoid the risk of shock circuit.
- This appliance should only be operated on a separate and dedicated power supply source.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not open the lid during operation.
- Always ensure inner pot is dry before operation to prevent malfunction or damage.
- Ensure rice is not left inside the inner pot with WARM function selected for over 12 hours.
- **IMPORTANT:** Cook only with the removable inner pot as provided.

### SHORT CORD INSTRUCTIONS

A short power cord is provided to reduce the risks resulting from it being entangled or tripped over a longer cord by children.

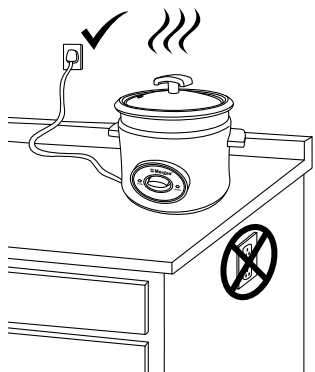

### WARNING

Spilled foods can cause serious burns.


#### NEVER

- Drape power cord over edge of counter.
- Use a power supply outlet below a counter.
- Use a power extension cord.

### POLARIZED POWER PLUG

- This appliance features a polarized plug (one blade wider than the other).
- To reduce the risk of electric shock, this power plug is intended to fit only one way into a polarized power supply outlet. If the power plug does not fully fit into the power supply outlet, reverse the plug. Contact a qualified technician if it still does not fit. Do not attempt to modify the power plug in any way yourself.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## PARTS IDENTIFICATION

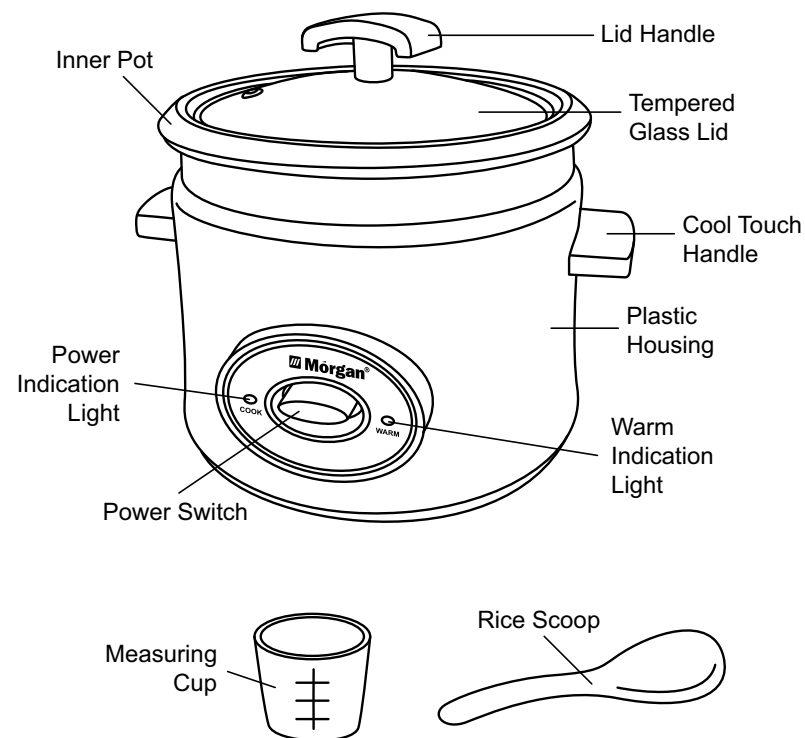

### CONTROLS / FUNCTIONS

**COOK:** Press the power switch down to begin cooking.

**WARM:** Automatically switches to WARM function after rice cooking completes. Perfect for keeping ready to serve rice.

## SPECIFICATIONS

<b>Model</b>	<b>MRC-TC06NS</b>
<b>Rated Voltage / Frequency</b>	<b>220-240V~ 50-60Hz</b>
<b>Rated Wattage</b>	<b>350W</b>
<b>Capacity</b>	<b>0.6L</b>

## BEFORE FIRST USE

1. Read all instructions and important safeguards carefully.
2. Remove all packaging materials and ensure all items have been accounted for.
3. Dispose of all plastic bags and wrappers properly as they can pose a risk to young children.
4. Remove inner pot from the cooker and clean with warm soapy water. Rinse and dry thoroughly before placing back into cooker.
5. Wash lid and all other accessories in warm, soapy water. Rinse and dry thoroughly.
6. Wipe cooker body with a clean and dry cloth.

## CARE & CLEANING

1. Remove inner pot after cooking and allow to cool down completely.
2. Wash the glass lid and accessories.
3. Wipe the appliance body with a clean and dry cloth.
4. Thoroughly dry appliance body, lid and accessories before reassembling for next use.

## TROUBLESHOOTING

PROBLEM	SOLUTION
Rice is too dry/hard after cooking	If rice is dry, hard or chewy when appliance switches to WARM, add additional water and cooking time to soften the rice. Depending on how dry the rice is, add 1/2 to 1 cup of water and stir thoroughly. Replace lid and select COOK. When appliance switches to WARM mode, remove lid and stir rice to inspect consistency. Repeat as necessary until rice is soft and moist.
Rice is too moist/soggy after cooking	If rice is moist and soggy after appliance switches to WARM, use the rice scoop to stir the rice. This will redistribute the bottom part (moistest) of the rice and release excess moisture. Replace lid and allow to remain on WARM mode for 10-30 minutes as required. Remove the lid and stir periodically to excess moisture.